


...turn the
...clockwise
...on the 0
...wise the
...be damaged.

...alarm duration 60 sec

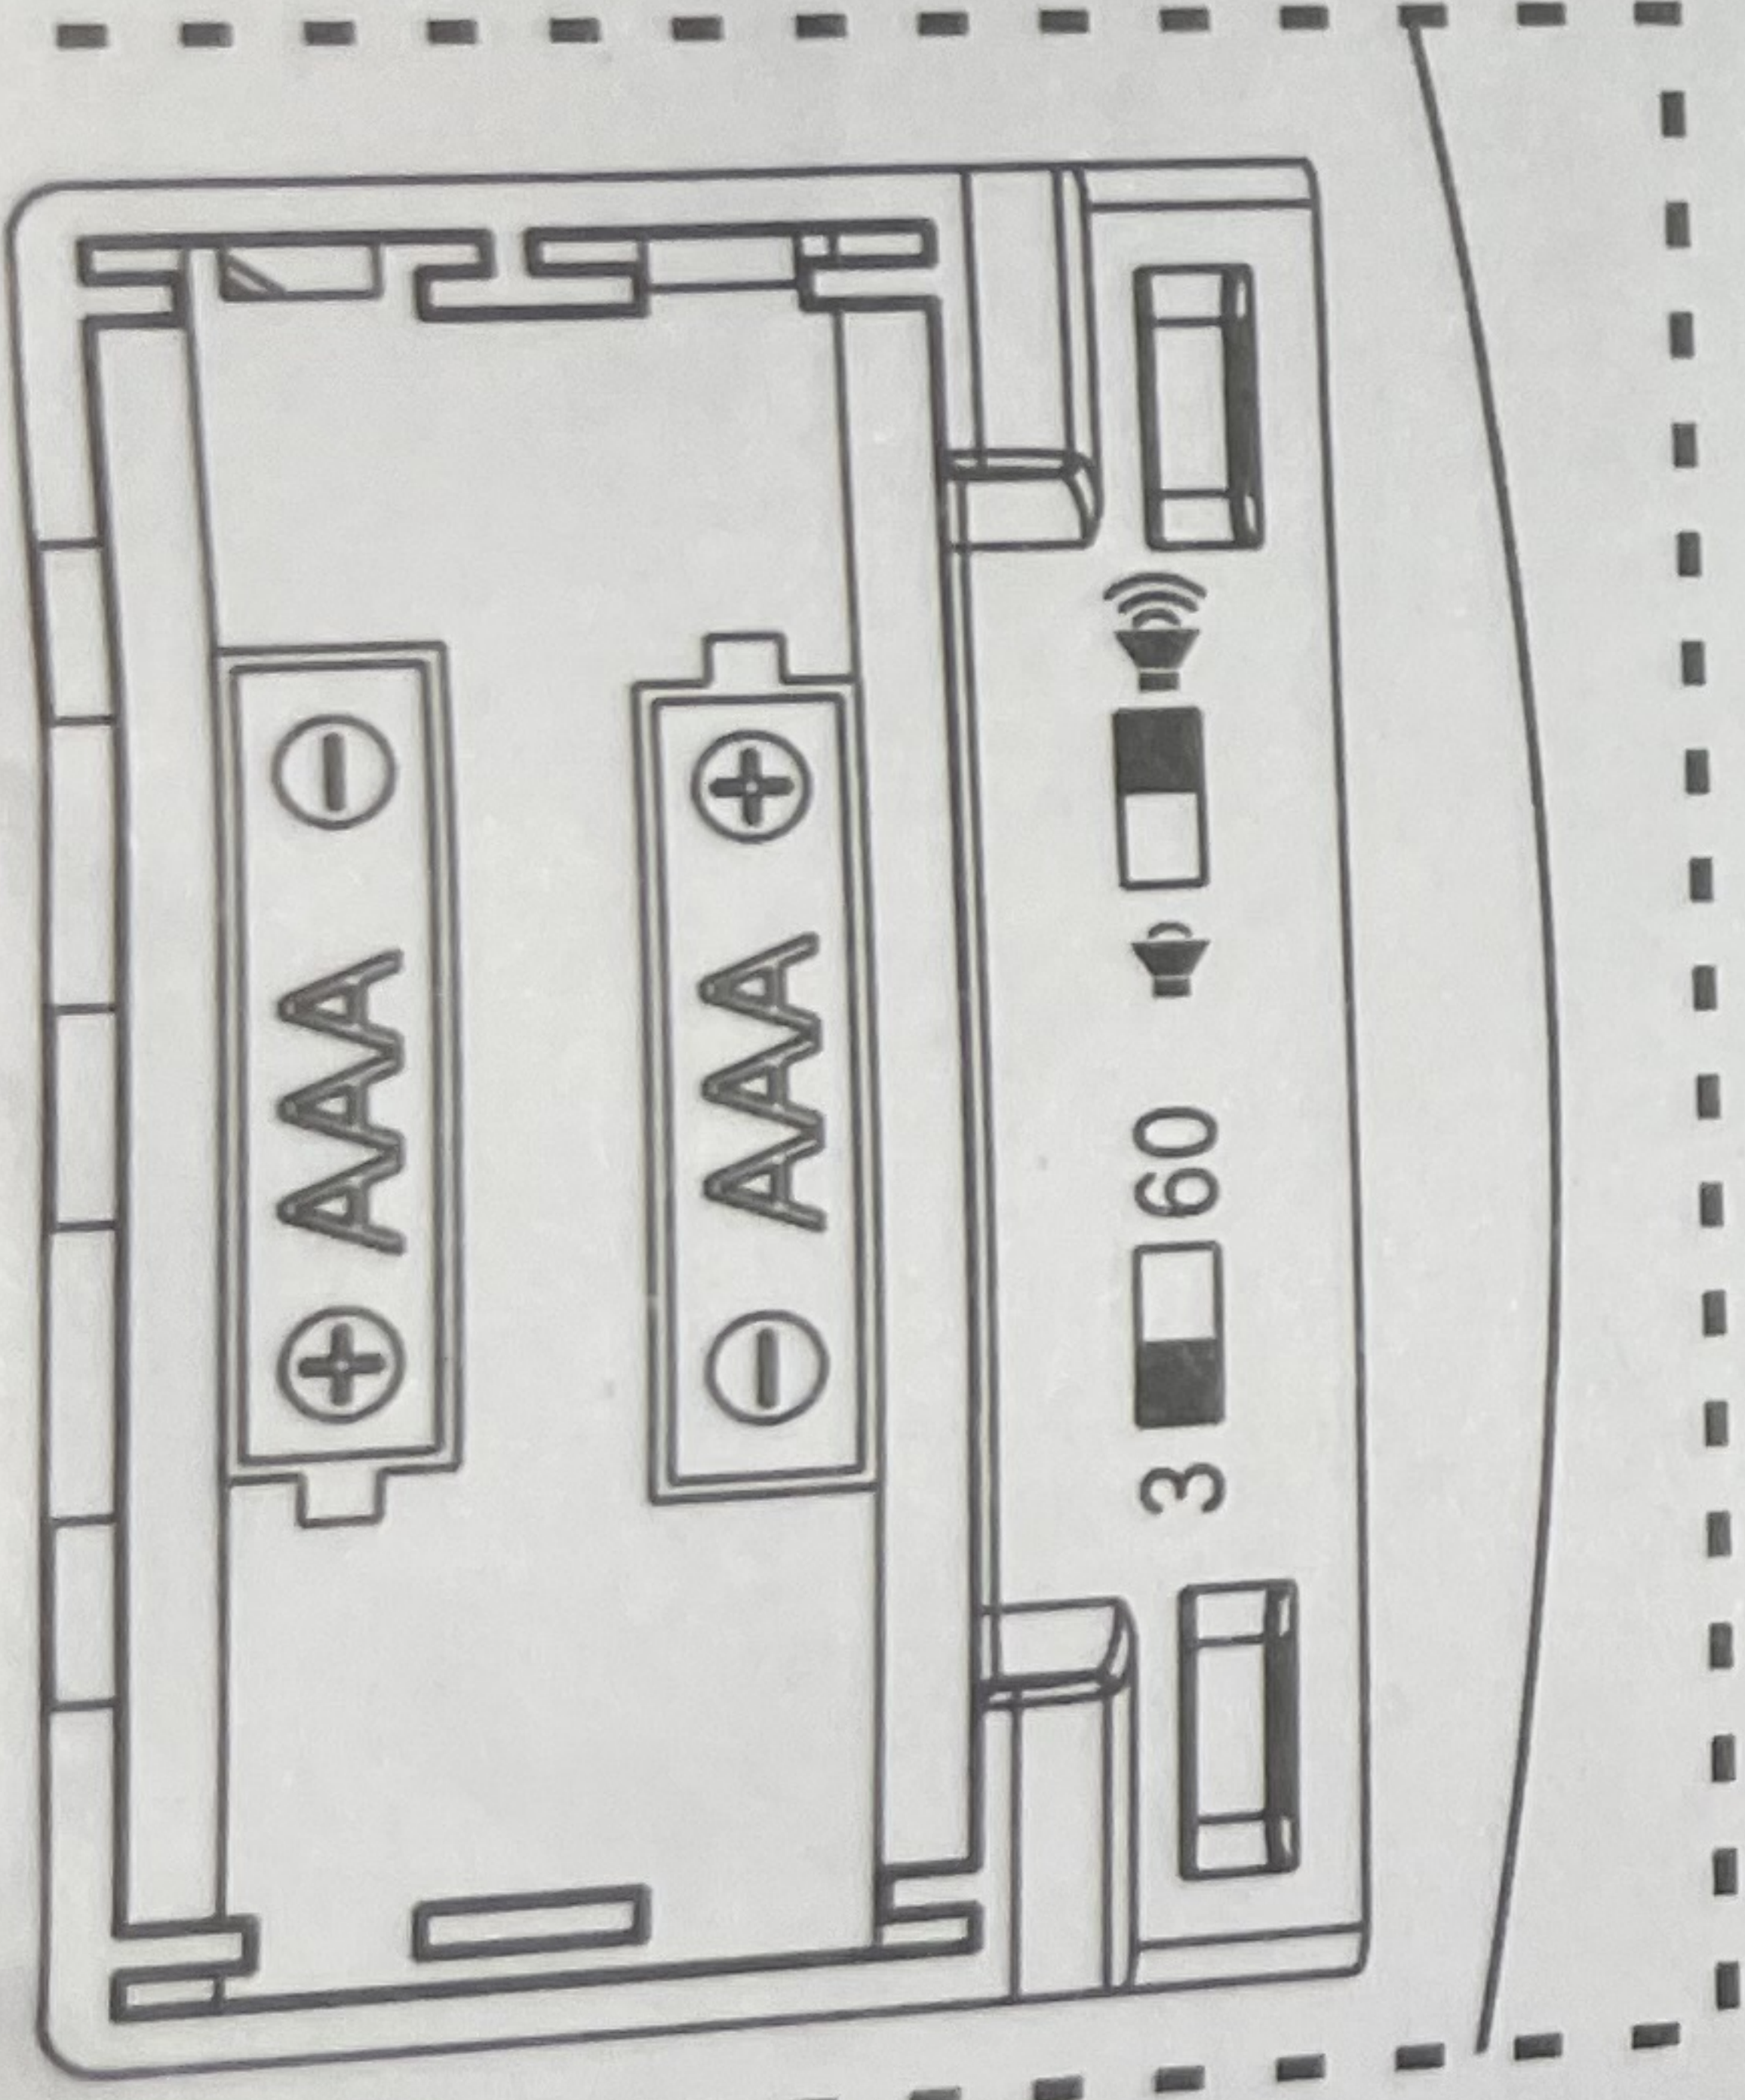

★ " " = alarm volume low

☹ = alarm volume high

☹☹ = alarm volume high

Maintenance

- ★ Remove batteries during maintenance
- ★ Use dry cloth to clean the surface, don't use chemical cleaning agent or wash it in water.

operates on 2 AAA batteries.

