beurer

HD 75



D	Wärmezudecke Gebrauchsanleitung2		Tern Instr
GB	Heated overblanket Instruction for Use9	TR	Isitio Kulla
F	Couverture chauffante Mode d'emploi15	RUS	Эле: Инс
E	Manta eléctrica Instrucciones para el uso 21	PL	Koc Instr

	Termocoperta Instruzioni per l'uso	27
TR	Isitici battaniye Kullanma Talimati	33
RUS	Электроодеяло Инструкция по применению.	39
PL	Koc rozgrzewający Instrukcja obsługi	46

ENGLISH

Contents

1. Items included in the package10	4.4 Setting the temperature	12
1.1 Description10		
2. Important instructions	4.6 Automatic switch-off	13
Retain for future use10	5. Cleaning and maintenance	13
3. Intended use12	6. Storage	13
4. Operation	7. Disposal	14
4.1 Safety12	8. What if there are problems?	14
4.2 Initial use12	9 Technical data	14
4.3 Switching on	0. 10000. 00.00	

Explanation of symbols

	Read the instructions!	30	Machine-washable on an extra-delicate cycle at 30°C
			Do not bleach
	Do not insert pins!	Ø	Do not tumble dry
(3.5)		\bowtie	Do not iron
	Do not use folded or rucked!	\boxtimes	Do not dry-clean
0-3	Not to be used by very young children (0 - 3 years).	OEKO-TEX ® CONFIDENCE IN TEXTILES STANDARD 100 STORDARDING GOOD AND THE STANDARD TH	The textiles used for this device meet the stringent human ecological requirements of Oeko Tex Standard 100, as verified by Hohenstein Research Institute.
	WARNING: Warning of risks of injury or health hazards		
\triangle	CAUTION: Safety information about possible damage to appliance/accessories.		




NOTE: Important information.

1. Items included in the package

- 1 Heated overblanket
- 1 Controller
- 1 Instructions for use

1.1 Description

- 1. Mains plug
- 2. Mains cable
- 3. Controller
- 4. Indicator lamp
- Sliding switch for ON/OFF and temperature settings
- 6. Plug-in coupling

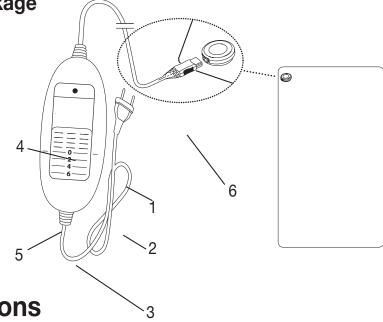

2. Important instructions Retain for future use



- Non-observance of the following instructions may result in personal injury or material damage (electric shock, skin burns, fire). The following safety and hazard information is not only intended to protect your health and the health of others, it should also protect the product.
 For this reason, pay attention to these safety notes and include these instructions when handing over the product to others.
- This heated overblanket may not be used by people with reduced sensitivity to heat or by other very vulnerable people as they are unable to respond to overheating (e.g. diabetics, persons with skin changes related to illness or persons with scarred skin in the area where the pad is to be applied, after taking any pain-relieving medication or alcohol).
- This heated overblanket may not be used by very young children (0-3 years old) as they are unable to respond to overheating.
- This heated overblanket may not be used by young children (3-8 years old) unless the controller has been set by a parent or responsible adult and the child has been given adequate instructions on how to use the heated overblanket safely.
- This heated overblanket may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a

lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the heated overblanket safely, and are fully aware of the consequent risks of use.

- Children must not play with the heated overblanket.
- Cleaning and user maintenance must not be performed by children unless supervised.
- This heated overblanket is not designed for use in hospitals.
- Do not insert needles.
- Do not use when folded or bunched up.
- Do not use if wet.
- This heated overblanket may only be used in conjunction with the controller specified on the label.
- The electrical and magnetic fields emitted by this heated overblanket may interfere with the function of a pacemaker. However, they are still well within the limits: electrical field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Please consult your doctor and the manufacturer of your pacemaker before using this heated overblanket.
- When this heated overblanket is switched on
 - do not place any objects on it (e.g. suitcase or washing basket)
 - Heat sources, such as hot water bottles, heating pads or similar, must not be placed on the pad.
- The electronic components in the controller warm up when the heated overblanket is in use.
 - For this reason, the controller must never be covered or placed on the heated overblanket when it is in use.
- Do not pull, twist or make sharp bends in the cables.
- Please check this heated overblanket frequently for signs of wear and tear or damage.
 - If any such signs are evident, if the heated overblanket has been used incorrectly or if it no longer heats up, it must be checked by the manufacturer before being switched on again.
- If the mains connection cable of the heated overblanket is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person to avoid any risk.
- Always observe the notes on operation (section 4), cleaning and maintenance (section 5) and storage (section 6).
- If you should have any questions about using our devices, please contact Customer Services.

3. Intended use



CAUTION

This heated overblanket is only designed to warm up the human body.

4. Operation

4.1 Safety



CAUTION

The heated overblanket is fitted with the SAFETY SYSTEM. This electronic sensor technology provides protection against overheating across the entire surface of the heated overblanket with an automatic switch-off if there is a fault.

Please note that, for safety reasons, the heated overblanket can no longer be operated after a fault has occurred and must be sent to the specified service address.

4.2 Initial use

- First, connect the controller to the heated overblanket by inserting the plug-in coupling.
- Then plug the mains plug into the socket.



4.3 Switching on

To switch the heated overblanket on, set the sliding switch for ON/OFF and temperature settings to setting 1, 2, 3, 4, 5 or 6.

When it is switched on, the indicator lamp (4) lights up.

4.4 Setting the temperature

Level 0: OFF

Level 1: minimum heat

Setting 2 - 5: individual heat setting Level 6: maximum heat



WARNING

If the heated overblanket is being used over several hours, we recommend that you set the lowest temperature setting on the controller to avoid overheating the person using the blanket.



NOTE

The fastest way to warm up the heated overblanket is to initially set the highest temperature setting.

4.5 Switching off

To switch off the heated overblanket, slide the sliding switch for ON/OFF and temperature settings to the OFF (0) position.



NOTE

If the heated overblanket is not being used for several days, slide the sliding switch for ON/OFF and temperature settings to the OFF (0) position and remove the mains plug from the socket.

Then disconnect the controller from the heated overblanket by unplugging the plug-in coupling.

4.6 Automatic switch-off

This heated overblanket switches off automatically after 3 hours. Once the heated overblanket has switched off, it is no longer heated and the indicator lamp flashes.

To switch on the heated overblanket again, first set the sliding switch for ON/OFF and temperature settings to the OFF (0) position for 5 seconds. After about 5 seconds it is possible to switch it on again.

5. Cleaning and maintenance



WARNING

Before cleaning, always remove the mains plug from the socket first. Then disconnect the controller from the heated overblanket by unplugging the plug-in coupling. Otherwise there is a risk of electric shock.



CAUTION

• The controller must never come into contact with water or other liquids, as this may cause damage.

To clean the controller, use a dry, lint-free cloth. Do not use any chemical or abrasive cleaning agents. Small marks on the heated overblanket can be removed with a damp cloth or sponge and, if necessary, with a little liquid detergent for delicate laundry.



CAUTION

• Please note that the heated overblanket may not be chemically cleaned, wrung out, tumble dried, put through a mangle or ironed.

Set the washing machine to a particularly gentle wash cycle at 30°C (wool cycle). Use a delicate laundry detergent and measure it out according to the manufacturer's instructions.



CAUTION

• Please note that frequent washing of the heated overblanket has a negative effect on the product.

The heated overblanket should therefore be washed in a washing machine a maximum of 5 times during its life. Immediately after washing, reshape the heated overblanket to its original dimensions while it is still wet and spread it out flat over a clothes horse to dry.



CAUTION

- Do not use pegs or similar items to attach the heated overblanket to the clothes horse. Failure to do so may damage the heated overblanket.
- Do not reconnect the controller to the heated overblanket until the plug-in connector and electric overblanket are completely dry. Failure to do so may damage the heated overblanket.



WARNING

Never switch the heated overblanket on to dry it! Otherwise there is a risk of electric shock.

6. Storage

If you do not plan to use the heated overblanket for a long period of time, we recommend that you store it in the original packaging. For this purpose, disconnect the controller from the heated overblanket by unplugging the plug-in coupling.



CAUTION

Allow the heated overblanket to cool down before folding. Otherwise the heated overblanket may be damaged. Do not crease the heated overblanket by placing items on top of it during storage.

7. Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the unit at a suitable local collection or recycling point. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



8. What if there are problems?

Problem	Cause	Solution
The indicator lamp is not illuminated while - the controller is properly connected to the heated overblanket - the mains plug is connected to a working socket - the sliding switch for ON/OFF and temperature settings is set to 1, 2, 3, 4, 5 or 6	The safety system has switched the heated overblanket off permanently.	Send the heated overblanket and the controller for servicing.

9. Technical data

See the type plate label on the heated overblanket.