



**KPC-1370**

**08/2023**



**FR**

**Cet appareil et ses accessoires sont recyclables**

**À DÉPOSER EN MAGASIN**



**OU**

**À DÉPOSER EN DÉCHÈTERIE**



Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !


## Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Warning: This product includes lithium polymer batteries.
2. Warning: Choking Hazard – Children under 3 yrs. can choke or suffocate on camera because of its small size. Adult supervision required. Keep camera away from toddlers and pets to avoid chewing and swallowing. Discard broken buttons or parts at once.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Only charge with supplied USB cable.
8. Do not use non original accessories together with the product as this can make the product functionality abnormal.

# CAMERA USER GUIDE

## Parts Description

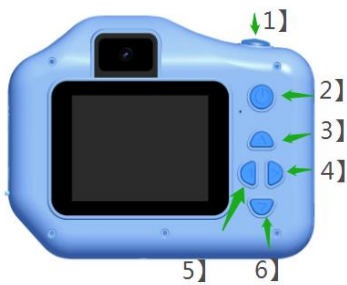

1) Confirm/Shutter button

2) Power key/Back key

3) Up key    4) Right key

5) Left key

6) Down key

7) Zoom knob

8) Rear lens

9) Print Bin

10) SD card slot

11) Type-C

12) Toggle switch

### 1. Confirm/Shutter button

- ① Photo/Video mode: press this button to release the shutter and take photo/video.
- ② Playback/MP3 mode: press this button to play or pause playback.
- ③ Game mode: press this button to confirm the selection.
- ④ Setting mode: press this button to save the setting.
- ⑤ Photo/video mode: press and hold this button to switch between front and rear camera.

### 2. Power key/Back key

Press and hold this button to turn the device on/off; press to exit the mode and return to the main interface.

### 3. Up key

In the main interface, press to select a mode; in the photo mode, press to turn on/off the print function.

### 4. Right key

In the main interface, press to select a mode; in the photo mode, press to select the photo frame, special effects and time-lapse photo functions. In video mode, you can select special effects.

### 5. Left key

In the main interface, press to select a mode; in the photo mode, press to select the photo frame, special effects and time-lapse photo functions. In video mode, you can select special effects.

### 6. Down key

In the main interface, press to select a mode; in photo/video mode, press this button to turn on/off the flash function.

### 7. Zoom knob

Rotate the zoom knob left and right for image zoom in and zoom out settings.

### 8. Rear lens

Rear camera viewfinder window.

## 9. Print bin

Print paper cassette storage and print photo output.

## 10. SD card slot

Memory card slot

**\*Note:** To reinstall or replace the card, insert the card (or any new SD Card) into the SD Card Slot with the contacts facing the display side.

## 11. TYPE-C

For connecting PC (data transfer) and external power supply to charge the battery.

## 12. Toggle Switch

Used to turn the battery on and off to power the device.

## Home Page Icons:



## Basic operation instructions

### 1. Power On/Off:

Press and hold the power button to turn the camera on/off.

### 2. Video mode

Select the video recording function (Video recording only works when there is an SD card inserted).

-Use the arrow keys to select the video mode icon, then press the confirm/shutter key to confirm.

-Press the confirm/shutter key to start recording, and then press the confirm/shutter key again to stop recording.

-In the video mode, press the left and right arrow keys to switch between different special effects scenes; press the up button to switch between slow motion video, time-lapse video, and normal video; press the down button to turn on or off the fill light.

### 3. Photo Mode

-Use the arrow keys to select the photo mode icon, then press the confirm/shutter key to confirm.

-Press the confirm / shutter key to take photos (the photo is successfully taken when you hear a beep).

-If the print switch is turned on, the photo will be printed immediately after it is taken.

-In the photo mode, press the left and right arrow keys to switch different frames and special effects;

press the up button to turn on or off the printing function; press the down button to turn on or off the fill light mode.

#### 4. Print Photo

-There are two ways to print photos:

1) Print immediately after taking a photo

-Enter photo mode, press the up button, and a print icon appears on the screen, as illustrated below:



-The photo will be printed immediately after it is taken.

-Press the up button again, the print icon will disappear, and the photo will not be immediately printed.

2) Print photos in the PLAYBACK

-Select the PLAYBACK icon, select a photo to be printed.

-Press the down key to turn on the print function (press the down key to turn the print function on/off).

-Press the confirm / shutter button, the photo will be printed.

**\*Note: The Camera supports printing without an SD card. Adjust the "Print" and "Printer Properties" in the settings menu to adjust the printing effect, different printing paper will print the effect differently.**

#### 5. Print Paper

-Open the print cabin of the camera.

-Place the print paper in the cabin. Be sure to place the print paper in the correct direction!

-Close the lid of the camera.

**\*Note: Be sure to place the print paper in the correct direction! As illustrated below**



#### 6. Playback

-Use the arrow keys to select the playback icon, then press the confirm / shutter button to enter Playback mode.

-Use the arrow keys to select the video or photo.

-Press the confirm / shutter button to play back the video.

-Press the Up key to delete the video or photo.

#### 7. Games

-Use the arrow keys to select the games icon, then press the confirm / shutter button to enter Games mode.

-The camera has four games.

- In the game mode interface:  
Press the Up key to move upwards;  
Press the Down key to move downwards;  
Press the Left key to move to the left;  
Press the Right key to move to the right.

## 8.Settings

- Use the arrow keys to select the settings icon then press the confirm / shutter button to enter Settings mode.
- Use the arrow keys to select the menu options, then press the confirm / shutter button to confirm the menu setting.
- Press the Power button to exit the setting status.

## 9.Music

- Use the arrow keys to select the music icon, then press the confirm / shutter button to enter Music mode.
  - Press Left key to select the previous song; press Right key to select the next song.
  - Press Down key to decrease the volume; press Up Key to increase the volume.
- \*Note: The music files in MP3 format should be copied to the SD card beforehand. Adult operation is suggested.**

## 10. USB

- Connect the USB cable to the computer, the camera will automatically connect to the USB. If no SD card is connected to the camera, it will enter the PCCAM mode; if the camera is equipped with SD, it will enter the U disk mode.

## 11. Battery Recharging

**\*Note: Adult operation is suggested.**

- Insert the included TYPE-C cable (small end) into the Type-C port on the camera.
- Connect the large end of the TYPE-C cable to your computer or to a standard USB power adapter.
- Once the connection is successful, you will see a battery-charging symbol appear on the camera screen.
- Power indicator



Sufficient power



Low power



Insufficient power

**\*Note: Please charge your camera before you use it. It takes approximately 2 hours to fully charge the battery.**

## Product Specifications

Video	1440P,1080P,720P Interpolated
Screen	2.8-inch IPS screen
Lens	Support digital zoom up to 10x
Printing	Thermal printing
Video Format	AVI/JPG
Photo	48M,30M,24M,20M Interpolated
Filters	20 cartoon frames, 8 photo effects and 6 filters
Battery	Built-in 800mAh Li-ion battery
Music	Support MP3
Game	Support 4 games (Snake, Push box, Tetris, Ball)
Memory	MicroSD Card, up to 64GB (Included)
Port	Type-C
Accessory	3 x thermal printing paper rolls included (approx. 150 Photos, around 50 photos in 1 roll)

- Note: The product specifications are based on updated information when compiling this product manual. The specifications are subject to change without further notice. The product is the actual camera. When the camera crashes from a drop, please restart it.
- Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



www.denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denver.eu](http://www.facebook.com/denver.eu)

Warning: lithium battery inside



# Contact

## Nordics

Headquarter  
Denver A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

Phone: +45 86 22 61 00  
(Push "1" for support)

E-Mail  
For technical questions, please write to:  
support.hq@denver.eu

For all other questions please write to:  
contact.hq@denver.eu

---

## Benelux

DENVER BENELUX B.V.  
Barwoutswaarder 13C+D  
3449 HE Woerden  
The Netherlands

Phone: 0900-3437623

E-Mail: support.nl@denver.eu

---

## Spain/Portugal

DENVER SPAIN S.A  
Ronda Augustes y Louis Lumiere, n° 23 - nave 16  
Parque Tecnológico  
46980 PATERNA  
Valencia (Spain)

Spain  
Phone: +34 960 046 883  
Mail: support.es@denver.eu

Portugal:  
Phone: +35 1255 240 294  
E-Mail: denver.service@satfiel.com

## Germany

Denver Germany GmbH Service  
Max-Emanuel-Str. 4  
94036 Passau

Phone: +49 851 379 369 40

E-Mail  
support.de@denver.eu

Fairfixx GmbH  
Repair and service  
Rudolf-Diesel-Str. 3 TOR 2  
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,  
Smartphones & Tablets)

Tel.: +49 851 379 369 69  
E-Mail: denver@fairfixx.de

---

## Austria

Lurf Premium Service GmbH  
Deutschstrasse 1  
1230 Wien

Phone: +43 1 904 3085  
E-Mail: denver@lurfservice.at

---

If your country is not listed above,  
please write an email to  
support@denver.eu



DENVER A/S  
Omega 5A, Soeften  
DK-8382 Hinnerup  
Denmark

denver.eu  
facebook.com/denver.eu



Version 1.1