

# C CARE



## KT5967

**HANDLEIDING  
INSTRUCTION MANUAL  
MODE D'EMPLOI  
BEDIENUNGSANLEITUNG**

**ELEKTRISCHE VOETENWARMER  
ELECTRIC FOOTWARMER  
ELEKTRISCHER FUSSWÄRMER  
CHAUFFE PIEDS ELECTRIQUE**

Drukfouten en tussentijdse modelwijzigingen voorbehouden

## ENGLISH INSTRUCTION MANUAL

We thank you for buying our C-CARE electric footwarmer KTS967. It shows your confidence in our brand and our products. Please be assured you have bought a high quality product which you will enjoy using for many years to come.

Please read this instruction manual thoroughly before first use, even if you are familiar with this type of product. It gives you tips for optimal use.

If you require technical support and/or have questions about the functioning of the product please send an e-mail to our after sales service; the address is listed here under. We will give you a fast reply.

**CRESTA INTERNATIONAL B.V.**

**ROLBRUGWEG 4**

**NL-1332 AS ALMERE**

**info@cresta-international.com**

[www.cresta-care.com](http://www.cresta-care.com)

**Tel: + 31 20 6932932**

## IMPORTANT SAFETY INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner or user of the appliance

### IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the footwarmer.

#### DANGER – TO REDUCE THE RISK OF ELECTRIC SHOCK

- Always unplug from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub sink. Do not place in or drop into water or other liquid.

**WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:**

# C CARE

- An appliance should never be left unattended when plugged in. Unplug from the outlet when not in use and before cleaning.
- To disconnect, turn the control to the "0" position and then remove the plug from the outlet.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use any attachment not recommended by the manufacturer.
- Never operate the appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return this appliance to a service center for examination and repair.
- Do not carry this unit by the power cord.
- Do not operate under a blanket. Excessive heating can occur and cause fire, electric shock or injury to persons.
- **Continued operation for more than 45 minutes is not recommended. Extensive use could lead to the product's overheating. In the event of overheating, discontinue use and allow the unit to cool before operating.**
- Disconnect the power cord by holding the plug attached to the cord, not by using the cord itself.
- Never drop or insert any object into an opening.
- Do not operate where aerosol (spray) product is being used or where oxygen is being administered.
- Do not operate this massager near an electrical oven or any heat source.

## CAUTIONS

- Do not exceed 45 minutes in any one area of the body.
- Not to be used by children below 12 years of age.
- Do not use by pregnant, high blood pressure and heart attack.
- Never use while sleeping.
- Do not use on highly sensitive areas.

## OPERATING INSTRUCTIONS

Begin by heating up the foot warmer to the highest level. After 15 minutes the temperature can be set to the desired level.

**ATTENTION: THE TEMPERATURE WHICH YOU FEEL AS WARM WITH YOUR HANDS MAY BE EXPERIENCED AS HOT WITH YOUR FEET.**

The footwarmer's controller has 4 levels:

- Level 0: the footwarmer is switched off
- Level 1: low heat
- Level 2: medium heat
- Level 3: maximum heat

You may notice a faint odour the first time the foot warmer is used. This odour is completely harmless, but be sure to air out the room after the foot warmer has been used for the first time.

# C CARE

The foot warmer's heating function shuts off automatically after 90 minutes. If you wish to reheat the foot warmer after 90 minutes, simply set the heat level back to position 0, wait for 5 seconds and select the desired heat level once again.

The foot warmer is equipped with an overheating control.

## MAINTENANCE AND CLEANING

- The unit is maintenance free. If a fault does occur, just check whether the mains power adapter is properly connected.
- If the unit becomes faulty, do not try to repair it yourself.
- The inlay of the product is machine washable at maximum 30 degrees. The product itself can be cleaned with a damp cloth or sponge and some mild soap.

## ENVIRONMENT FRIENDLY DISPOSAL

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment – WEEE – requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.



The crossed out "wheeled bin" symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Contact your local authority for information concerning the correct disposal of your old appliance.

## TECHNICAL DETAILS

220 - 240V-50/60Hz - 100 Watt