
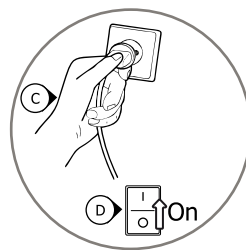
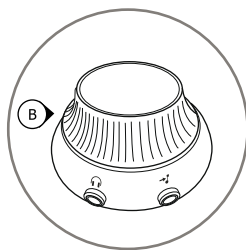
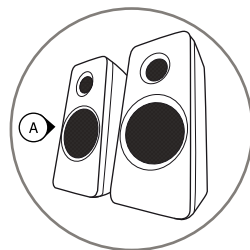


Trust





SPEAKER
CXT 38

1



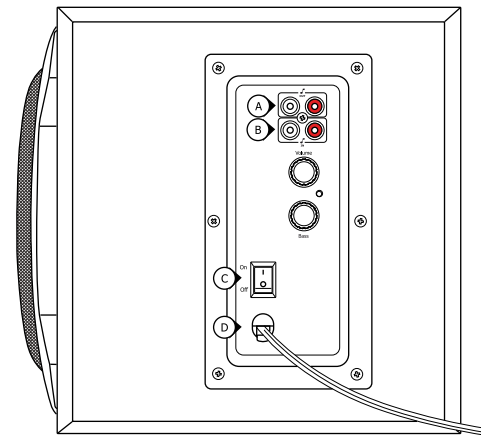


D On





2

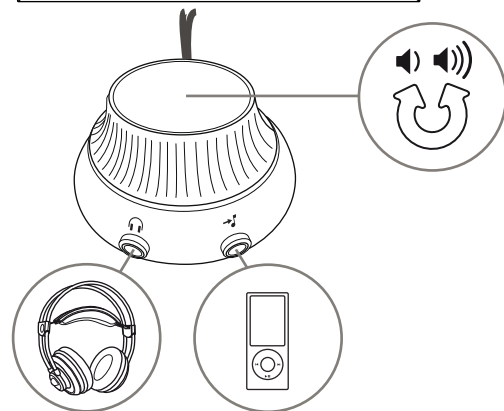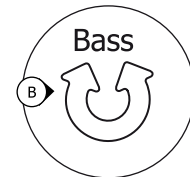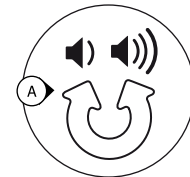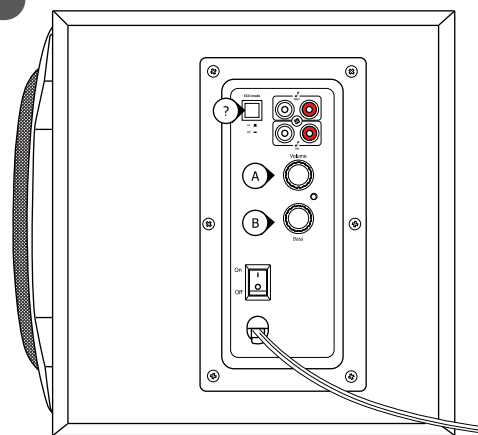





PC

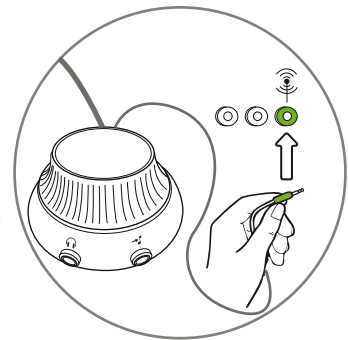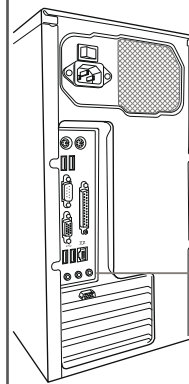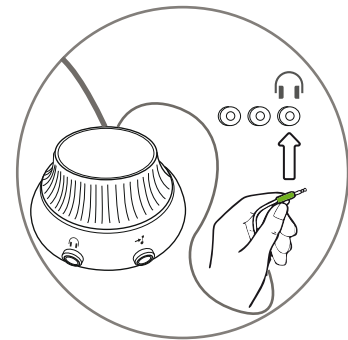


PS3

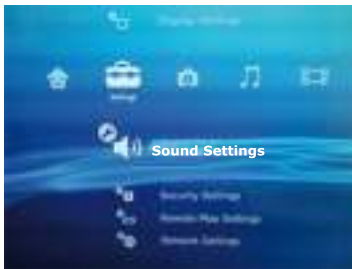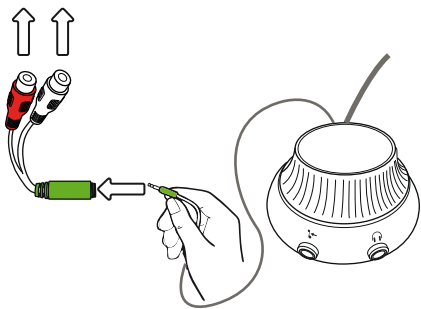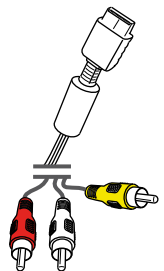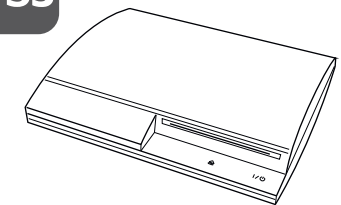

XBOX/Wii

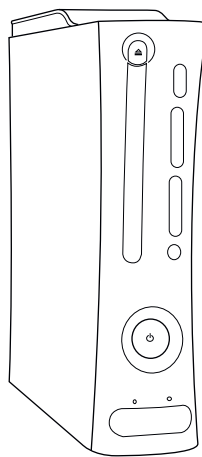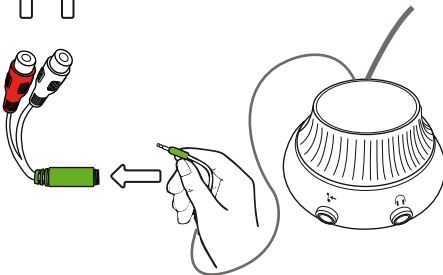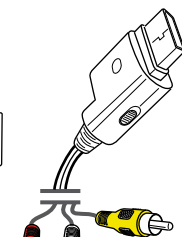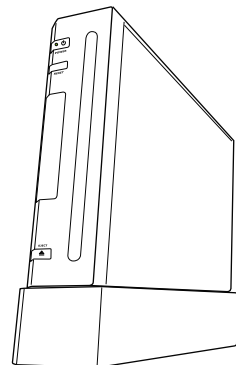


TV

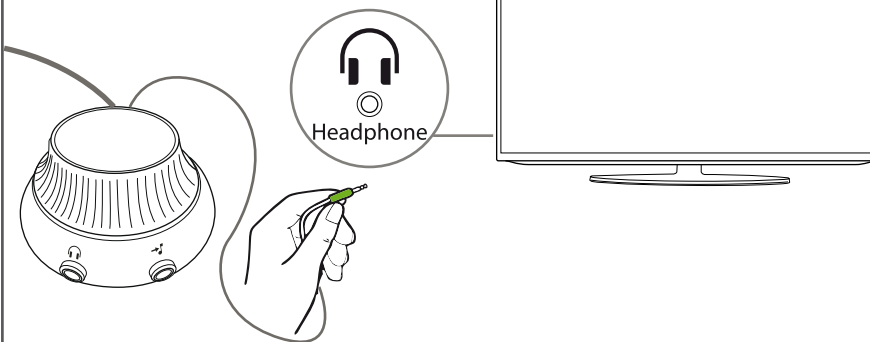

?



 ECO mode



on



off



www.trust.com/19023/faq

