


### Electrical Principle

	Washing	Spinning
Rated voltage	220-240V	220-240V
Rated frequency	50-60Hz	50-60Hz
Rated energy consumption power	<b>240 W</b>	<b>120 W</b>

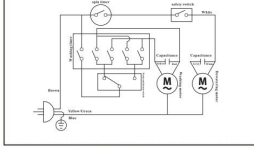

### Twin Tub Washing Machine Instruction Manual

# LABIRENT®



Read this booklet thoroughly before using  
and save it for future reference.

CB RoHS

### CONTENTS

Introduction  
Technology Parameter and Specifications  
Structure and Parts  
Washing Instructions  
Attention Points  
Maintenance  
Troubleshooting  
Electrical Principle

### Introduction

Thank you for purchasing this Sent Auto Washing Machine. The design of this product has adopted the special patent technology of cabinet integration. The entire body casing is made of plastic and this ensures that your sent auto washing machines will never be rust eaten. The washer is relatively lighter and space saving as compared to other general twin-tub washing machines.

Through the integration of new technology, this washer with large wave pulvator and new water flow, will not only produce less twisting of the clothing but also better cleaning and washing effect. The functions of water inlet, sprinkling, spin-dry and water flow are also made available to save time, labor and water usage.

We trust that you will find your purchase of this beautifully designed and dignified-looking sent auto washing machine to your satisfaction.

### Technology parameter and specifications

Water capacity	Input power	Power source	Size (W*H)	Weight				
high	low	wash	dry	voltage	hertz			
24L	18L	240W	120W	220V	50Hz	600*380*680(mm)	12kg	

### Troubleshooting

Problem	Reason	Solution
The pulvator is too slow	Power cut or switch off	Switch on the power
	Transmission belt left off Belt pulley has become loose	Assemble the transmission belt Tighten the belt
The pulvator does not rotate	Pulvator is blocked	Remove the block
	Belt is loose	Tighten the belt or renew it
Abnormal noise and vibration	The clothes in the spin dry tub is unbalanced	Tighten the belt and the screw
	There is something jammed between the pulvator and the wash tub	Remove the jammed objects.
Water leaks from the wash tub	The clothes in the spin dry tub is unbalanced	Replace the clothes in the tub
	Wash tub was not connected tightly to the base	Remove the jammed objects.
Spin-dry basket does not rotate	The slight switch is in loose contact	Reconnect and tighten the base
	The fixed screw of spin dry basket or shaft coupling is loose	Adjust the connector of the switch
The spin tub does not drain	The shaft of spin dry basket is twisted by the textile	Tighten the screw
	Brake draglink is loose	Remove the textile
The spin tub does not drain	Inserting lid dropped into the space between spin tub and spin dry basket	Tighten the draglink
		Remove the object

Attention: When the problem can not be resolved, please contact the Service Center.

### Maintenance

After use, pull out the plug to prevent accidents.



When cleaning the washing machine use a soft cloth, this will prevent scratching of the surface of the cabinet.



Do not put the washing machine outdoors or in damp areas such as the bathroom.




Do not put heavy objects on top of the washing machine.



Do not place the washing machine near to heat-generating items such as gas cookers.

-6-

### Structure and parts of product

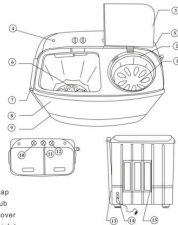

- |                |                                  |                |
|----------------|----------------------------------|----------------|
| 1. spin cap    | 9. Bottom                        | 13. drain hose |
| 2. spin tub    | 10. wash timer switch            | 14. power wire |
| 3. spin cover  | 11. wash & drain selector switch | 15. back cover |
| 4. water inlet | 12. spin timer switch            |                |

-3-

### Washing Instructions

#### Preparation

- The machine should be placed on the flat ground
- The plug must should have safety ground connection.
- Lay down the overflow hose.
- Use the water inlet hose to connect the water tap on the water inlet.
- Adjust the water level based on the type of clothing material and its weight.
- Turn on the power.

#### Washing

- Set the "wash & drain selector switch" according to the material type and weight of clothes.
- Set the "wash & drain selector switch" to the wash position.
- Set the "wash timer" and place the clothes into the tub, adjust the water level to the proper position and put in the proper amount of detergent into the wash tub.
- Set the "wash timer" and washing machine will start to wash.
- After wash, set the "wash & drain" selector switch to the drain position to start draining off water.

#### Spinning

- After spinning, set the water inlet hose to the water inlet of the spin tub position for 20-30 seconds.
- According to the "spin timer" process, spinning the clothes for 1min-5min, repeat once or twice.

#### Rinsing

- After spinning, the spin tub will stop. Open the spin cover and from the spin tub transfer the clothes to the wash tub to prepare for rinsing.
- Repeat the washing process but do not add any detergent.

#### Attention Points



For your own safety, ensure that the ground connection is correct.

-4-



Never put your hands into the spin tub whilst it is working.



Never wash textiles which contain volatile materials to avoid machine damage or water backflow due to stains.



The timer should always be turned clock wise



When abnormal sound/movements occur during operation, stop the washing machine in-situ as possible and check. (Please refer to troubleshooting, Page7.)



When washing, the water temperature should be below 60°C. Otherwise, the plastic components may be deformed.

-5-

尺寸 : 132.5\*190mm,材质 : 105g