 


user's manual

Please read this manual carefully before using the product and keep it properly F1 timer

Schematic

Timing time



出出



 
spin button

Countdown settings

1. Turn the knob to set the desired countdown time, turn the knob to the right to increase the value, and turn it to the left to decrease the value. (When rotating quickly and the angle is greater than 60 degrees, the minute value can be quickly set, and the second value can be fine-tuned after an interval of 1 second).



battery door



Magnets & Anti-Slip Pads

button

Install three AAA batteries, the LCD is fully displayed, and the machine can be turned on with a "di" sound.

boot prompt

volume setting

The back can be toggled to adjust the volume (loud, quiet, mute)

Maximum volume levelMinimum volume levelMute gear