 


deerma

deerma

EN

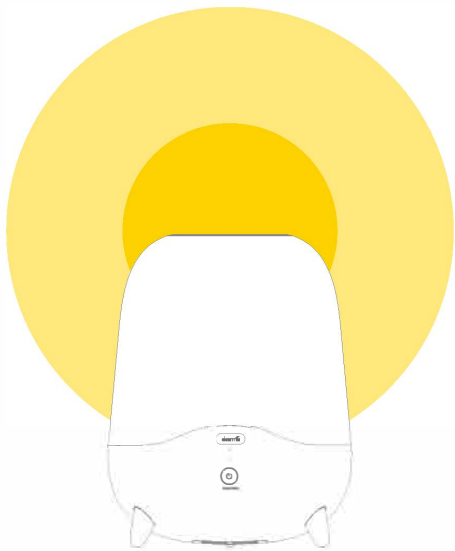

Deerma Humidifier

Keep your life clean and refreshing all the time.

 
With its micron mist and simply operation so that to deeply moist your skin and each corner in your house. You can enjoy each wonderful moment when you use it.

DEM-F325

Read instruction manual carefully before use

deerma


PRODUCT STRUCTURE

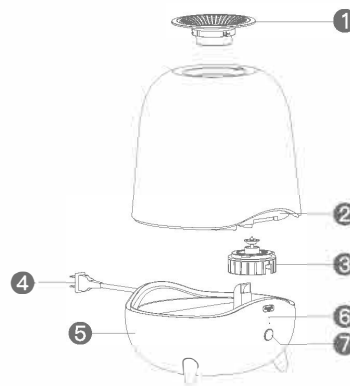

- 1 Mist nozzle
- 2 Water tank
- 3 Water tank cover
- 4 Power line
- 5 Housing part
- 6 Indicator
- 7 Power button

CIRCUIT DIAGRAM

 This image here is for reference purpose only. No notice will be given otherwise in case of any change. The actual product may vary and we reserve the right of final explanation.

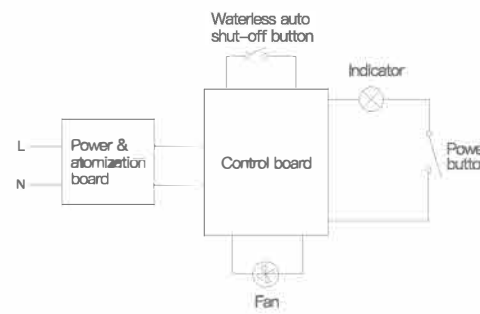

deerma

CLEANING AND MAINTENANCE

1. Please clean the water container and the water tank on a regular basis to maintain the optimal performance.
2. Please clean the converter and the filter on a regular basis to prevent any scale. The scale from a long time can be hard to clean.
3. Please unplug the machine before cleaning. Please properly hold the power plug rather than pull violently when unplug the machine.
4. Please avoid using chemical solvents, gasoline, polishing powder, etc. to clean the surface of the machine. Please clean the machine with clean water rather than detergent.
5. Please clean each part with a soft towel. If the scale cannot be removed, please use the detergent produced or authorized by us. Melt the citric acid with 60°C water (mix water and citric acid as per 10mL:1g) and keep such mixture stay on the scale for 5 min-utes. Then fully remove the scale with a brush.

7. Please empty the water tank and the water container on a regular basis to keep the machine clean.
8. Please clean each part of the machine if it will be idle for a long time and dry it. Then put it back to the packing box and store in a dry place.

NOTE

About the use: Remove the nozzle before adding water to the water tank. Turn the water tank upside down to remove the its cover. Fill water directly or through the water filling hole on the side. Restore the water tank cover and put the water tank back to the base. Then you may start to use this machine.

About the water in the base: This humidifier uses ultrasonic atomizer to atomize the water. The water tank serves only as a transitional water storage tool and it is unavoidable that you may see water in the water container in the base. No worry about this.

About mist amount adjustment: You may adjust the mist amount during use. In case of any water around the machine during your use, it indicates high humidity in the room and you may want to adjust down the mist amount.

封底

封面

P1

P2

deerma

POLARIZED PLUG

This appliance has a polarized plug(one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still dose not fit, contact qualified electrician. Do not attempt to modify the plug in any way.

IMPORTANT

1. Thank you for purchasing Deerma humidifier. Please carefully read this User Manual before use.
2. Please use this machine under required voltage and frequency: 220-240V-50/60Hz.
3. Do not disassemble or repair this machine without authorization.
4. In case of any damages to the power line, no one except for the manufacturer or its maintenance department or similar professional maintenance body or personnel is allowed to make replacement.
5. Please unplug the machine immediately in case of any malfunctions. Such malfunctions must be repaired by the manufacturer or its maintenance department or similar service personnel.
6. Please clean the dust on the power plug on regular basis.
7. Please unplug the machine before cleaning or moving.
8. Please properly hold the power plug rather than pull violently when unplug the machine.
9. Do not move or turn this machine upside down when it is plugged in or filled with water.
10. Do not reach your hands near the water or parts in the water container when the machine is plugged in.
11. Do not cover the air inlet or the mist nozzle with items such as towel when it is working.
12. This is no toy. Please keep it away from babies and kids to avoid any accidents. Do not put it into the crib, stroller or playpen.
13. Please use this machine on flat and firm surface rather than slanted surface.
14. Do not add essence or similar substances not produced or authorized by us into the water tank and water container of this machine.
15. Do not use it in the kitchen. Keep it away from heat sources or direct sunlight. Please use it 2m away from your furniture or other household appliances to avoid being affected by the moisture.
16. Please unplug this machine when adding water.

deerma

IMPORTANT

 
1. Please use this product under required rated voltage. If the supply voltage is different from the required, please contact your supplier and stop using this product.
2. Please keep this machine at room temperature for 30 minutes without working after your receipt of it, otherwise it may cause damage to the water tank due to sudden temperature changes.
3. Please use it under normal room temperature (5°C-40°C).
4. Please put it on flat surface and avoid tilting.
5. Please avoid putting the machine directly on the wooden floor, as the moisture may cause deformation to the wooden floor.
6. Please use the machine 2m away from your furniture and household appliances to avoid being affected by the moisture.
7. Please keep this machine away from hear sources and direct sunlight.
8. Do not fill the water tank with water above 40°C, as this may cause damage to the machine.
9. Please make sure water doesn't flow into the machine through the air outlet. Please clean the water around the machine with a dry towel, otherwise it may cause damage to the machine.
10. Please empty the water tank and the water container when room temperature is below 0°C, otherwise the frozen water may cause damage to the machine.
11. Please do not add metal, chemicals, detergent into the water container, as this may jeopardize the atomization.
12. Please unplug the machine before empty the water container.
13. Please unplug the machine before moving, cleaning it or adding more water; avoid moving the machine when it is working.
14. Do not fill water into the mist nozzle and the air outlet.
15. Please make sure water doesn't flow into the machine when cleaning.
16. Do not disassemble this machine without authorization.

PRODUCT PARAMETERS


Product name: Humidifier
 Product model: DEM-F325
 Rated power: 25W
 Capacity: 5.0L
 Rated voltage / frequency: 220-240V-50/60Hz
 Dimensions: 220*220*285mm
 Include: Humidifier *1; User Manual *1

deerma

INSTRUCTIONS FOR USE

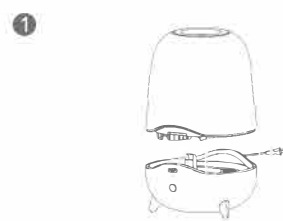

 1. Remove the water tank.

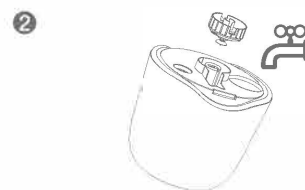

2. Remove the water valve of the water tank, add water and then restore the water valve.



3. Put the water tank back to the base. Plug in the machine, turn it on and adjust the mist amount.

WORKING PRINCIPLE

Deerma humidifier uses ultrasonic waves to produce 1.7 million high-frequency oscillations every second, atomizing water into 1-5 microns ultra-fine particles. These particles are then diffused into the air through a pneumatic machine to give a uniform air humidification effect. This machine is designed to keep your room at desired humidity and prevent static electricity.

deerma

FEATURES



Power button and two-level indicators (includes touch button and two-level indicators)

Feature description

1. Power/level button: Plug in the machine. Press the button to start the machine, at which time the machine works in Level I (18w), the indicator below lighting up and the buzzer giving a warning sound; press the button two times to initial Level II (25w) working mode, both indicators lighting up and the buzzer giving a warning sound; press the button three times to shut down the machine, both indicators going out and the buzzer giving a warning sound.
2. Waterless auto shut-off: The buzzer gives three warning sounds in succession when the water in the water tank is drained, and both indicators twinkle at the interval of 2s.

TROUBLE-SHOOTING

The indicator doesn't light up and there is no mist.
Answer: The machine is not plugged in or malfunctioned.
What to do: Re-plug the machine. If it still fails to work after you do so, please contact Deerma after-sales center timely.

There is no mist when the machine is connected to power?
Answer: The waterless auto shut-off may be initiated if the water in drained.
What to do: Turn on the machine again after you fill the water tank with water. If it still fails to work after you do so, please contact Deerma after-sales center timely.

Weak mist
Answer: Too much scale on the atomizer or too many impurities in the water
What to do: Clean the atomizer and refill the water tank with pure water.

Abnormal noise
Answer: Less water in the water tank/uneven surface
What to do: Fill the water container with water and put the machine on firm surface.

Remarks: Please contact our maintenance outlet or your supplier if your problems are not solved with the above provided. Non-professionals are strictly forbidden to disassemble the machine.