 


User's Manual

Product introduction

- 1 Haipa
- 2 Dust bin
- 3 LED light
- 4 Power switch
- 5 Air outlet
- 6 Handle
- 7 Charging port

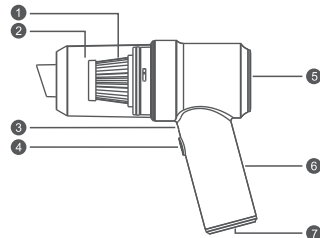

Parts



Charging line



Multifunctional suction nozzle



Floor brush



Multifunctional air nozzle

 
 
 


Charging base assembly

*This manual is a general manual, and the specific accessories shall be subject to the purchase configuration.

Instructions





1. Connect the charging line or charging base to fully charge the battery
*Indicator status:
Red: charging
Blue or green: fully charged
2. Connect the phase according to the application Accessories shall be installed so that (used)
3. Gently press the power switch to start the vacuum cleaner

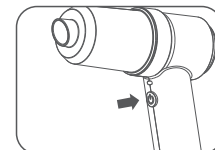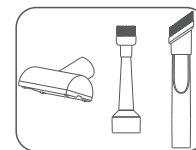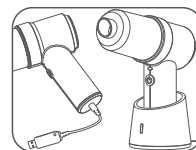

*It is recommended to use 5V 2A adapter / car charger for charging, and the power adapter needs to be provided by itself.

Installation and use of accessories

    1. Suction nozzle: suitable for dust cleaning of various gaps such as doors, seats, cabinet corners, drawers and ashtrays
2. Brush: it has the dual functions of suction and wiping. It is suitable for cleaning the dust on the surfaces of various cushions, foot pads, keyboards and air outlets of air conditioners
3. Floor brush: suitable for dust cleaning of floor, trunk, mattress, sofa and various large-area flat surfaces
4. Blowing: it is suitable for the inflation of small equipment such as lifebuoy and balloon. It can also clean the fine dust in various gaps such as windows and keyboards. It can be wiped and blown with a brush

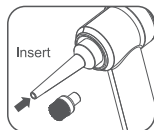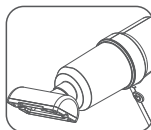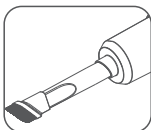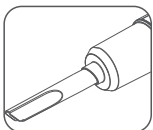

Insert

Disassembly and cleaning

1. Rotate the dust bin counterclockwise to remove the dust bin from the machine body
2. Take out the Haipa filter screen in the dust bin and pour the garbage into the trash can
3. The dust cup can be cleaned with a slightly wet rag or disposable paper towel. The filter screen can be washed with water. After washing, it should be thoroughly dried and reused.
4. To reinstall the dust bin, put the HEPA filter screen into the dust bin, rotate and tighten in the opposite direction according to step 1.



Product parameters

Product name	Rated voltage	Rated power	Product size	Product weight	Dust cup capacity
Wireless vacuum cleaner	7.4V	120W	≈180*158*66mm	≈330g	≈0.1L

Matters needing attention

1. Do not remove, repair or refit this product unless it is carried out by authorized repair personnel.
2. Do not cover the air inlet or outlet when operating this product, otherwise the product may be deformed or catch fire due to overheating.
3. When using this product, do not inhale combustibles, such as burning cigarette butts.
4. Please place the product properly and keep it away from children.
5. Do not clean the product with severely corrosive liquids, such as Tianna water, paint, etc.
6. If the vacuum cleaner has no dust collection bin and filter screen, and is damaged or partially damaged, do not use it and replace it in time, otherwise the product will be damaged.
7. Before charging, please ensure that the switch is turned off. It is strictly prohibited to use while charging.