

Manufactured for
TELEBRANDS

Fairfield, NJ 07004
 ©2017 Telebrands
 www.telebrands.com

Made in China

LIMITATION OF LIABILITY

Liability limited to the purchase price of this product. Telebrands Corp. shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Back

**RED
 COPPER™**
Flipwich™



**READ ALL WARNINGS AND INSTRUCTIONS BEFORE USING PRODUCT.
 INJURY CAN RESULT FROM IMPROPER USE.
 SAVE THESE INSTRUCTIONS.**



PRODUCT MAY VARY FROM IMAGES SHOWN

Front

⚠ WARNING

- Not recommended for use by children.
- Open and check periodically to avoid overcooking.
- Do not heat the pan on a high setting.
- Surfaces may become hot, hold only by the handle.
- Not oven, dishwasher or microwave safe.
- Turn off the stove when you have finished cooking.

FOR BEST PERFORMANCE

Before You Start

1. Hand wash the Flipwich™ thoroughly.
2. To season, spread a light coating of vegetable oil over the inside grill plates of the Flipwich™. Close and lock with the handle clip.
3. Place the Flipwich™ onto your stove top and turn the heat to medium. Limit heat to the induction plate area. (Figure 1)
4. If flipping pan, be careful of hot liquids that may seep out.
5. Watch carefully and remove the Flipwich™ from the burner once the oil begins to smoke.
6. Let it cool down completely.
7. Wipe away excess oil with a soft cloth or paper towel
8. Repeat on the other grill plate of the Flipwich™, so that both sides are seasoned.

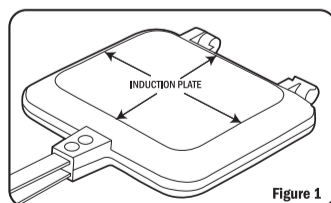


Figure 1

Inside

8. You are now ready to start cooking!
9. Refer to enclosed recipe booklet for suggested recipes.

To maintain the exceptional performance of Red Copper™ we recommend that you repeat this process at least twice a year.*

Recommended Cooking Surfaces



**Electric
 Stove Tops**




**Gas
 Stove Tops**



**Induction
 Stove Tops**

Cleaning

The Flipwich™ can be cleaned with a soft sponge and light dish washing detergent. Let air dry or dry off with a soft hand towel or paper towel. Do not put the Flipwich™ in the dishwasher.

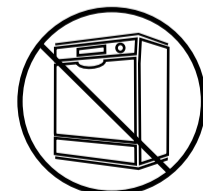

* If the performance of the non-stick coating diminishes repeat the seasoning process. (See #2)

Inside