

F7N USER MANUAL

Copyright(C1)2021, All rights reserved

E-mail: help@redtigercam.com Website: http://www.redtigercam.com/ Phone: +188 8966 8028

















WARNING: Be careful when using your camera and its accessories. Always be caution of your surroundings to avoid injuring yourself and others.

Make sure to follow all local laws including all privacy laws which may restrict recording in certain areas.

Contents

Meet your F7N	4
F7N Power Tools	6
Setting Up Your Camera	6
Playing Back Your Media	7
Customizing Your F7N	8
Parking Mode (Optional)	
Connect to the Redtiger App	
GPS Player (PC)	
Mounting Your F7N	
Maintenance	
Trouble Shooting	
Customer Service	
Product Information	

Meeting Your F7N



- 1. Screen
- 2. GPS Mount
- 10. Status Light



12. Lens



- 3. Up / WIFI Button
- 4. Mode / Confirm Button
- 5. Down / Button



 
- 6. Power Button 🖰
- 7. Micro SD™ Card Slot

.

F7N Power Tools



- 8. AV-In
 - USB Power Slot



1. Cig Charger (No Battery Protection)





2. Hardwire Kit (Parking Mode Needed) (Extra charge)

Setting Up Your Camera

INTRO TO F7N

Trustful Dashcam that quarding each ridding of yours.

LIPDATING YOUR CAMERA'S SOFTWARE

To get the latest features and best performance from your camera, make sure it's using the most current software.

- 1.Visit https://www.redtigercam.com/pages/firmware-1/update.
- 2. Update guide





POP-UP: Keep your SD card in good condition by reformatting it regularly. This will erase all of your media, so be sure to save it first.

- 1. Press M button and entre Settings
- 2. Press UP button > Format > OK



WARNING: This product is for DC 12v / 24v

Setting Up Your Camera

SD CARD

With your camera off, insert the SD card into the card slot with the label facing the back of your camera.

You can eject the card by pressing it into the slot with your fingernail.

WIRING SET UP

Connect your camera to a Cig charger using the included cig charge cable.

SD CARD

You'll need a micro SD card (sold separately) to save your videos and photos. Use a U3 Class 10 SD™ Card dedicated or your camera may malfunction.

SD cards can degrade over time and affect your camera's ability to save your media. Try swapping out an older card for a new one if you're having any problems.

POP-UP: Want to know what software version you're using? Here's where you can find out.

- 1. Press M button and entre Settings
- 2. Press UP button > Version

Setting Up Your Camera

POWERING ON

Short press () button to turn on your F7N.



POWERING OFF

Press and hold () button or 3 seconds to turn it of.



POP-UP:

Short press () > Front and Rear View > Front Only > Rear Only > Lock Screen > Screen Display Off

Playing Back Your Media

CHOOSE YOUR MODE

Press M button to entre Recording>Playback>Setting. Video mode will be auto-select when power on.



PLAYBACK

F >> Front Camera R >> Rear Camera



POP-UP:

- > Auto record in 30s none action
- > Long press UP to Turn On WiFi
- > Short press up to lock video
- > Short press DOWN to Capture a movement
- > Long press down to stop/play recording

Playing Back Your Media

PALYBACK

Short press M button to see your records.



When select a record > Long press M button 3s to edit your records.





POP-UP: Urgent Locked video will be created by camera sensed a collision or vibration (G-sensor on).

It can't be auto-recover but only format to save the important moment.

Select Lock Video to unlock and delete.

You can turn off G-sensor to avoid Locked Records.

Customizing Your F7N

SETTINGS

Short press to entre Settings menu.



Resolution > 2160P @30FPS

> 1440P @60FPS > 1080P @120FPS

Audio > Sound Recording ON / OFF

Date Stamp > Stamp ON / OFF

Loop recording > 1/3/5 mins

G-sensor > Off / Low / Medium / High

Fatigue Driving > A Reminder Will be Made During Speed Stamp 1h / 2h / 3h / 4h / off

GPS Stamp > Stamp ON / OFF

> Stamp ON / PFF

Customizing Your F7N

SETTINGS

Next page

Mirror Flip



Speed Units > KMH/ MPH

GPS Info > Display GPS signal strength

Rear Cam Flip > Vertical Flip Your Rear View

> Horizontal Flip Your Front View

APP > A QR Code for Redtiger app

WiFi > WiFi ON / OFF

Language > Choose Your Prefer Language

Time Format > 12h / 24h

Customizing Your F7N

SETTINGS Next page



Date / Time > Up Date With GPS

Time Zone > Choose Your Time Zone

DST > Daylight Saving Time ON / OFF

Frequency > 60HZ / 50HZ

Click Tone > ON / Mute

Screen Saver > Screen Go Off After 10s / 20s / 2mins

Parking Mode > G-sensor / Time-Lapse

Format-Reminder > Remind to Clear Data / Prompt formatting

Customizing Your F7N

SETTINGS

Next page



SD Card Format

> Clear SD card data

Card-Speed

> Card Speed Detection

Default Setting

> Reset All Settings

Version

> Software Version

POP-UP: In order to a Clean, Smooth, Comfortable using experience, we suggest you format your SD card once a month,

Parking Mode (Optional)

PREPARE YOUR HARDWIRE KIT

Since we considered some customers have no need of Parking Mode, there's no hardwire kit included in your packages. You could refer this line of words to contact us to get a free hardwire kit.

GETTING TO KNOW YORU HARDWIRE KIT

Features:

- > Low Voltage Protection
- > Multi Input Power
- > Universal Compatibility







WARNING: Wrong connection may disable Voltage Protection and damage your car.

 
Parking Mode (Optional)

INSTALL YOU HARDWIRE KIT

Red wire >> ACC >>> power off along the car

Yellow wire >> B+ >>> never power off

Black wire >> Ground e.g. screw



POP-UP: You could usually find your fuse box under the trunk or steering device.

You could cut the head of wires and connect it to your fuse directly if your fuses is small.

Parking Mode (Optional)

SELECT PARKING MODE

Enter Parking Mode In Settings

Setting >> Parking Mode

>> off / G-sensor / Time-Lapse 12h / Time-Lapse 24h / Time-Lapse 48h

G-SENSOR

- > Car off
- > " ACC disconnected " pop-up
- > Collision or vibration be detected
- An Unerasable record will be created in Lock space

TIME-LAPSE

- > Select 12h / 24h/ 48h
- A Record will be created in 1 fps during your parking time
- > 1 min = actual 12 mins
- > Collision or vibration be detected
- > An Unerasable record will be created in Lock space

POP-UP: 1 fps = 1 image during 1 second.
G-sensor could be activated by a deceleration zone.

Parking Mode (Optional)

WRONG INSTALLED

Connection		Driving	Parking			
Ξ	ACC B+ Ground	ON	ParkingMode	Right		
Ξ	ACC No connection Ground	OFF	OFF	Wrong		
Ξ	ACC ACC Ground	ON	OFF	Wrong		
Ξ	B+ ACC No connection	OFF	OFF	Wrong		
Ξ	No connection Any power Ground	OFF	OFF	Wrong		
=	B+ ACC	ON	OFF	Wrong		

Parking Mode (Optional)

PARTICULAR WRONG CONNECTION

Connection	Driving	Parking	
B+ B+	ON	Always On	
— D+	ON	Aways Oil	

- > The camera will run ParkingMode normally, but your car battery will be ran out under this connection.
- > The ParkingMode will normal working in screen off status. Unless there is a collision or vibration triggered G-Sensor.
- > Please check if your camera working after 15mins your car is off.

Ground

Connect to the Redtiger App

DOWNLOAD APP

- 1. Download our App from:
- https://www.redtigercam.com/pages/app
- 2. Scan QR Code from your F7N
- 3. Download from Apple APP Store or Google Play Store



Teleport to WiFi operation: https://youtu.be/_NgPEb_G14c



Connect to the Redtiger App

CONNECT YOUR F7N



WiFi Password: 12345678

> Connect Only This Time

POP-UP: This is to avoid series connection between different device.

Some device may prompt that the software contains virus, you could run the installation as an administrator to download App.

Connect to the Redtiger App

ENJOY REMOTE CONTROL



- > Horizontal Flip
- > Full Screen Display
- > F / R View switch > Mute
- > Real-Time Speed
- > GPS Info
- > PlayBack
- > Stop / Start Record
- > Photo Taking
- > Settings

Connect to the Redtiger App





> Enjoyed Most of Functions on Your phone



GPS Player (PC)

DOWNLOAD GPS PLAYER

Download our GPS Player from website: https://www.redtigercam.com/pages/gps-player



Transfer your record to computer



 


GPS Player (PC) USE YOUR GPS PLAYER Footage Track H 0 0 4 File Name 00000 Choose to see your Front / Rear View See your Speed and Location



Mount your camera

HOW TO MOUNT YOUR CAMERA



Teleport to F7N & Rear cam Mounting: > https://youtu.be/dS1YN7Zry0



Maintenance

MAINTEN YOUR CAMEAR

Do not directly plug and unplug the cable or SD card, please perform related operations after camera off.

We do not encourage you connection your camera with other hardwire kit, but if you insist to do this, please have a look of those lower than 6V and higher than 2.5A.

Do not expose to the sun for a long time is the best, camera will heat on during its working, any damaged by high temperature will be added to 1 year free replacement warranty.

Trouble Shooting

WIFI CONNECTION GOES WRONNG

Connection Prepare > Mobile data / VPN is off

- > 16 ft less close to your F7N
- > Only allowed 1 device connection
- Connection Notice

> WiFi password: 12345678

- > Connect only this time

OTHER PROBLEM

Won't enter Parking Mode > Hardwire kit needed

- "ACC disconnected" pop up, then entre Parking Mode automatically
- > Blue light on + Red light flash

Camera always on after Car turned down

- > Wrong connection of Red wire and Yellow wire
- > Please connect red wire with ignition fuse

Mass Storage

> Use USB cable with Data transfer function. please use USB cable without transfer function

Trouble Shooting

OTHER PROBLEM

Screen Resolution

- > 4K = 2160P = 3840*2160
- > 2.5K = 1440P = 2560*1440

Over Heat

> Camera could working -4°F - 150°F

RECEIVED DEAD CAMERA?

Use USB cable to connect your camera with computer and check if the screen turn on

- > If not, please unplug sd card and use a pin and press the Reset button at the bottom of camera
- > Reconnect your camera and press

Trouble Shooting

ULTIMATE SOLUTION

- > Use different charging ways to see if the camera work.
- > Use a pin or needle to press the reset button on the bottom of dashcam.
- > Unplug every connection of camera.
- > Plug micro USB charger to see if the camera working. If not, please use your personal USB charge and check again.
- > Check your SD card is U3 Class10, if not, please change or leave message to us to get it.
- > Plug SD card and see if the camera working, if not, please download the latest firmware to solve it.

Please download our latest firmware to upgrade your machine: https://www.redtigercam.com/pages/firmware-1

- The upgrade steps are:

 > Download the firmware to the computer.
- > Copy the firmware called "FWQ70A" to the root directory of the SD card.
- > Insert the SD card into the machine, then insert the power cord and short press the power button (do not turn off the power during this process)
- > During the upgrade process, the blue light is always on and the red light is flashing. After the upgrade is completed, the machine will automatically turn on i.e. done. You can refer to this video to upgrade: https://youtu.be/lMz1g3O9SPE.
 - > If the method above didn't solve your problem, feel free to contact us and please leave current address which is needed if the camera needs to be replaced later.
 - This solution could be dealing with multiple problems > Won't turn on > Restart itself > SD card error > Can't auto recover > Can't playback



Customer Service

WORDS FROM HEART

ince our products are related to the safety of customers, we are committed to product quality and high-quality after-sales, we want to achieve the best product quality.

In view of no product is flawless, we sincerely believe the true measure of the company's character is what it does *after* its product does not meet expectations, we feel sorry for those customers, but deeply grateful for them to make us one more step close to your most rustful auto-mobile after-market brand.

We are willing to provide 1 month free return for your product, 1 year limited warranty, and lifetime technical support. Your product is guaranteed to be free of defects in materials and products from the date of purchase. In addition, you can also exchange your 1 year old product for a discounted price by contacting us online.

Behold the motif of complexity to us, simplicity to others, it's such a pleasure to listen to your advice, and we will take your problem from here.

Redtiger Customer Service Team

Email

Mirror Dash Cam
Email: support@redtigercam.com
Mini Dash Cam
Email: help@redtigercam.com
Business Cooperation or Others Email:
contact@redtigercam.com

Customer Phone Service: +1 888 966 8028

Business Day, Mon-Fri 6 AM-12 AM, 1 PM-8 PM EST (GMT-4)





APP







FACE BOOK

Product Information

BASIC INFO OF YOUR CAMERA

Mode > F7N G-sensor > 3 Axis G-sensor

Display Micro SD card > Micro SD 32GB-256GB > 3.16 inch IPS

Power > 12V/24V Record photo > Main body display / Computer

/ Smartphone Aperture > 1.5

Temperature > -4°F - 150°F Battery > Super capacitor

Warranty period > 1 Year Video Format > Video:MP4 Still image: JPG

> 1/3/5mins

> Normal recording/Emergency recording Recording method

Screen View > Front & Rear view/Front view/Rearview

Resolution > Front 3840*2160P.Front 2560*1440P

Front 2160P+Rear 1080P.Front 1440 P+Rear1080P

GPS > Yes

Loop recording

Audio > Support sound recording and playback



Always go-to dash cam

About Us

In an automobile-interconnection era, everything about charm journey is within the reach of eyes.

Product and service are the foundation of Redtiger. We have an expert research and development team of "self-driving experts per capita".

Based on the personal needs of users,

we use technology to drive product innovation.

In the future, we will continue to explore the boundaries of tech to open up a broader vision for driving.