


reesa®

Food dehydrator

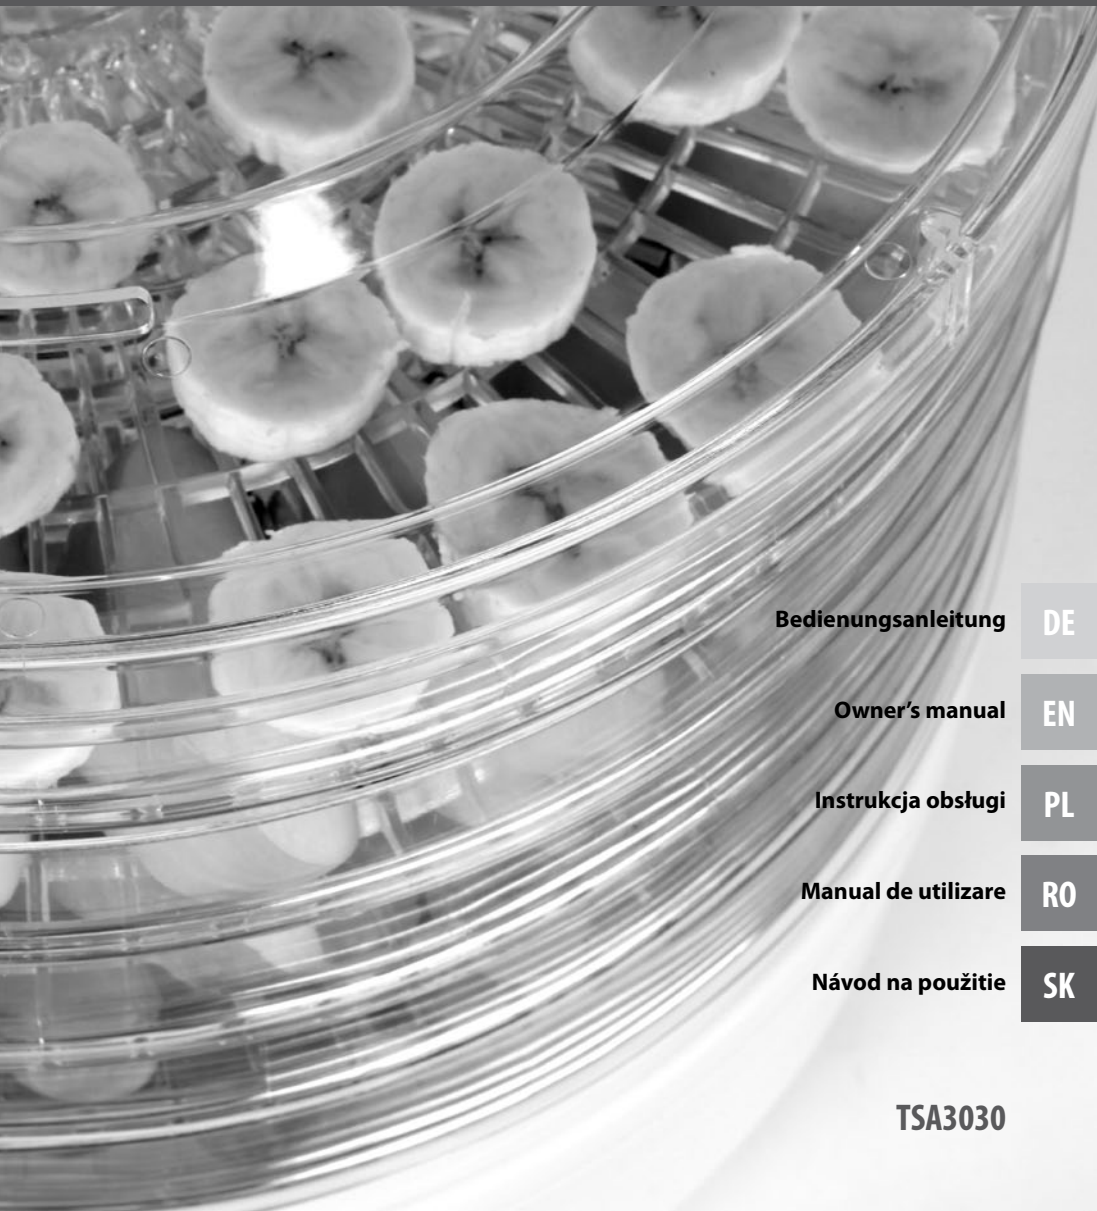

Bedienungsanleitung

DE

Owner's manual

EN

Instrukcja obsługi

PL

Manual de utilizare

RO

Návod na použitie

SK

TSA3030

- Store the device in dry, dark place, out of the reach of children.
- None of the parts of the device is suitable for cleaning in washing machine.

REPAIRS AND MAINTENANCE

- The device has no user-serviceable parts. Do not attempt to repair this appliance yourself.
- In case of damaging this device or its power cord/plug, contact authorized service point for check-up or repair.

SPECIFICATIONS

5 transparent containers

Container diameter: 32 cm

Total container capacity: 5 kg

Adjustable temperature: 35-70°C

ABS housing

Power supply: 220 – 240 V, 50/60 Hz

Power: max. 250 W



English
Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)
 This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Made in China for LECHPOL Zbigniew Leszek, Miętne, 1 Garwolińska Street, 08-400 Garwolin.

teesa®

www.teesa.pl