

# How to adjust the length of the strap.

1. Find the right place.



2. Align the position and turn the meter remover.



3. Remove, adjust length.



4. Tap in the direction of the shear.

