

**STOVES / RECHAUDS :
CAMPING KITCHEN 2
MAXI / MULTI-COOK**

CAMPINGGAZ®



CAMPING KITCHEN 2 MAXI

 
 
 
 
 
 


CAMPING KITCHEN 2 MULTI-COOK

**STOVES / RECHAUDS :
CAMPING KITCHEN 2
MAXI / MULTI-COOK**




CAMPING KITCHEN 2 MAXI

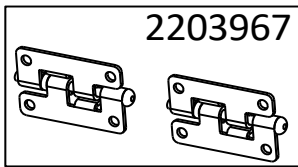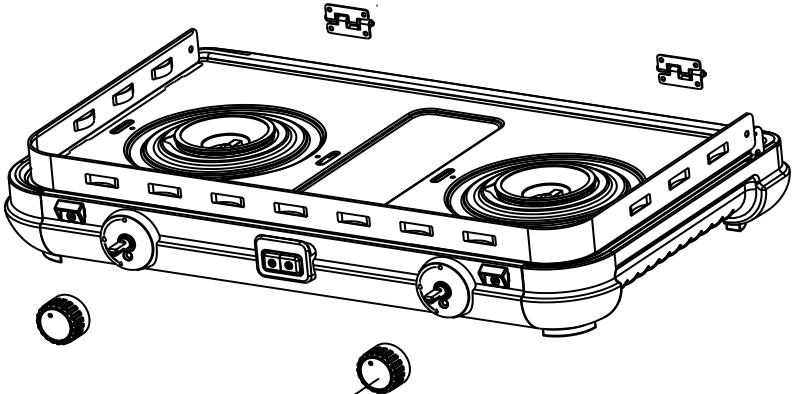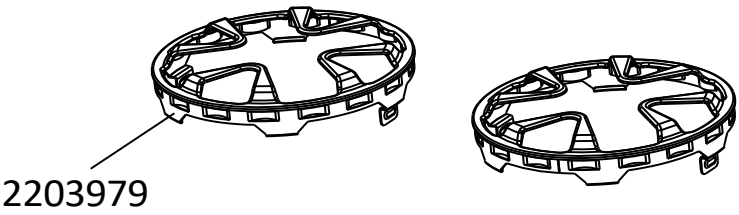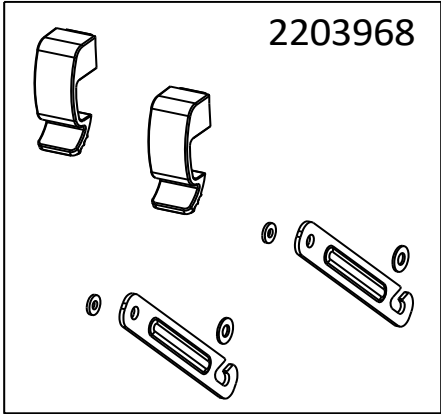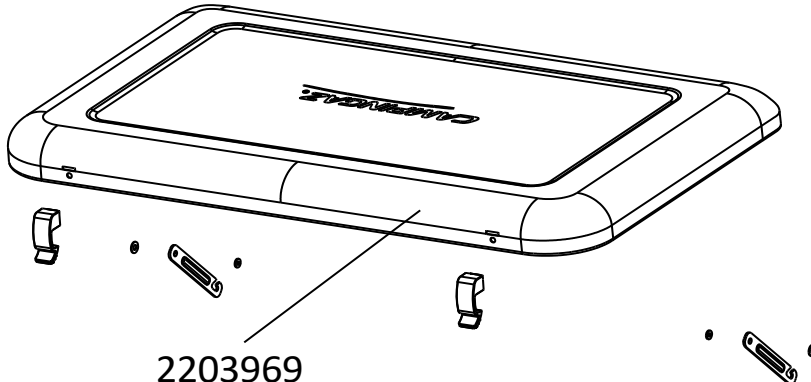


**STOVES / RECHAUDS :
CAMPING KITCHEN 2
MAXI / MULTI-COOK**



 
CAMPING KITCHEN 2 MULTI-COOK

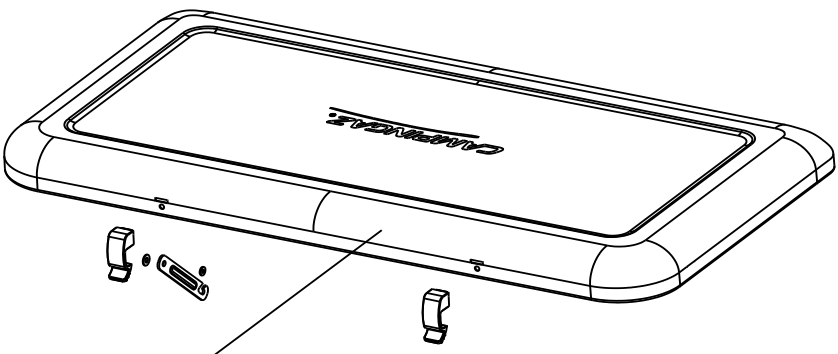


2203993

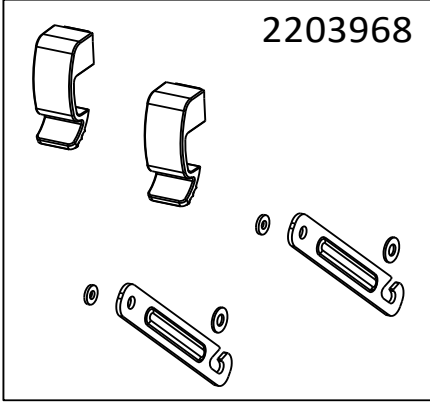 



2203968

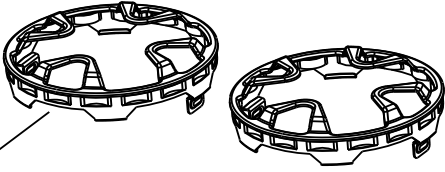 


2203980

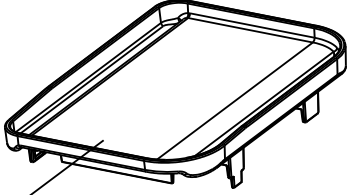 


2203995

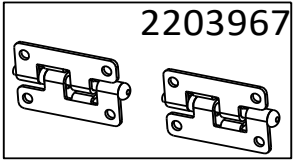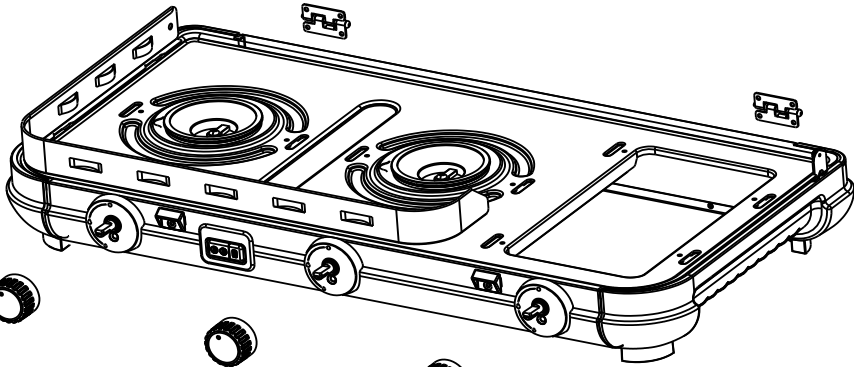  

2203967

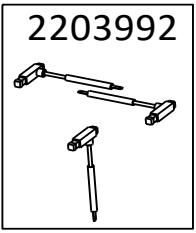 

2203992

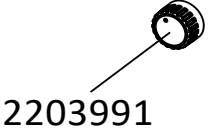 

2203991

**STOVES / RECHAUDS :
CAMPING KITCHEN 2
MAXI / MULTI-COOK**



SPARE PARTS REF.	EN DESCRIPTIONS	FR DESCRIPTIONS	MAXI	MULTI-COOK
2203967	LID HINGE (x2) WITH SCREWS	CHARNIERES COUVERCLES (x2) AVEC VIS	X	X
2203968	LID ACCESSORIES	ACCESSOIRES POUR COUVERCLE	X	X
2203969	LID	COUVERCLE	X	
2203979	PAN SUPPORT (x1)	SUPPORT CASSEROLE (x1)	X	
2203980	PAN SUPPORT (x1)	SUPPORT CASSEROLE (x1)		X
2203991	KNOB (x1)	VOLANT (x1)	X	X
2203992	PIEZO (x3) + SCREW (x2)	PIEZO (x3) + VIS (x2)	X	X
2203993	LID	COUVERCLE		X
2203995	SMALL COOKING GRIDDLE	PETITE PLAQUE DE CUISSON		X