



STEP 1
PULL THE UNLOCK BUTTON RELEASE THE WATER TANK

STEP 2
RELEASE THE WATER TANK

STEP 3
PULL BACK THE BLACK RUBBER SEAL AND FULL IN

STEP 4
INSERT THE WATER TANK TANK (FOLLOW DIRECTION OF THE TRIANGLE)

STEP 5
STEAM SETTING (NO MED. HING)

 
STEP 6
ON/OFF, HEATUP/ DOWNBUTTON

SAFETY CAUTIONS

WARNING: THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM. IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BATHS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.

This product is not suitable for use in bath or shower. THE STYLER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- Do not leave the styler unattended when switched on.
- Allow the styler to cool down before storing it.
- Do not immerse in water or other liquids.
- Do not place styler on soft materials e.g. carpet, bedding, towels, rugs etc.
- Always ensure the voltage to be used corresponds to the voltage stated on the Unit.
- Keep this product out of reach of children.
- Avoid allowing any part of the hot plates to contact the face, neck or scalp.
- Do not wrap the cord around the unit. Check cord regularly for any signs of damage.
- Damaged cords can be dangerous. If the supply cord of this unit becomes damaged, discontinue use immediately contact us for repair or replacement in order to avoid a hazard.
- Special tools are required or any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- We do not accept responsibility for damage to the product, persons or other items caused by misuse, abuse or non-compliance with these instructions.
- Do not use any other liquid other than water in your Styler to avoid damage to



HOW TO FILL WATER INTO STEAM TANK

STEP 1: Ensure the Styler unplugged from power outlet. Do not attempt to fill the Tank while the Styler is on hot.

STEP 2: Release the Water Tank by using the Unlock button see FIG.1.

STEP 3: Hold the water Tank upside down in your hand in the carefully pull the black Rubber seal using the tab until it opens the Tank (Do not pull hard as to damage the rubber seal), see FIG.2.

STEP 4: Fill the water as shown in FIG.3 fill the Water Tank. Replace the black Seal rubber securely (should you overfill wipe off any excess water with a clean cloth).

STEP 5: Replace the water Tank back on top of the Styler as shown in FIG.4. On the top of the Water Tank you will see an arrow. Line this arrow with the other arrow that is on the Styler. Insert the Tank on a slight angle with the arrows in first. Once line up click/press into position. See FIG.5. You will hear a click when it is properly in place.

SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty materials or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

If you found the Tank have a little water that is normal, because our product is 100% tested will water as part of our quality control procedure.

The white color styler edge will become a little yellow after used for a long time at high temperature, this phenomenon is normal.

STEP 3: Twist your wrist. (the one holding the Styler), about a half-turn, then pull then twist again, then pull. Keep repeating this until you reach the end of your hair. For a more beach feel, keep the very ends of your hair out of the styler.

STEP 4 (ALTERNATIVE): Twist and pull just as Step 3 indicated, but for a tighter, more curly curl, twist the mid-shaft to ends around the entire iron mimicking what you would do with a curling iron.

STEP 5: Continue with Step 3 (either version) throughout your entire head of hair. For more variation and imperfection with your style, you may opt to switch the direction of you curls, vary the section size, and begin the curls at different parts of your sections.

You may want to change the direction of your curls near your face. (depending on the side), if you wish to have them sweep away from your face. Again, this is a personal preference that is entirely up to you.

STEP 6: Comb your fingers through to break up the curls. Take your hands and shake your hair out.

Keep in mind that using the Styler to curl is a technique that takes some practice, so be patient with yourself. This technique is meant to be sexy, creative, and flirty, so just have fun with it! Now, it's your turn to try it out.

SUGGESTED STYLER TEMPERATURE SETTING	HAIR TYPE
Low 150°C / 330°F	Fragile, very fine textured hair
Medium 160°C / 330°F	Normal, medium textured hair
High 180°C / 350°F	Thick resistance, coarse textured hair

CLEANING AND MAINTENANCE

Ensure the unit is unplugged and cool. To maintain the effectiveness of your product wipe clean after use with a damp cloth. Do not use an abrasive cleaning fluid to clean, all damage will occur.

Tips:
Please do not fill oily or unknown hair treatment liquid which without the styler manufacturer approval into the tank it may do harm to the tank and cause quality problem.

STEAM RELEASE SETTING

There are 3 settings on the Steam Release Dial. Please see the diagram below. The settings are:

- FIG.1 OFF- No Steam
- FIG.2 Medium Steam
- FIG.3 High Steam

To release the Steam turn the button clockwise to the desired steam position.

Caution: The Steam activates over 100°C/212°F

As you start to use the Styler you will notice steam start to come through the steam vents.

FEATURES & BENEFITS

1.5 inch width plate

Steam tank

Steam tank switch

Temperature display

Switch

Gear +

Gear -

Plate-locking switch

5 Conditioning Steam Vents

Flashing LED Light Indicator

OFF / MEDIUM / HIGH Steam Setting

INSTRUCTIONS FOR USE

Before use, make sure hair is clean and tangle-free. Fill the tank to your desired level with water. (Our product will have a temperature difference)

Before use remove yellow protect varnish from the surface plates. Plug in the unit, press and hold the on/off switch until LED light turns on. Temperature dial switch to desired temperature is reached and then the unit will be ready to use.

Run the styler through the entire length of the hair without stopping. Repeat only twice per section to prevent hair damage.

Straightening

STEP 1: Prepare your hair. Make sure your hair is clean & free of oil.

STEP 2: Depending on your hair type and hair length, the information below is aimed at Medium hair length and should be changed to a 1.25 wide x 1.5 wide section of hair.

Move the Styler over the sectioned hair starting at the roots about 1-4 cm away from the scalp. Then the Styler slowly through to the ends of the hair until it is released. Repeat this process section by section until you are completely straightened, soft and smooth.

Curling

The steam hair straightener with its 1.5 inch wide plates enables you to create soft curls, waves, and lots of other hairstyles. You are able to vary the texture to give a purposefully messy look to your hair and that is messy, chic and trendy.

STEP 1: Prepare your hair. Make sure your hair is clean & free of oil.

STEP 2: Take a small section of hair, hold it to your Styler. You section is clean, vary the size or more narrow a beautifully styled look this up to you. You may also decide where you would like your curls to start all the way down your Styler section.