


Press feet to
PLAY!



405202A

Caution for proper operation.

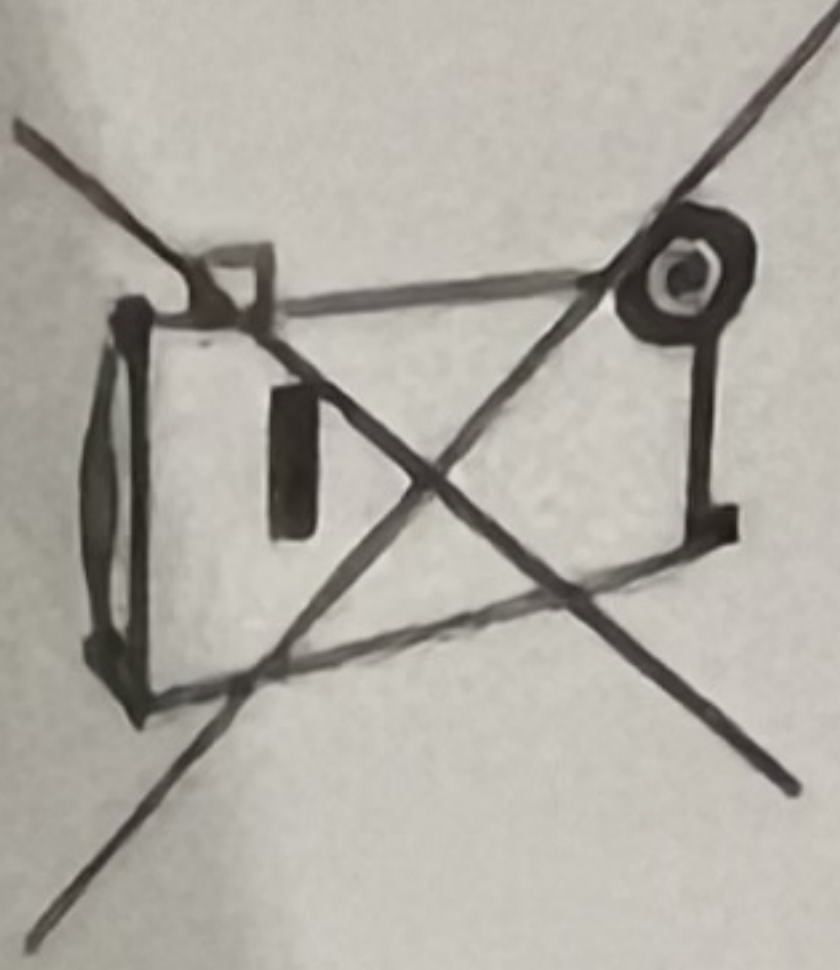

To Replace Batteries:

1. Open Hook and Loop Fastener to expose battery compartment.
2. Remove screw.
3. Open door and insert 3 AA size batteries.

- Non-rechargeable batteries are not to be re-charged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Charging removable batteries is only to be carried out under adult supervision.
- Different types of batteries (alkaline, standard carbon-zinc), or rechargeable (nickel-cadmium) or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Batteries should be removed from the toy if it is to be stored for a long period of time.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Please retain this packaging for future reference.



0 28399 08507 1

GUND

© GUND, a Division of Emerson Ltd.
Emerson, NJ 06611 USA
Distributed in Europe by Emerson Ltd.
Business Road, Kingstown, Cardiff, CF14 0EA

CE



Made in China
G81182X

www.gund.com