


**MOJOGEAR****EVO XL**

# MANUAL

For information  
in other languages,  
please visit:



[www.mojogear.eu/manuals](http://www.mojogear.eu/manuals)

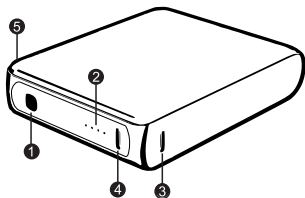

## Overview

1. Power button
2. LED power indicator
3. USB-C Input/Output 1
4. USB-C Input/Output 2
5. USB Output

## How to charge the power bank

Use the included USB-C cable to charge via one of the USB-C ports. Connect the charging cable to a USB outlet (wall charger, laptop).

To achieve maximum charging speed, we advise to use a USB outlet and cable that supports 18W fast charging. Depending on the charging speed, it can take 5 to 16 hours to fully charge the power bank.

## How to charge your devices

Connect a charging cable to the USB or USB-C port on the power bank. For devices with a USB-C port, you can use the included cable.

To use Quick Charge or fast charging via USB-C Power Delivery, please use a supported charging cable. You can charge up to three devices simultaneously, using both USB-C ports and the USB port.

## Power button & indicator

- The power bank will turn on and off automatically.
- Press the power button to check the remaining battery power and to turn on the power bank when it's turned off.
- Press the power button twice to turn off the power bank manually.
- Hold the power button for 10 seconds to reset the power bank. Afterwards, please charge the power bank before using it again.
- When being charged, one of the LED lights will blink.
- When all 4 lights are continuously on, the power bank is fully charged.
- When fast charging is active, the bottom light will turn green.

## Technical details

Name	MOJOGEAR MG-PB6 EVO XL 20000mAh
Size	103.0 x 78.8 x 25.0 mm
Weight	334g
Battery	High Density Lithium Ion
USB-C Inputs	DC 5V-3A / 9V-2A / 12V-1.5A
USB-C Outputs	DC 5V-3A / 9V-2.22A / 12V-1.66A (Power Delivery 3.0)
USB Output	DC 5V-3A / 9V-2A / 10V-2.25A / 12V-1.5A (Quick Charge 3.0)
Battery capacity	20000 mAh / 74Wh

## Safety instructions

- Do not use near explosive gases or flammable materials.
- Do not expose to excessive heat, such as sunshine or fire. Avoid abrupt changes in temperature.
- Do not use or store in humid or wet conditions.
- Do not throw, shake, vibrate, drop, crush or mechanically abuse the power bank.
- Do not burn or incinerate.
- Do not cover with objects which may affect the heat dissipation.
- Avoid contact with battery chemicals.
- Keep out of reach of children

**MOJOGEAR**

MOJOGEAR develops high-quality products for smartphone filmmakers, mobile creators and everyone else who wants to get the most out of their phone or camera. MOJOGEAR is proudly based in The Netherlands.

**All MOJOGEAR products are covered by a 2-year warranty.**

If you have any questions or feedback, please let us know at [support@mojogear.eu](mailto:support@mojogear.eu). We'd love to hear from you!