HOW TO USE YOUR PRODUCT

Please be carefully read the "important safety instructions" before using your product.

TAKE CARE OF YOUR PRODUCT

- 1. Please do not carry out any maintenance or repair work not mentioned in the operating instructions or not recommended by after-sales service personnel.
- . Please remove the power plug before inspection. If the product can not run, please first check whether the power socket is powered and whether the plug has been correctly inserted into the socket and the supply voltage correct or not..

DISPOSAL

- . This product is made of high-quality recyclable materials, please recycle as much
- 2. The recycle sign indicates that the product shall not be disposed as domestic waste within where of country of sale.
- 3. In order to prevent uncontrolled disposal from causing harm to the environment or human health, please recycle in a responsible way to promote the sustainable reuse of materials.
- 4. To return the used product, please contact the retailer who sold the product and they can safely recycle the product without polluting the environment.

NAMES AND CONTENTS OF TOXIC/HARMFUL SUBSTANCES

The hazardous substances are classified according to components to meet the laws, regulations and other requirements in where of country of sale.

Part Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBA	×	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Metal parts	×	0	0	0	0	0
Wire and interface	×	0	0	0	0	0
Accessories	×	0	0	0	0	0

This table is prepared in accordance with the provisions of SJ/T 11364.

 
O The content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T26572-2011

X The content of the hazardous substance in one homogeneous material of the component

The hazardous substance contained in the components marked "X" cannot be replaced due to

Your product may not contain all of the above components depending on the product model designed.

Electronic and electrical products sold within the People's Republic of China will be printed Electronic and electrical products sold within the People's Repul with the symbol of "Environmental Protection Period" (EPuP). The number in the circle represents the general environmental in





High speed hair dryer warranty certificate

User Profile		
User Name:		
Contact No.:		
e-Mail Address		
Contact address		
Postal Code		

Item No. / Item Name:

Manufacturer Name	
and Address	
	Trader Information
Trader Name	
Contact No.	
Contact address	
Sales date	
Postal Code	

Product Information

AFTER-SALES SERVICE

High speed hair dryer repair record

Product Informations		
Item No.:		
Item Name		
Service Date		
	Fault Diagnosis	
Repair Date		
Fault Description		
Fault Cause		
	•	





temperature due to the fault of the heating element or the electronic component.

The hair dryer will be immediately disconnected when NTC fails or does not work as usual.

COMBINED TYPE NOZZLE

General air collecting mode / Professional styling m Original design internal and external duct air channe Effectively heat insulation from the nozzle Fasy disassembly and assembly and protect hands without burning

AUTO MEMORY

Switching to hot air state mode-3, while five seconds later it will auto enter the constant temperature state.

OPERATING INSTRUCTIONS

POWER BUTTON: ON / OFF

AIR VOLUME BUTTON Indicator light: Blue light 1 2 3

HOT AIR BUTTON Indicator light: Red light 1 2 0 3 000

MODE EXCHANGE BUTTON: Cold mode / Hot mode



ROUTINE MAINTENANCE



- the filter regularly Do not clean the filter with water.

3 Do not power on

when to clean the filter.

- Do not use too much force on the filter. 5.Please clean the filter
- with a soft cloth or brush.
- 6 Please make sure that the filter is mounted properly before use.
 - 12. Do not pull the power cord with force. Please hold the plug rather than the power cord when to pull off the plug. Do not use extended cable.

Please ask the installer to help.

- 13. Do not pull or press the power cord with force. Keep the power cord away from the heat surface. Do not wind the power cord on the product.
- 14. Do not use the product and contact us when it is not transported according to the design, seriously impacted, damaged by falling from a height, placed outdoors or falling into water.
- 15. Do not put the product at work on a soft cushion or blanket.
- 16. In order to increase protection, it is recommended to install a residual current device (RCD) with rated working current not exceeding 30mA in the power circuit Please contact the RCD installer.
- 7. After the hair dryer blows hot air, the air outlet and nozzle will be hot. Please do not touch it to avoid scalding.

OPERATION PRECAUTIONS

- Thank you for choosing our products! ■ If you purchase a PROFESSIONAL VERSION of the product (3.3m long cord),
- This product can not be used by those with sensory impairments or intellectual disabilities or those without related experience and knowledge (including children). unless they are under the supervision and guidance to ensure that they can use the product safely
- Please do not use this product as a toy. Please take care of children when they use or approach it to make sure that they will not play with the product as a toy.
- 4. If this product is used in the bathroom, please remove the plug after use. When the plug is connected, even if the product has been turned off, it may cause electric leakage if it is close to the liquid.

electric shock and interference injury.

Do not use this product near bathtub, shower, washstand or container with liquid.

circuit regularly opened and closed by the utility sector and can not be connected

OPERATION PRECAUTIONS

9. In order to provide extra protection, it is recommended to set the rated leakage

10. Do not use this product for any other purposes except drying your hair.

11. Do not touch the plug or any part of the product with wet hands.

current not exceeding 35mA when to installing the residual current device (RCD).

to any socket with unstable power or may be closed

- 6. Once the power cord was damaged, in order to avoid any danger it must be replaced or repaired by any one of manufacturer, agent or repaired personnel with relevant qualifications.
- This product is equipped with a non self-resetting thermal safety cut-off device to prevent the product from overheating. If the power is cut off, please remove the plug from the main socket to cool it down. 3. Repairing or replacing the product within the warranty period will not extend the
- warranty period. 8. Attention: In order to avoid the danger caused by accidental reset due to thermal cut-off, this product cannot use timer for power supply, cannot be connected to the
 - affect your legal rights.

We will not provide the warranty service (repair or replace) if the functional failure

- 2. Accidental damage caused by misuse, negligence, carelessness or failure to operate the product according to the operating instructions.
- 3. Use the product for any other purposes other than drying your hair.
- 4. Use the product for dedicated or commercial purposes.
- 6. Use the parts or accessories purchased through unofficial sources.
- 8. Repair or replacement carried out by others rather than the brand maker or its authorized agent.
- 9. Normal wear (e.g. fuse, etc.).

If you have any questions about the warranty scope, please contact our distributor. The warranty takes effect from the date of purchase (except for late delivery).























































 















Part Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBA	×	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Metal parts	×	0	0	0	0	0
Wire and interface	· ·	0	0	_	_	_

exceeds the limit specified in GB/T26572-2011

 the limitation of global technology. PCBA: Including Printed Circuit Board and its subassembly electronic components.





Item No.:	
Item Name	
Service Date	
	Fault Diagnosis
Renair Date	

Repair Informations				
Cause Analysis				
Replaced Accessories				
Repair Ready Date				
Repair Center				
Repairer				



MULTIPLE PROTECTION FUNCTIONS

The hair dryer will be immediately disconnected when its temperature exceeds the setting

While the hair dryer is operation, if the motor suddenly fails or does not run due to electronic component failure, it will be immediately disconnected.





Align the positioning point above



Remove the dust from the filter with a soft cloth or brush

- As the nozzle with magnetiction, please stay away from pacemakers, defibrillators, credit cards and electronic storage media in order to prevent any risk of fire,
 - If you purchase a HOME VERSION of the product (1.5m long cord), you will enjoy a TWO-YEAR warranty service free of charge from the date
 - If you have any questions or have to repair the product, please contact your local agent for after-sales service

OUR CUSTOMER SERVICES

you will enjoy the HALF-A-YEAR warranty service free of charge from the date

VALID WARRANTY TERMS AND CONDITIONS

If the fault caused by functional failure is found within the warranty period after purchase or delivery, the product can be repaired or replaced (The repair or replacement is at the discretion of the party who provides the warranty. If there are no available parts or the parts have been discontinued, the party can use the parts with complete functions)

- 1. The brand maker or authorized agent will provide the warranty service after receiving the original delivery certificate or purchase receipt. All work will be done by the brand maker or its authorized agent.
- 2. Any part replaced by this brand will be owned by the brand maker.
- 4. The warranty service is a supplement to the legal rights of consumers and does not





is caused by the following causes:

- 1. Damage caused by failure to follow the recommended maintenance plan.
- 5. Do not use the product or parts according to the operating instructions.
- 7. Installation error (except for the installation provided by the brand maker).













