

Bluetooth Karaoke Microphone Instructions

English

I. Basic Button Operation

1. 

Long Press : ON/OFF

Short Press: Mode switching

2. 

Press: the previous song

3. 

Press: the next song

4. 

Short Press: Play/Pause.

Long Press: Turn on/off LED lights.

5. 

Short Press: Mic ON/OFF

Long Press: change different magic sounds (Under karaoke mode).

6. "VOL + "

Increase music volume

7. "VOL - "

Decrease music volume

8. "MIC + " and "MIC - "


Gradually push to adjust the sound of mic

9. REMIX

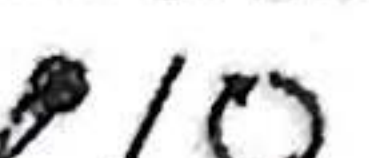

Gradually push to make your voice better

II. Multi-function Operation

➤ Wireless Karaoke

1. Turn on the power: long press power button  to turn on the microphone.
2. Bluetooth connection: Open the Bluetooth of the mobile phone, click it to connect "WS-858L", and the prompt sound appears to indicate successfully connection.
3. Turn on the music on your phones or Pads. (Don't need to download a special App, just use some normal audio software, such as Spotify, iTunes, YouTube etc..)
4. Start Karaoke and adjust some setting according the **Basic Button Operation**

➤ Bluetooth Speaker Function

1. Plug the TF card with music and play music, the microphone can be used as a Bluetooth speaker.
2.  /  Short press to switch the music modes (Original sing / Accompaniment).