





CZUR ET16 Plus Book Scanner Quick User Guide

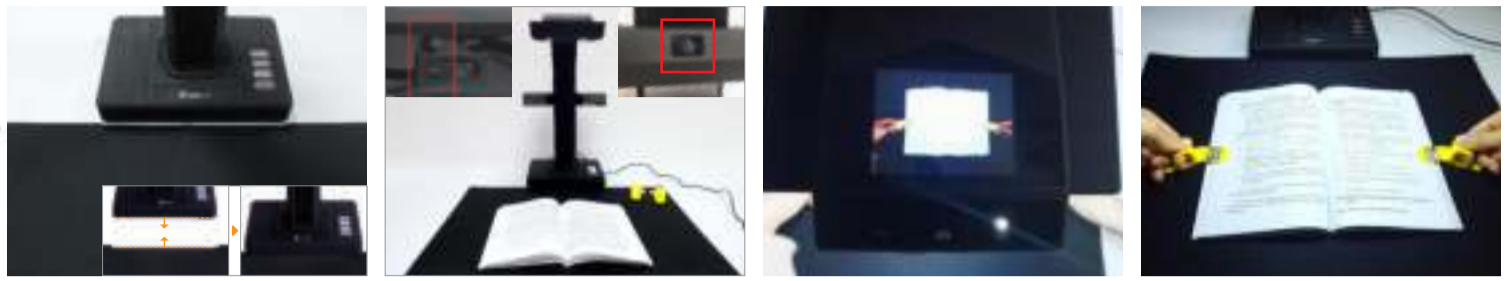

1. Spread the black document pad under the scanner's head. Ensure that the black document pad aligned with the device without any gap.
2. Check the power switch is on, through the LCD on the head portion to see if the pad covers the entire screen and ensure that the desk surface or random edges are not included within the scan.
3. When scanning magazines, coated paper, photo and other glossy materials, switch the anti-reflection side lights ON and main lights OFF for best effects.
4. Use the finger cots hold down left and right edges of the book (This can be removed by software automatically).

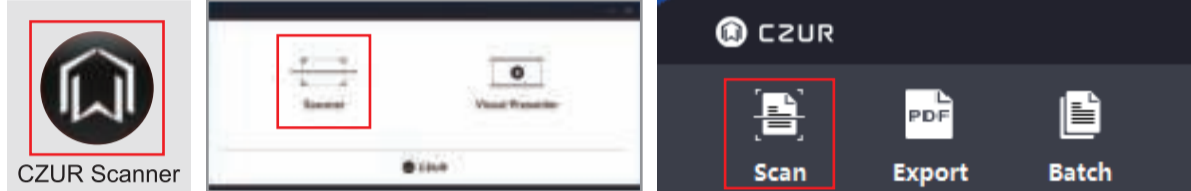

Start CZUR Scanner software, click the [Scanner] function, the main menu pops up. Choose [Scan] on the top and enter the preview window. When scanning books, the 3 laser lines of the scanner must be on the covered pages, and turn the page after flash of laser lines.


Open file location, if necessary, rename the folder.
 Set file saving path, if necessary, create a new folder.
 This frame shows the under processing images.
 For all functions the Tooltips will fade-in.
 Auto scan on: system automatically scans after each flipping.
 After scanning and processing images, click here to close the preview window.
 Review your needs to select proper Color mode and Processing method. e.g. For book scanning usually [B&W] and [Facing Pages].
 Scan button

The scans can be exported as PDF, Searchable PDF, TIFF and OCR(Word). E.g. here after selecting languages and confirming, a new OCR(Word) file is generated.
 Support "Batch" processing of multiple modes. E.g. "Crop" the images with specific area and confirm.
 Select images to be processed.
 Optimize the processed separate image.
 Setting basic parameters of software (System, Scanner & Visual Presenter functions).




CZUR ET16

Book Scanner Quick User Guide

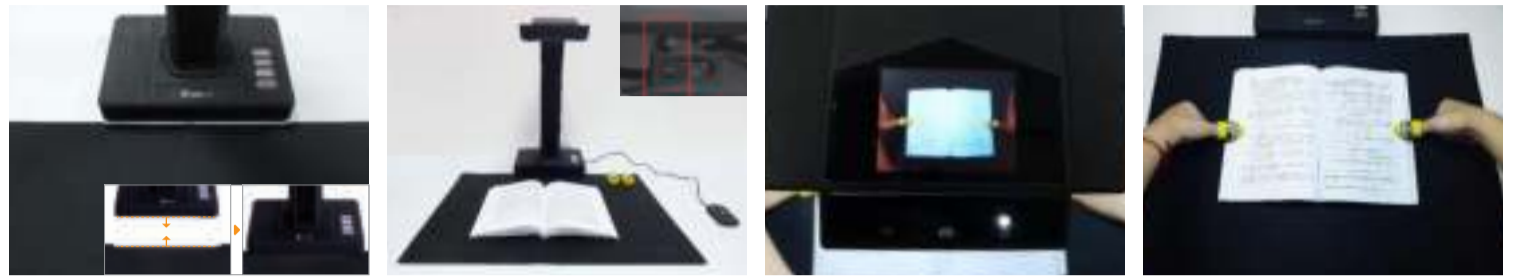

1. Spread the black document pad under the scanner's head. Ensure that the black document pad aligned with the device without any gap.
2. Check the power switch is on, through the LCD on the head portion to see if the pad covers the entire screen and ensure that the desk surface or random edges are not included within the scan.
3. Use the finger cots hold down left and right edges of the book (This can be removed by software automatically).

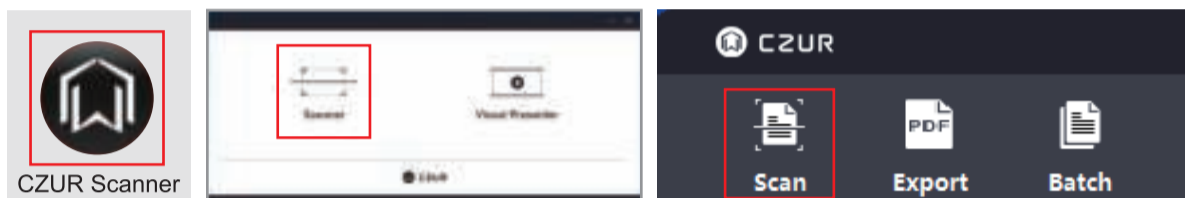

Start CZUR Scanner software, click the [Scanner] function, the main menu pops up. Choose [Scan] on the top and enter the preview window. When scanning books, the 3 laser lines of the scanner must be on the covered pages, and turn the page after flash of laser lines.

