

WAKA WAKA POWER 10 MANUAL

RECHARGEABLE POWERBANK

WAKA-WAKA.COM

share the sun

WAKA WAKA



CHARGING EXTERNAL DEVICE



- ERROR LED on: The WakaWaka Power 10 is too warm or the battery is over discharged.
- The battery of the WakaWaka Power 10 has a capacity of 10,000 mAh. External devices with a larger battery capacity cannot be fully charged.
- Use a WakaWaka micro-USB or a WakaWaka Lightning charging cable to charge your device.

MICRO USB CHARGING LED INDICATORS & BATTERY STATUS







50-75% full





100% full



Blinking: temperature out of range for solar charging (0-50 degrees C°)

Use a micro-USB charging cable to charge the WakaWaka Power 10 via the grid. For best results use a WakaWaka micro-USB cable and the 2.1A USB-port at a WakaWaka World Charger. If your WakaWaka has been stored for a longer time

it can go into hibernation. Charge the WakaWaka via the grid or put it in the sun to wake it up and give it a powerboost. The battery status indicator lights turn off when the WakaWaka Power 10 is fully charged.

WAKA WAKA SOLAR PANEL CHARGING I FD INDICATORS

Solar indicator lights, if used with WakaWaka Solar Panel.









Slow charge

Normal charge

Fast charge

Maximum charge

USE THE WAKA WAKA POCKET LIGHT With your waka waka power 5



SPECIAL FEATURES





SAFE BATTERY Technology



DEEP DISCHARGE PROTECTION FOR MAX BATTERY LIFETIME



SPECIFICATIONS

Battery	10,000 mAh LiPo
Average smartphone charge	5 x
Connectors	USB power in 2.1A 3 x USB out 2.1A
C Weight	283 grams
E Dimensions	122 x 80 x 28 mm
🇞 Color	Yellow



For any questions, returns and/or support check out our FAQ page **waka-waka.com/faq/** or send us an email **support@waka-waka.com**

Having problems with your WakaWaka Light? Read the tips & tricks waka-waka.com/tricks/wwb

WARRANTY

1. Limited warranty:

WakaWaka warrants to the original purchaser that this WakaWaka product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in Paragraph 2, below, subject to the exclusions set forth in Paragraph 4, below. This warranty statement sets forth WakaWaka's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sales of our products.

You

O.

2. Warranty period:

The warranty period for the WakaWaka product is 2 years. The warranty period starts on the purchase date by the original purchaser. The sales receipt from

this purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

3. Remedy:

WakaWaka will repair or replace (at WakaWaka's option and expense) any WakaWaka product that fails to operate during the applicable warranty period due to a defect in workmanship or material.

4. Exclusions:

WakaWaka's warranty does not apply to any product that is misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in WakaWaka's then-current product literature.