

**NOKIA**

# **Nokia 110**

## **User Guide**

# 1 About this user guide



**Important:** For important information on the safe use of your device and battery, read “For your safety” and “Product Safety” info in the printed user guide, or at [www.nokia.com/support](http://www.nokia.com/support) before you take the device into use. To find out how to get started with your new device, read the printed user guide.

## Table of Contents


<b>1</b>	<b>About this user guide</b>	<b>2</b>
<b>2</b>	<b>Table of Contents</b>	<b>3</b>
<b>3</b>	<b>Get started</b>	<b>5</b>
	Keys and parts . . . . .	5
	Set up and switch on your phone . . . . .	6
	Charge your phone . . . . .	7
	Keypad . . . . .	8
<b>4</b>	<b>Calls, contacts, and messages</b>	<b>9</b>
	Calls . . . . .	9
	Contacts . . . . .	9
	Send messages . . . . .	10
<b>5</b>	<b>Personalize your phone</b>	<b>11</b>
	Change your ring or message tone . . . . .	11
	Change the look of your home screen . . . . .	11
	Profiles . . . . .	12
	Settings for Go to . . . . .	12
	Personalize your SIM cards . . . . .	13
<b>6</b>	<b>Camera</b>	<b>14</b>
	Photos and videos . . . . .	14
<b>7</b>	<b>Radio</b>	<b>15</b>
	Find and save radio stations . . . . .	15
	Listen to the radio . . . . .	15
<b>8</b>	<b>Clock, calendar, and calculator</b>	<b>16</b>
	Set the time and date manually . . . . .	16
	Alarm clock . . . . .	16
	Calendar . . . . .	16
	Calculator . . . . .	16

<b>9 Empty your phone</b>	<b>18</b>
Remove private content from your phone . . . . .	18
Restore factory settings . . . . .	18
<b>10 Product and safety information</b>	<b>19</b>
For your safety . . . . .	19
Emergency calls . . . . .	21
Take care of your device . . . . .	22
Recycle . . . . .	22
Crossed-out wheelie bin symbol . . . . .	23
Battery and charger information . . . . .	23
Small children . . . . .	24
Medical devices . . . . .	24
Implanted medical devices . . . . .	24
Hearing . . . . .	24
Protect your device from harmful content . . . . .	25
Vehicles . . . . .	25
Potentially explosive environments . . . . .	25
Certification information (SAR) . . . . .	25
About Digital Rights Management . . . . .	26
Copyrights and other notices . . . . .	27

## 3 Get started

### KEYS AND PARTS

#### Your phone

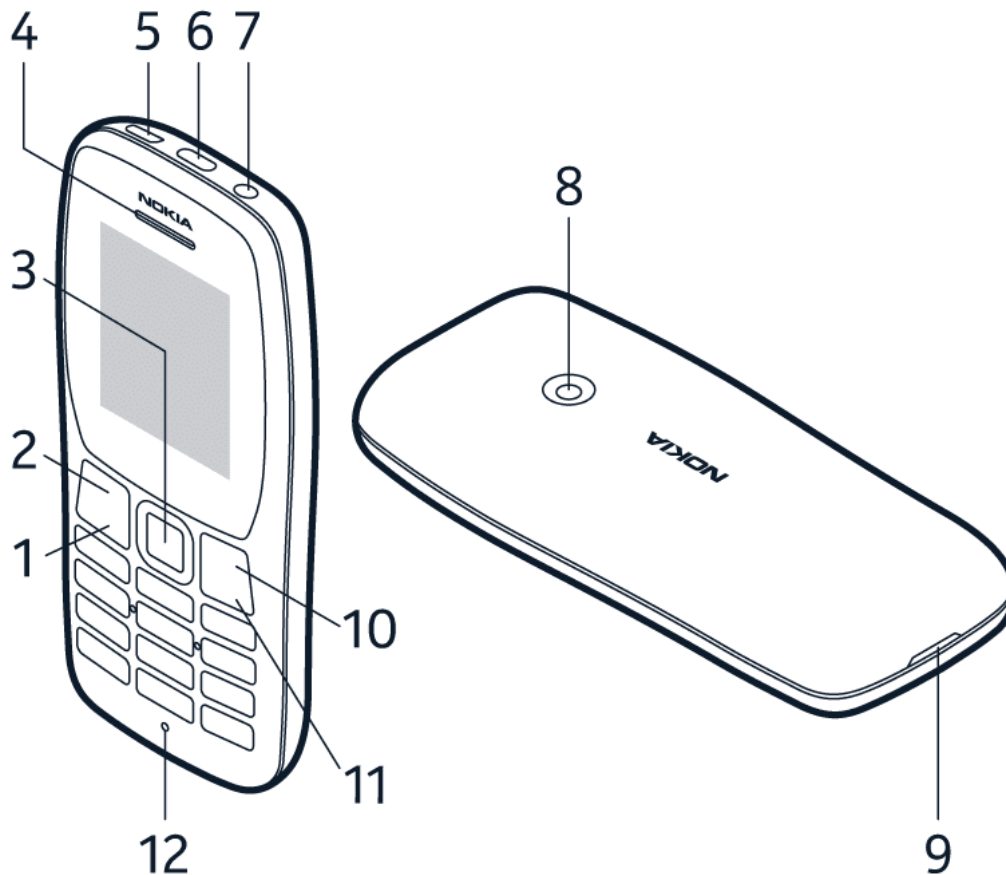

This user guide applies to the following model: TA-1192

- |  |                            |
|--|----------------------------|
| 1. Call key  | 7. Headset connector       |
| 2. Left selection key                                      | 8. Camera                  |
| 3. Scroll key. Press to access your apps and select items. | 9. Back cover opening slot |
| 4. Earpiece/Loudspeaker                                    | 10. Right selection key    |
| 5. USB connector   | 11. End/Power key          |
| 6. Flashlight  | 12. Microphone             |

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because info stored on them may be erased.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

## SET UP AND SWITCH ON YOUR PHONE

### Mini SIM




**Important:** This device is designed to be used with a mini SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.



**Note:** Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

## Set up your phone

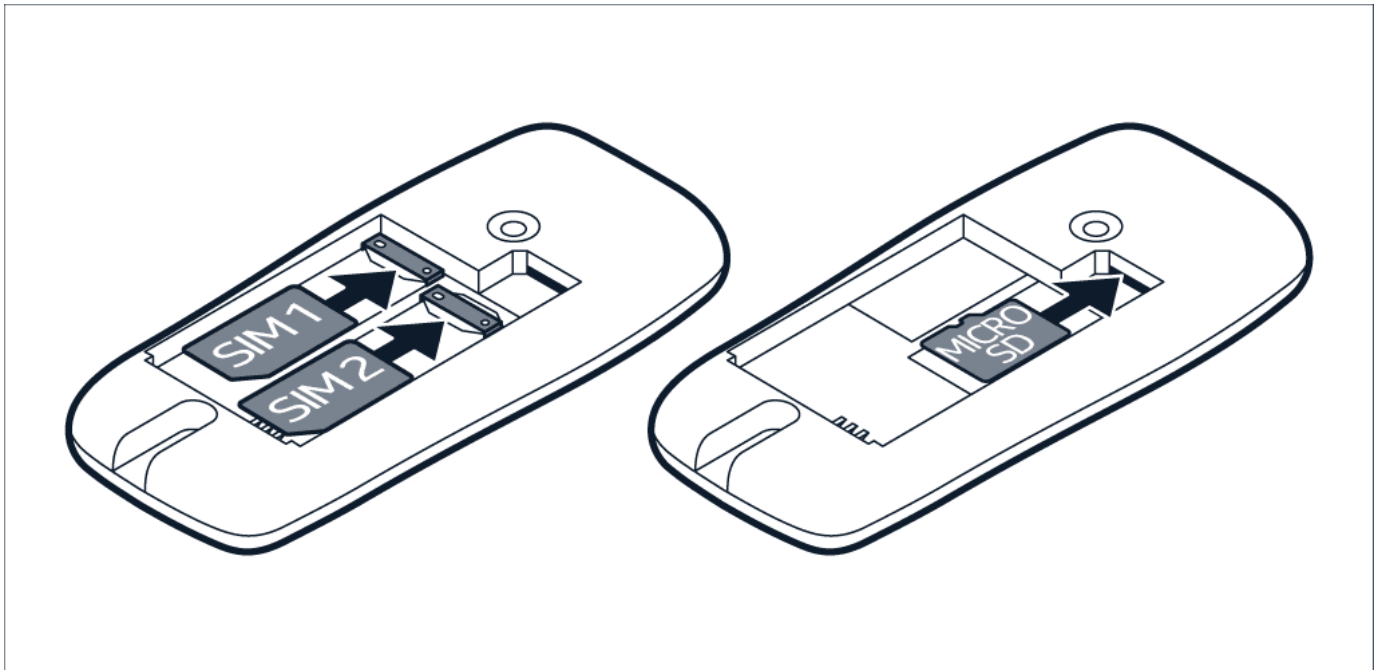

1. Put your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the SIM card into the SIM1 slot with the contact area face down. If you have a second SIM, slide it into the SIM2 slot. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.
4. If you have a memory card, slide it in the memory card slot.
5. Line up the battery contacts, and put the battery in.
6. Put back the back cover.

## Switch on your phone

Press and hold .

## CHARGE YOUR PHONE

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

### Charge the battery

1. Plug the charger into a wall outlet.

2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.



**Tip:** You can use USB charging when a wall outlet is not available. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning. Make sure your computer is switched on.

## KEYPAD

### Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.

### Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: select **Go to** > **Lock keypad**. To unlock the keypad, select **Unlock**.

### Switch on the flashlight

On the home screen, quickly scroll up twice to switch on the flashlight.

To switch off the flashlight, scroll up once.

Do not shine the light in anyone's eyes.

### Write with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press **0**.

To type in a special character or punctuation mark, select **Opt.** > **Insert options** > **Insert symbol**.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.





## 4 Calls, contacts, and messages

### CALLS

#### Make a call

Learn how to make a call with your new phone.

1. Type in the phone number. To type in the + character, used for international calls, press \* twice.
2. Press . If asked, select which SIM to use.
3. To end the call, press .

#### Answer a call

Press .




**Tip:** If you are in a situation where you cannot answer the phone and you need to silence it quickly, select **Silence**.


### CONTACTS

#### Add a contact

Save and organize your friends' phone numbers.


1. Select **Menu** >  > **Add contact**.
2. Select where you want to save it, on **Phone** or **SIM card**.
3. Write the name, and type in the number.
4. Select **OK**.

#### Save a contact from call log

1. Select **Menu** >  > **Missed calls**, **Received calls**, or **Dialled numbers** depending on from where you want to save the contact.
2. Highlight the number you want to save, select **Opt.** > **Save**, and select where you want to save the contact.
3. Add the contact's name, check that the phone number is correct, and select **OK**.


## Call a contact

You can call a contact directly from the contacts list.

1. Select **Menu** >  > **Names**.
2. Scroll to a contact and press the call key.

## SEND MESSAGES

### Write and send messages

1. Select **Menu** >  > **Create message**.
2. Write a message on the message field.
3. Select **Opt.** > **Send**, to add a recipient. You can enter a phone number or add a recipient by selecting **Search** to open **Contacts**.
4. Select **OK**.

### Writing options

You can find different options for writing a message under **Opt.** when you are in the message field. You can, for example, insert symbols and save messages.

To switch on predictive text, select **Opt.** > **Dictionary**.

## 5 Personalize your phone

### CHANGE YOUR RING OR MESSAGE TONE

#### Change your ringtone

1. Select **Menu** > **⚙️** > **Tone settings** > **Ringtone**.
2. If asked, select a SIM card.
3. Scroll to a ringtone and select **OK**.



**Tip:** Is your ringtone too loud or too silent? Select **Ringtone volume** and scroll left or right.

#### Change your message tone

1. Select **Menu** > **⚙️** > **Tone settings** > **Message alert tone**.
2. If asked, select a SIM card.
3. Scroll to a tone and select **OK**.

### CHANGE THE LOOK OF YOUR HOME SCREEN

#### Choose a new wallpaper

1. Select **Menu** > **⚙️** > **Display settings** > **Wallpaper**.
2. Select **Default** to choose from pre-defined wallpapers, or select **Photos** to choose a wallpaper from the photos you have taken with the camera.
3. Select the wallpaper, and then the option to position the wallpaper on the screen.

#### Show date and time

You can choose if you want to see date and time on the home screen of your phone.

1. Select **Menu** > **⚙️** > **Time settings** > **Display of time and date**.
2. Select **Show clock** to have them visible on the home screen.

If you want your phone to have time updated automatically, set **Auto-update of date and time** to **On**.

## PROFILES

Your phone has different profiles for different situations. You can edit the profiles to your liking.

### Personalize profiles

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

You can personalize profiles further.

1. Select **Menu** > **⚙️** > **Profiles**.
2. Select a profile and **Personalise**.

For each profile you can set a specific ringtone, ringtone volume, message sounds and so on.



**Tip:** You can add different profiles to **Go to** menu for quick access.

## SETTINGS FOR GO TO

You can add quick links to different applications and settings to **Go to**.

### Edit Go to settings

On the bottom left of the home screen, you have **Go to**, and when you select it, you can quickly access different applications and settings. You can change the applications and settings to your liking.


1. Select **Menu** > **⚙️** > **Go to settings**.
2. Select **Select options**.
3. Scroll to a shortcut you want to add on the **Go to** list on the home screen and **Mark** them.
4. Select **Done** to exit the list, and **Yes** to save changes.

You can also reorganize your **Go to** list.

1. Select **Organise**.
2. Scroll to an item you want to move and select **Move**.
3. Select if you want to move it up, down, to top, or to bottom of the list.
4. Select **Back** to exit the list, and **OK** to save changes.

## PERSONALIZE YOUR SIM CARDS


### Edit the SIM card settings

1. Select **Menu** >  > **Dual SIM settings**.
2. Select **SIM name**, and enter a name for your SIM card.
3. Select an icon for the SIM card.

## 6 Camera




### PHOTOS AND VIDEOS

#### Take a photo

1. Select **Menu** > .
2. To take a photo, press the scroll key.

To see the photo you just took, select **Opt.** > **View photos**.

#### Record a video

1. To switch the video camera on, select **Menu** >  and scroll right.
2. To start recording, select .
3. To stop recording, select .


To see the video you just recorded, select  > **View videos**.

## 7 Radio

### FIND AND SAVE RADIO STATIONS


Connect a compatible headset. It acts as an antenna.

#### Find your favorite radio stations

1. Select **Menu** > .
2. When the phone asks if you want to search all available channels, select **OK**.
3. To switch between stations, scroll up or down.
4. To save a found channel, select **Opt.** > **Save channel**.

### LISTEN TO THE RADIO


#### Listen to your favorite radio stations

Select **Menu** > . To change the volume, scroll left or right. To listen to the radio using the loudspeaker, select **Opt.** > **Loudspeaker**. Keep the headset connected. To close the radio, select **Stop**.

## 8 Clock, calendar, and calculator


### SET THE TIME AND DATE MANUALLY

#### Change the time and date

1. Select **Menu** >  > **Time settings**.
2. Switch **Auto-update of date and time** to **Off**.
3. To set the time, scroll down, and select **Clock** > **Set the time**. Use the scroll key to set the time, and select **OK**.
4. To set the date, scroll down, and select **Date setting**. Use the scroll key to set the date, and select **OK**.


### ALARM CLOCK

#### Set an alarm

1. Select **Menu** >  > **Set alarms**.
2. Select an alarm.
3. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down.
4. Select **OK**.

### CALENDAR

#### Add a calendar reminder


1. Select **Menu** > .
2. Select a date and **Opt.** > **Add reminder**.
3. Type in a name for the event, and select **OK**.
4. To set an alarm, select **Alarm on**. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down.
5. Select **OK**.

### CALCULATOR

Learn how to add, subtract, multiply and divide with your phone calculator.



## How to calculate

1. Select **Menu** > .
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Select **Equals** to get the result of the calculation.

Select **Clear** to empty the number fields.




## 9 Empty your phone

### REMOVE PRIVATE CONTENT FROM YOUR PHONE

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove your personal info and content. Note that it is your responsibility to remove all private content.

#### Remove content from your phone

When removing private content from your phone, pay attention to whether you are removing content from the phone memory or the SIM card.


1. To remove messages, select **Menu** >  > **Delete messages**. Select from the available options the messages you want to delete.
2. To remove contacts, select **Menu** >  > **Delete**, and select if you want to delete contacts **One by one** or **Delete all**.
3. To remove your call info, select **Menu** >  > **Delete recent call lists**, and select **All**.
4. Check that all your personal content has been removed.

### RESTORE FACTORY SETTINGS

You can restore factory settings in this setting. Be careful, however, since you lose all personalization and all data you have added on the phone.

#### Reset your phone

If you are disposing your phone, note that you are responsible of removing all private content.

Select **Menu** >  > **Restore factory set.**. There is no more confirmation, but the phone is reset and all data is removed.

## 10 Product and safety information

### FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. For further info, read the complete user guide.

#### SWITCH OFF IN RESTRICTED AREAS



Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.

#### ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

#### INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

**AUTHORIZED SERVICE**



Only authorized personnel may install or repair this product.

**BATTERIES, CHARGERS, AND OTHER ACCESSORIES**



Use only batteries, chargers, and other accessories approved by HMD Global Oy for use with this device. Do not connect incompatible products.

**KEEP YOUR DEVICE DRY**



If your device is water-resistant, please refer to its IP rating for more detailed guidance.

**PROTECT YOUR HEARING**



To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

## SAR



This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 0.2 inches (5 mm) away from the body. The specific maximum SAR values can be found in the Certification Information (SAR) section of this user guide. For more info, go to [www.sar-tick.com](http://www.sar-tick.com).

When a carry case, belt clip or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above-stated separation distance from the body. Note that mobile devices may be transmitting even if you are not making a voice call.

## EMERGENCY CALLS



**Important:** Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Before making the call:

- Switch the phone on.
  - If the phone screen and keys are locked, unlock them.
  - Move to a place with adequate signal strength.
1. Press the end key repeatedly, until the home screen is shown.
  2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
  3. Press the call key.
  4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- Put a SIM card in the phone.
- If your phone asks for a PIN code, type in the official emergency number for your present location, and press the call key.
- Switch the call restrictions off in your phone, such as call barring, fixed dialling, or closed user group.

## TAKE CARE OF YOUR DEVICE

Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Unauthorized modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

During extended operation, the device may feel warm. In most cases, this is normal. To avoid getting too warm, the device may automatically slow down, close apps, switch off charging, and if necessary, switch itself off. If the device is not working properly, take it to the nearest authorized service facility.

## RECYCLE



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Electrical and electronic products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and precious metals (such as gold, silver, and palladium). All materials of the device can be recovered as materials and energy.

## **CROSSED-OUT WHEELIE BIN SYMBOL**

### **Crossed-out wheelie bin symbol**



The crossed-out wheelie bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority.

## **BATTERY AND CHARGER INFORMATION**

### **Battery and charger safety info**

To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 59°F and 77°F (15°C and 25°C) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign

objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

## SMALL CHILDREN

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

## MEDICAL DEVICES

Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

## IMPLANTED MEDICAL DEVICES

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimeters (6 inches) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimeters (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## HEARING



**Warning:** When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.



## PROTECT YOUR DEVICE FROM HARMFUL CONTENT

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.
- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. HMD Global does not endorse or assume liability for such sites.

## VEHICLES

Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment. Only authorized personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area.

## POTENTIALLY EXPLOSIVE ENVIRONMENTS

Switch your device off in potentially explosive environments, such as near gasoline pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

## CERTIFICATION INFORMATION (SAR)

**This mobile device meets guidelines for exposure to radio waves.**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields), recommended by international guidelines from the independent scientific organization ICNIRP. These guidelines incorporate substantial safety margins that are intended to assure the protection of all persons regardless of age and health. The exposure guidelines are based on the Specific Absorption Rate (SAR), which is an expression of the amount of radio frequency (RF) power deposited in the head or body when the device is transmitting. The ICNIRP SAR limit for mobile devices is 2.0 W/kg averaged over 10 grams of tissue.

SAR tests are carried out with the device in standard operating positions, transmitting at its highest certified power level, in all its frequency bands.

Please refer to [www.nokia.com/phones/sar](http://www.nokia.com/phones/sar) for the maximum SAR value of the device.

This device meets RF exposure guidelines when used against the head or when positioned at least 5/8 inch (1.5 centimetres) away from the body. When a carry case, belt clip or other form of device holder is used for body-worn operation, it should not contain metal and should provide at least the above stated separation distance from the body.

To send data or messages, a good connection to the network is needed. Sending may be delayed until such a connection is available. Follow the separation distance instructions until the sending is finished.

During general use, the SAR values are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile is automatically decreased when full power is not needed for the call. The lower the power output, the lower the SAR value.

Device models may have different versions and more than one value. Component and design changes may occur over time and some changes could affect SAR values.

For more info, go to [www.sar-tick.com](http://www.sar-tick.com). Note that mobile devices may be transmitting even if you are not making a voice call.

The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you limit your usage or use a hands-free kit to keep the device away from your head and body. For more information and explanations and discussions on RF exposure, go to the WHO website at [www.who.int/peh-emf/en](http://www.who.int/peh-emf/en).

## **ABOUT DIGITAL RIGHTS MANAGEMENT**

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content.

## COPYRIGHTS AND OTHER NOTICES

### Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.nokia.com/phones/privacy>, applies to your use of the device.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.