

## IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:  
**READ THESE INSTRUCTIONS BEFORE FIRST USING YOUR APPLIANCE.**

**DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is in the "OFF" position.

**To reduce the risk of serious injury by electric shock:**

1. Always unplug the appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING:** To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in
2. Close supervision is necessary when this appliance is used by ,on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug. If it is not working properly. Or if it has been dropped, damaged, or dropped into water.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Do not use an extension cord with this appliance.
7. The gogodiva Ionic is hot when in use. Do not let eyes and bare skin touch heated surfaces.
8. Do not use the appliance with any voltage converter.
9. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
10. Never use while sleeping.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not place this appliance directly on any surface while it is hot or plugged in.

### IMPORTANT:

1. The appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance
3. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



**WARNING:**  
Do not use this appliance near water. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

**SAVE THESE INSTRUCTIONS.  
FOR HOUSEHOLD USE ONLY**

## Operation Instructions

1. Select your barrel size and insert to handle  
Make sure that it's locked.
2. Insert the plug of the curling iron into electrical outlet, ensuring that the plug matches the socket.
3. Turn on your curler by pressing the ON/OFF button. Select your desired temperature by using - or + buttons.
4. Temperature could be adjustable from 60°C TO 220°C.
5. This appliance with five size interchangeable barrels 19MM, 25MM, 32MM, 25MM Pearl, 32MM Spiral to make different curls. Choose the suitable barrel to create the hair styles you want.
6. This appliance matches with a glove to prevent burning during curling.
7. For safety concerns this appliance has 1 hour auto shut off setting, it should turn off without use within 1 hour.

