

## How To Use It



① Inject water or sand into the bottom bag.



② Inflate the plastic air valve near the water inlet.



③ Inflate the air valve of the middle connection part.



④ Inflate the air nozzle at the top of the column.

### Installation Tips:

1. Inject water before inflating, 15L or more is recommended. If the water capacity is low, it may not stand up well.
2. Do not inflate excessively to avoid damage. (Hands Touch soft, and should not be too hard.)
3. The amount of water injected is according to your needs. The more water is injected, the basis is more stable.
4. If you are afraid of leaking water to the floor, you can also inject sand, which is the same as the water injection operation.