




Disco lamp

USER'S MANUAL

Remote controller buttons

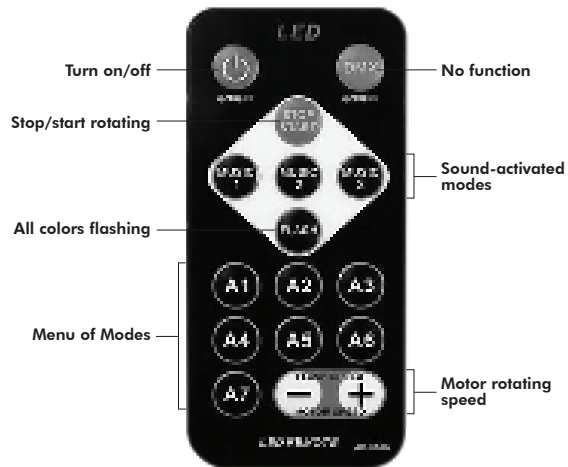

Buttons explanations

Mode	Effect	Content
A1	EFFECT MODE	Auto mode
A2		Red on
A3		Green on
A4		Blue on
A5		Two-color mode cycle
A6		Color gradient
A7		Changing slowly cycle with strobe
MUSIC 1	SOUND CONTROL	Sound-activated on/off
MUSIC 2		Sound-activated color changing
MUSIC 3		Sound-activated strobe lighting
FLASH	STROBE CONTROL	Light strobe
+	MOTOR ROTATING SPEED	Speed up
-		Speed down

Note: Please remove the plastic protector at the bottom of the remote before use. Please aim the remote controller towards the IR signal receiver without barriers. Please allow for a 1 second delay when switching to other lighting parents. The remote control can be used within 5 meters distance of the lamp.

WARNING: Please read this manual carefully before using this product.