



Pen Clip

Battery

Right Click Button

Erase Button

5.59 inch

Pen Tip

0.36 inch