

# MAINTENANCE AND WARRANTY

Protect the toy from humidity. Should it become wet, wipe it immediately. Do not expose it to direct sunlight, nor to a heat source. Do not allow it to fall. Do not attempt to disassemble it. To clean it, use a slightly damp cloth, avoiding the use of any detergent product. In the event of malfunction, first try to change the batteries. If the problem persists, carefully read again the manual in order to verify that no step has been omitted.

**Note:** Please keep this instruction manual, it contains important information.

This product is covered by our 2-year warranty for the European Union. For all warranty claims or after-sales service, you must contact your retailer, providing proof of purchase. Our warranty covers defects in materials or workmanship attributable to the manufacturer, to the exclusion of any damage arising from the failure to observe the provisions contained in the user's manual or any improper intervention with respect to the item (such as disassembly, exposure to heat or humidity ...).

We recommend keeping the packaging for future reference. In a bid to continually improve our products, we reserve the right to change the colors and details of the product presented on the packaging.

**WARNING!** Not suitable for children under 3 years. Choking Hazard - Small parts.

Reference: JC150B1series  
Designed and developed in Europe – Made in China

© Lexibook®

United Kingdom & Ireland  
For after-sales service, please contact us at [savcomfr@lexibook.com](mailto:savcomfr@lexibook.com)  
[www.lexibook.com](http://www.lexibook.com)

Lexibook UK  
PO Box 59  
SOUTH MOLTON  
EX36 9AU  
UK

Follow us  
@LexibookCom



## Environmental protection

Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

