

IMPORTANT SAFEGUARDS

When using electrical appliances, please always follow the basic safety precautions to reduce the risk of fire, electric shock, or injury, including the following:

Read all instructions before using.

- Do not fill the basket with oil, which may cause a fire hazard.
- Never touch the inside of the appliance or other hot surfaces during operation.
- To protect against electrical shock, never immerse the housing in water, rinse the housing under the tap, or let other liquids enter the appliance.
- Only operate the appliance on a flat, even, stable surface.
- Always put the food to be fried in the crisper tray to prevent them from coming in direct contact with the heating elements.
- Do not cover the air inlet and outlet openings while the appliance operates.
- Turn the unit off and unplug it from the wall outlet when not in use and before cleaning. Wait approx.30 minutes, allowing the unit to cool down naturally before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use the device outdoors.
- Do not plug in the appliance or operate the control panel with wet hands.
- Do not place on or near a hot gas, electric burner, or heated oven.
- Do not use the appliance for other than intended use.
- Do not let the appliance operate unattended.
- Do not clean with steel scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

- Oversize foods and metal utensils must not be inserted into the machine, as they may create a fire or risk of electric shock.
- A fire may occur if the appliance is covered or touching flammable materials, including curtains, draperies, walls, and the like, when in operation.
- Do not store any item on top of or touch the unit when operating. Leave at least 4 inches (10 cm) of free space on the back and sides of the appliance.
- Do not place any of the following materials in the appliance: paper, cardboard, plastic, etc.
- Do not cover any part of this appliance with metal foil, as this will cause overheating of the appliance.
- During hot air frying, hot steam is released through the air outlet openings. Keep hands and face at a safe distance from the steam and from the air outlet openings. Also, be careful of hot steam and air when you remove the basket from the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to avoid playing with the appliance. Supervision is also required when the appliance is used by or near children.
- Smoking issues may occur when cooking greasy food; please stop cooking and remove the extra oil.

CAUTIONS

1. This is an air fryer that works on hot air. Do not fill the basket with oil, frying fat, or other liquid.
2. Do not touch the hot surface directly; use handles instead. Remove the hot baskets by gripping the handles.
3. This appliance is for household use ONLY.
4. Do not touch the pan or basket during and for some time after use, as they get very hot.
5. The basket is hot after the frying process. Always place it on a heat-resistant worktop when you remove it from the device.

Product Information

Name: Air Fryer
Model No. : AF2-40D06
Trademark : cookwise

Manufacturer

Name: Cuori Electrical Appliances (Group)Co. Ltd.
Address: Xingci NO.3 road, hangzhou Bay new district, Cixi economic development zone, Zhejiang, P.R.315336, China
Email: cookw-vip@outlook.com
Tel: 0574-63939211
Web: www.cuori.com

EC REP EU Representative Information

Name: CET PRODUCT SERVICE SP. Z O.O.
Address: Ul. Długa 33 102, Zgierz 95-100 Polen
Email: info@cetproduct.com Tel: +49 71416432236

UK REP British Representative

Name: CET PRODUCT SERVICE LTD.
Address: Chase Business Centre, 39-41 Chase Side, London N14 5BP United Kingdom
Email: info.cetservice@gmail.com Tel: +447419325266



Made in China