

Drink Yourself Healthy
begins by first reading
the...
instruction manual



Pelican Slowjuicer

versapers®
Slow Juicer



Versapers Juicer Manual For Household Use

- 1 Read this manual carefully before using the appliance.
- 2 Keep the manual within reach anytime and save it for future reference.
- 3 Check if the voltage indicated on the base of the appliance corresponds to the local voltage before you connect the appliance.

CONTENTS

Dear Versapers Customers	01
General description and parts names	02
Specific terms for parts	03
Warnings and cautions	04
Slow Juicer assembly	06
How to use the appliance	07
Juice Cap and Extraction Packing	08
When the Screw is stopped during operation [Reverse/REV]	09
Important safeguards in use	10
Disassembly, cleaning and care	11
Bowl disassembly and wash	13
Sterilization and Easy Cleaning System	14
Troubleshooting	15
Appliance specifications	16
Warranty	17



Dear Versapers customers,

Get ready to elevate your health game with Versapers' groundbreaking Pelican Slow Juicer. It's designed with a spacious fill opening and an innovative Juice Cap, making juicing easier and more convenient than ever before.

Boost Your Health with Rich Flavors

Say goodbye to boring single fruit juices! With Versapers, you can mix and match a variety of fruits and veggies to create delicious, nutrient-packed juices tailored to your taste and health goals. Whether you're craving a refreshing vitamin cocktail or a nourishing veggie blend, Versapers has you covered. Plus, you can even use it to make nutritious baby food or creamy nut milks and grain milks infused with your favourite fruits.

Effortless Juicing Experience








Using the Pelican Slow Juicer is a breeze. Simply toss your fruits and veggies into the large opening, switch it on, and let it do the work while you go about your day. Thanks to the Juice Cap feature, you can control the flow of juice without any messy spills, ensuring a smooth pouring process every time.

Easy Cleanup, No Fuss


Cleaning up after juicing has never been easier. With Versapers' advanced cleaning system, all you have to do is close the Juice Cap, fill the bowl with water, turn on the juicer and then open the juice cap completely to finish the first rinse. Say goodbye to tedious cleanup routines and hello to more time enjoying your freshly made juices!

Experience the convenience, flavour, and health benefits of juicing with the Versapers Pelican Slow Juicer.

GENERAL DESCRIPTION AND PARTS NAMES

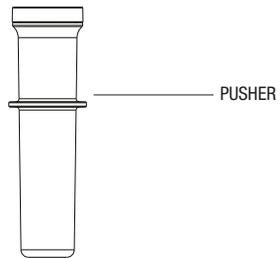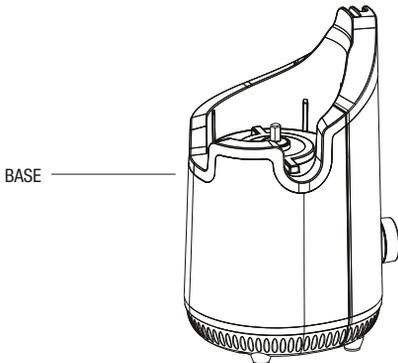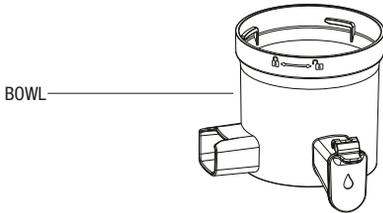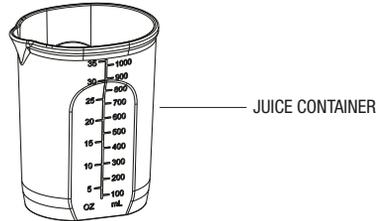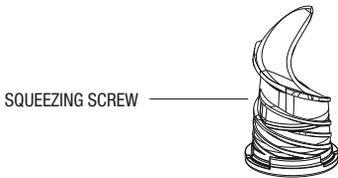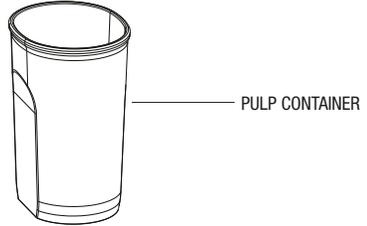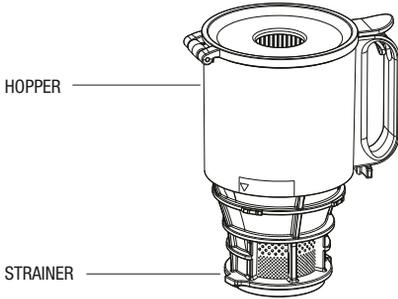

SPECIFIC TERMS FOR PARTS

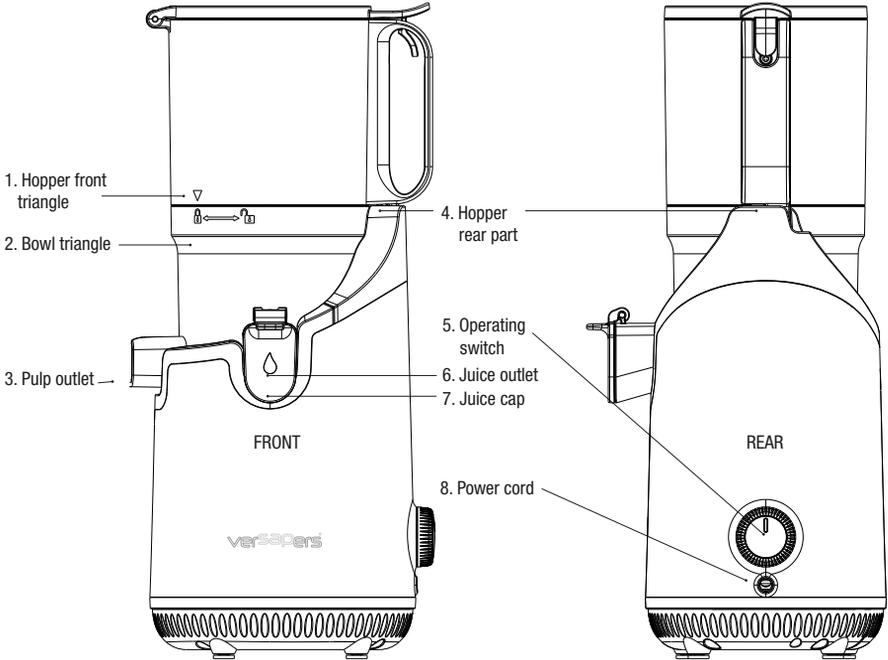

NUMBER OF ATTACHMENT

1 pusher, 1 hopper, 1 squeezing screw, 1 bowl, 1 base, 1 juice container, 1 pulp container, 1 cleaning brush, 1 manual.

WARNINGS AND CAUTIONS

DO NOT PLUG IN OR UNPLUG WITH WET HANDS. It may cause an electric shock or an injury.

DO NOT USE OTHER THAN 230V - 240V AC. It may cause an electric shock, a fire or an abnormal performance. If the voltage is different, it may shorten the life of the motor or cause a failure.

PLUG IN POWER CORD CORRECTLY & PUSH TIGHT IN WALL SOCKET. It may cause an electric shock or a fire.

IF SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD. If the power cord is damaged, it may cause an electric shock or a fire.

NEVER ALTER THE APPLIANCE. ALSO, DO NOT DISASSEMBLE OR REPAIR BY YOURSELF. DO NOT INSERT FINGERS, FOREIGN SUBSTANCES OR OBJECTS SUCH AS PINS INTO GAPS OR HOLES IN THE BASE. It may cause a fire, an electric shock or a failure. For any technical support, contact the authorized local Customer Care Center.

DO NOT MOISTEN THE BASE OR SPLASH WATER ON THE BASE. Be careful not to let any liquids or other substances get into the switch on the appliance.

DO NOT OPERATE THE SWITCH WITH WET HANDS. It may cause an electric shock or a fire.

WHEN THE POWER CORD, WIRE WAS BROKEN OR DAMAGED OR THE PLUG-IN PART BECAME LOOSE, DO NOT OPERATE IT. It may cause an electric shock, a fire or an injury.

FOR SAFETY, MUST DO GROUNDING CONNECTION. ALSO, DO NOT DO THE GROUNDING ON GAS PIPE, PLASTIC WATER PIPE, TELEPHONE WIRE, ETC. It could cause an electric shock, a fire, a malfunction and an explosion. Be sure to use the socket with ground connection.

NEVER DISASSEMBLE BOWL SET DURING OPERATION OR INSERT FINGERS, FOREIGN OBJECTS SUCH AS FORKS, SPOONS, ETC. INTO FEEDING TUBE OR JUICE OUTLET. It may cause an injury, an accident or a failure.

THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY. Children should be supervised to ensure that they do not play with the appliance.

DO NOT OPERATE WITHOUT LOCKING THE HOPPER PROPERLY. It may cause an injury or a failure.

WHEN DETECTING A GAS LEAK, DO NOT INSERT THE POWER CORD INTO ITS SLOT. OPEN THE WINDOW TO VENTILATE FULLY AND IMMEDIATELY. It may cause an injury or a failure.

WARNINGS AND CAUTIONS

NEVER PUT A FINGER, A FORK OR A SPOON, ETC. INTO JUICE OUTLET. It may cause an injury or a failure.

IF SCREW ROTATION IS STOPPED IN NORMAL OPERATION, PRESS [REVERSE/REV] BUTTON AND HOLD FOR 2~3 SECONDS AND THEN AFTER REVERSE OPERATION IS COMPLETELY STOPPED, PRESS [ON] BUTTON AGAIN. If such a stop event continues during the operation, the parts may be damaged and performance may be deteriorated due to overheating in a motor. When the problem continues, immediately stop the appliance and contact the local Customer Care Center.

DURING THE OPERATION, DO NOT ATTEMPT TO MOVE THE BASE, DISASSEMBLE THE BOWL SET OR PARTS AND TRY TO LOCK THEM. It may cause an injury or a failure. Any act of event needed, switch off first and unplug the power cord.

WHEN USING THE APPLIANCE, BE CAREFUL FOR A NECKTIE, LONG NECKLACE, SCARF, ETC. NOT TO BE ENTANGLED INTO FEEDING TUBE. It may cause an injury, a failure or a breakage.

PLACE THE APPLIANCE ON A FLAT AND STABLE SURFACE. It may cause an injury or a failure.

DO NOT OPERATE THE APPLIANCE FOR MORE THAN 20 MINUTES AT A TIME. It may cause a motor failure due to overheating. Cool it down sufficiently about 5 minutes and operate it again.

WHEN PLACING INGREDIENTS INTO THE FEEDING TUBE, ONLY USE THE PUSHER PROVIDED. It may cause an injury or a failure.

DO NOT ALLOW SEVERE SHOCK TO THE APPLIANCE OR DROP IT. It may cause electric shock, a fire or damage.

IF THE APPLIANCE GIVES OFF AN UNPLEASANT SMELL OR EXCESSIVE HEATING, SMOKE, STOP USING IMMEDIATELY AND CONTACT THE LOCAL CUSTOMER CARE CENTER. When using a new appliance, it gives off a smell and the smell disappears naturally over time.

ALWAYS UNPLUG THE APPLIANCE AFTER USE.


WHEN UNPLUGGING THE POWER CORD, MAKE SURE TO HOLD THE POWER CORD. If holding the wire to unplug, it may cause an electric shock or a fire.

DO NOT WASH AT HIGH TEMPERATURES OF 80°C(176°F) OR MORE. DO NOT PUT THE APPLIANCE IN A DISHWASHER, A DRYER OR A MICROWAVE ETC. It may cause a failure or parts deformation.

THE APPLIANCE WEIGHS ABOUT 3,4KG. WHEN MOVING THE APPLIANCE, ENSURE TO MOVE IT HOLDING GRIPS TIGHTLY AT THE BASE BOTTOM WITH BOTH HANDS. If attempting to hold bowl or the edge of the base, the base falls causing an injury or a failure.

SLOW JUICER ASSEMBLY

Please make sure the unit is not plugged in and the switch is turned to "Off" setting prior to assembling the machine.

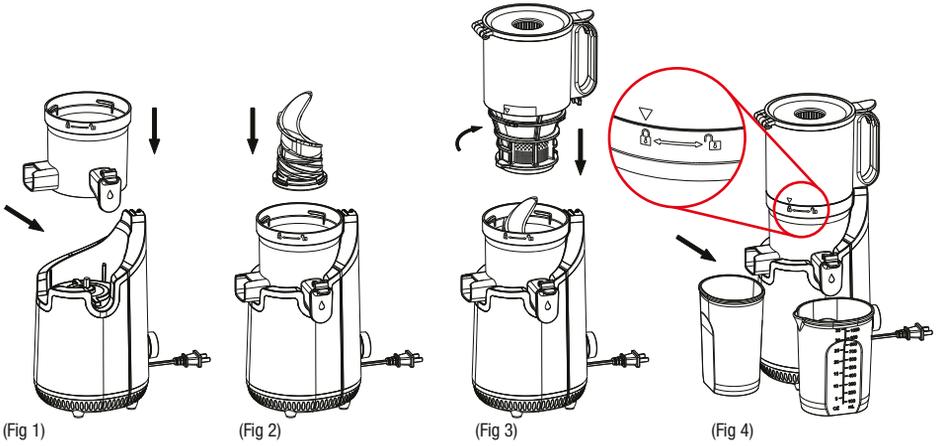

(Fig 1)

(Fig 2)

(Fig 3)

(Fig 4)

STEP 1

Position the squeezing bowl on the power base aligning the position of the spouts and the axle. (Fig 1)

STEP 2

Push the squeezing screw firmly into the center of the bowl, making sure that it touches down the bottom, or else the cover cannot be closed. (Fig 2)

STEP 3

Position the hopper on the bowl to align the ▲ to the "unlock symbol" 🔓 and twist it clockwise until it clicks the safety lock. Please make sure that the arrow ▲ on "lock symbol" 🔒 on the hopper aligns with the lock symbol on the bowl. (Fig 3)

STEP 4

Place the juice container and the pulp container under the relevant spouts. (Fig 4)

HOW TO USE THE APPLIANCE

FIRST TIME USE:

1. Remove all packaging materials, plastic bags and labels.
2. Make sure the electricity supply is 220-240V~ 50-60Hz.
3. Clean the hopper/squeezing screw/juice container/pulp container/juicing bowl/pusher with soapy water. Then rinse and dry thoroughly.

NOTE: DO NOT IMMERSE THE POWER BASE UNIT IN WATER.


4. Assemble the parts per the instruction in the assembling method section.
5. Connect the power cord to the power source. The unit is ready to use now.

OPERATING INSTRUCTIONS:

1. Connect the unit with power.
2. Check and make sure all parts are well assembled in correct position.
3. Make sure the machine is at "Off" position.
4. Make sure the juice and pulp containers are in position.
5. Make sure the juice cap is closed.
6. Prepare the fruits or vegetables cutting the ingredients into smaller pieces will facilitate and speed up the juicing proces and is recommended.
7. Put the ingredients into the hopper.
8. Rotate the switch to setting "On" to start the juicing operation.
9. Push the food down with the pusher only.
10. In case food is stuck inside the bowl, please switch to "REV" reverse function instantly.

NOTE: Please do not use the juicer continuously longer than 20 minutes.

JUICE CAP AND EXTRACTION PACKING

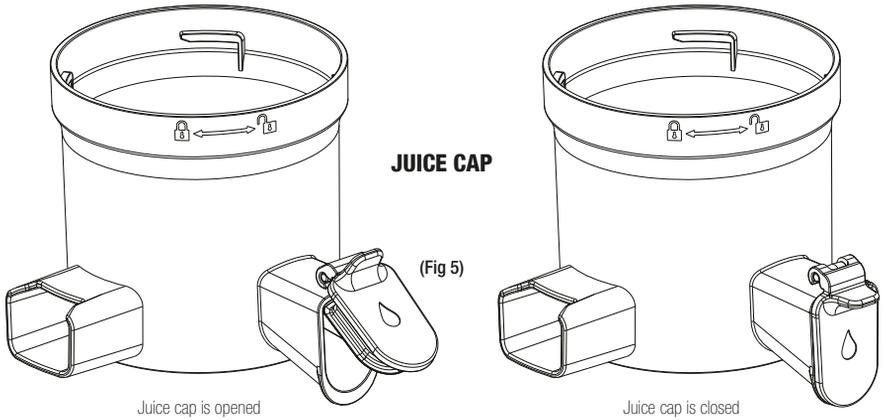


During the juicing process, you could keep the juice cap closed so the juice of different ingredients can mix in the juicing bowl. (Fig 5) When the bowl is full, open the juice cap to pour out as much juice as you need and close without any drops.


EXTRACTION PACKING

This is the pulp stopper made of silicone at the bottom of the bowl.

Make sure to close extraction packing always as shown below before use. For cleaning, let extraction packing opened and start washing. (Page 13)

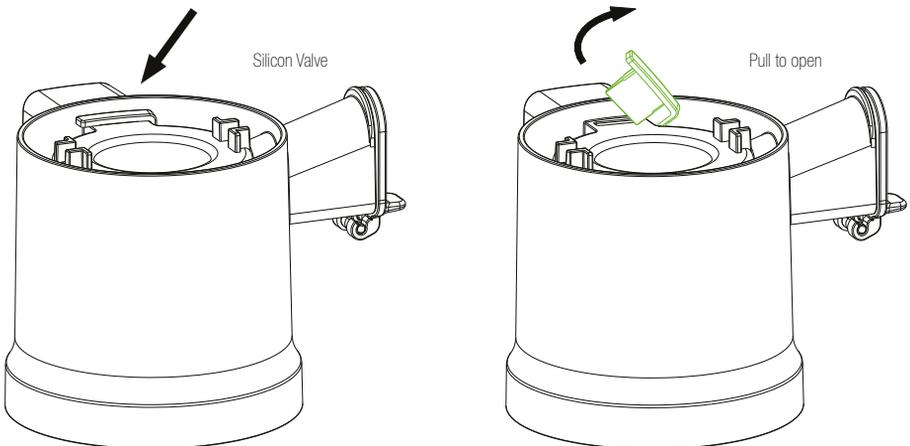

WHEN THE SCREW IS STOPPED DURING OPERATION (REVERSE/REV BUTTON)

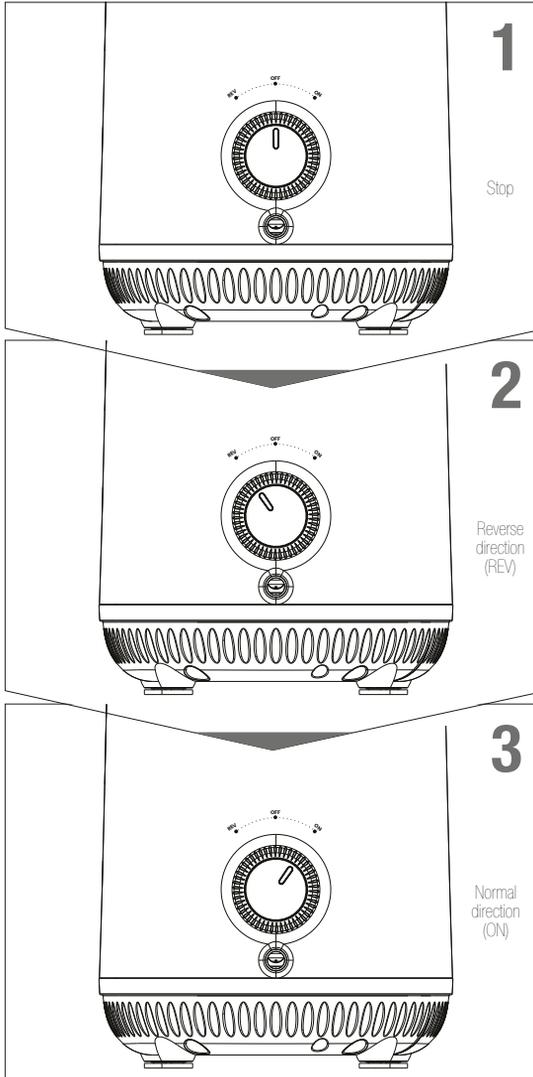

Turn the [Reverse/REV] button to the OFF position and stop the appliance

Turn [Reverse/REV] button to the REV position for 3-5 seconds and release it back to [OFF] position. Repeat this process 2-3 times.

- ▶ Reverse is pushing ingredients upward. Reverse only works while the button is turned and held. Once you release the button, screw rotation stops.

After the rotation stops completely, turn the button to [ON] position to operate.

- ▶ Any direction you want to change from either Normal direction or Reverse direction, make sure that screw rotation is stopped completely. Then operate any button you need.

NOTE

If the screw does not work even after the above process, unplug the power cord from the socket, disassemble the bowl set, wash and use it again.

IMPORTANT SAFEGUARDS IN USE

- Fruits with pits, hard seeds such as nectarines, peaches, mangos, apricots, plums and cherries must be pitted before juicing.
- Cut fibrous vegetables like cellery, parsley, fennel or ginger in small sizes. Better is to chop it short less than 1 cm to make it easier on the juicer to expell the pulp.
- Drink the fruit juice or green vegetable juice immediately after you have extracted. If it is exposed to air sometime, the juice will lose its taste and natural value.
- Do not use the appliance for grinding the dry ingredients such as grains, coffee beans, etc. It may cause a part damaged or a failure.
- Do not squeeze the leftovers again which already come out from pulp outlet.
- Do not operate the appliance when the bowl is empty.

DO NOT USE IT FOR MORE THAN 20 MINUTES CONTINUOUSLY.

It may cause a failure due to overheating in a motor. But, when using continuously, stop and cool it down about 5 minutes for each use.

NEVER INSERT A FINGER, A FORK OR A SPOON, ETC. INTO JUICE OUTLET DURING OPERATION.

If inserting a fork, etc. into juice outlet during operation, it is stuck in spinning brush and causes a part damaged.

ONLY USE THE PUSHER TO PRESS DOWN THE INGREDIENTS.

Using other object, it is stuck in the screw and causes a part damaged, an injury or a failure.

DO NOT PLACE GRAINS, FRUIT WITH HARD SEED OR NUTS WITH HARD SHELL SUCH AS WALNUTS.

It may cause damage or a failure of bowl, screw, squeezing strainer, etc.

Fruits with pits, hard seeds such as nectarines, peaches, mangos, apricots, plums and cherries must be pitted before juicing.

DO NOT OPERATE SWITCHES WITH WET HANDS.

It may cause an electric shock, an electric leakage or a fire. Do not stain any foreign substances around switches.

DO NOT PUT SEAFOOD, MEAT OR PRESERVED FRUITS INSIDE.

It may cause abnormal performances or a failure.


BE CAREFULL WITH LARGE AMOUNTS OF BERRIES OR GRAPES WITH SMALL SEEDS.

The small seeds in berries or grapes may collect under the screw and cause blockage. Carefully check when using berries and clean when necessary.

NOTE

Frozen fruit or withered ingredients stored in the refrigerator for a long time may produce less juice or it is even hard to squeeze them.

DISASSEMBLY, CLEANING AND CARE

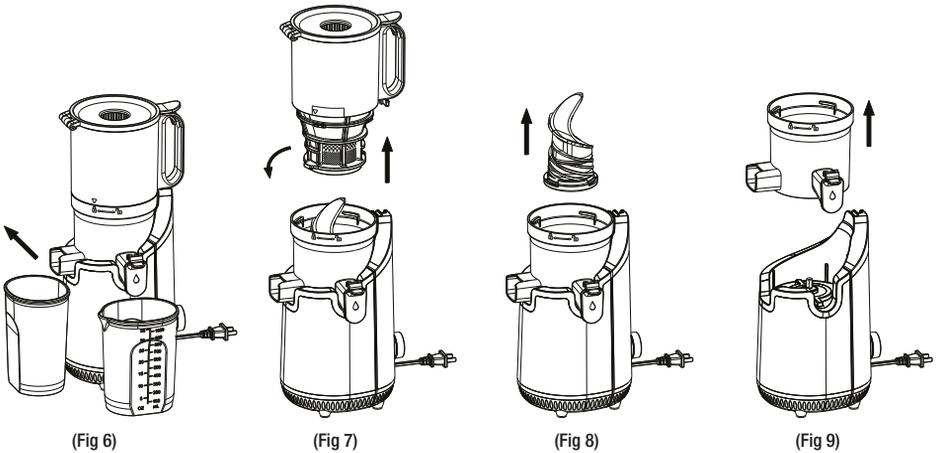


NOTE If the juicer gets overheated, it will turn off automatically to protect the machine. In this case, please turn the juicer “Off”. Wait 10 minutes to let the juicer cool down and then turn it on again.

To disassemble the unit after use and before cleaning. Please turn the juicer to “Off” position and disconnect the juicer from power source. Then, please follow the steps below:

<p>STEP 1</p> <p>Remove the juice and pulp containers. (Fig 6)</p>	<p>STEP 2</p> <p>Remove the hopper. Turn the hopper anti-clockwise until the ▲ aligns with the “unlock symbol”  sign. (Fig 7)</p>	<p>STEP 3</p> <p>Remove the squeezing screw by pulling it out upward. If it is very hard, swing gently and pull. (Fig 8)</p>	<p>STEP 4</p> <p>Remove the squeezing bowl by lifting it upward vertically. (Fig 9)</p>
---	---	---	--


DISASSEMBLY, CLEANING AND CARE

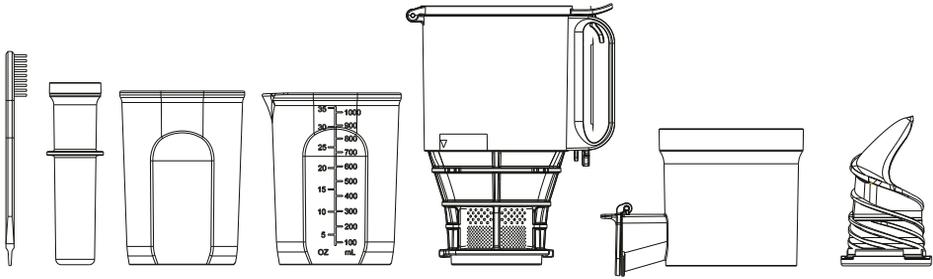

(Fig 10)


1. **Ensure the motor stops completely and unplug the power cord.**
 - ▶ When unplugging the power cord, hold the head part of the power cord and unplug it. Do not touch the power cord with wet hands.
2. **Disassemble the parts as mentioned on page 11:**
 - 1) Hold the bowl and unlock the hopper twisting counterclockwise.
 - 2) Take the screw out.
 - 3) Remove the strainer.
 - 4) Take the spinning brush out and disassemble the silicone brush.
3. **Rinse each parts with cleaning brush and brush the inside and outside under running water.**
 - ▶ Never use scouring pads, abrasive cleaning agent, aggressive liquids or sharp cleaning tools. Do not wash them in a dishwasher or a dish dryer.
4. **Wipe the stain on the base with soft damp cloth or wrung towel and dry it thoroughly.**
 - ▶ Do not immerse the base unit in water or any other liquid, nor rinse it under tap.
5. **After each cleaning, allow them to air-dry completely and store them in a clean and safe place.**
 - ▶ Always wash the bowl set immediately after each use. Without wash-up, remained pulps get dried up and stuck onto it. It makes difficult to disassemble or wash them. Also, it may cause degradation in performance.

BOWL DISASSEMBLY AND WASH

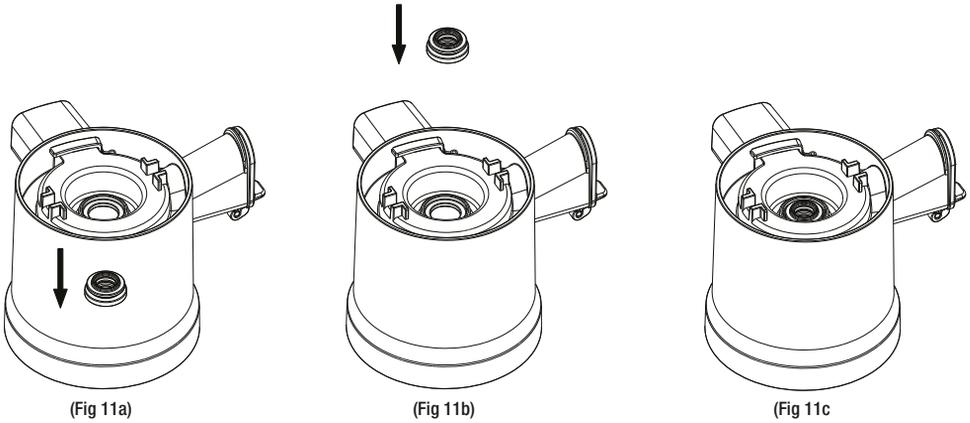

1 Remove bowl packing

- ▶ To clean the seal ring in the center of the squeezing bowl, please follow the steps as below:
 - a. Turn the squeezing bowl upside down for easier handling, push the seal ring out with your thumb (Fig 11a) and clean it with water.
 - b. After cleaning, please put it back to the center hole. The small ribbed surface should be facing upward (Fig 11b). Make sure the groove of the seal ring fits well in the squeezing bowl.
 - c. The big flat size of the seal ring will be inside while the small and ribbed side is outside the squeezing bowl. (Fig 11c)

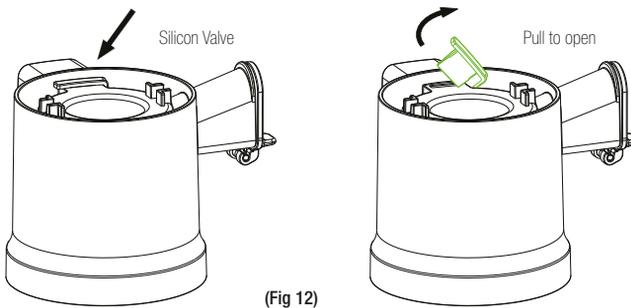

2 Open the extraction packing at the bottom of the bowl.

- ▶ In case there is any residue remaining in the mouth of the pulp spout, please pull out the silicone valve as shown above (Fig 12) and clean under running water with cleaning brush.

STERILIZATION AND EASY CLEANING SYSTEM

STERILIZATION

For sterilization, use baking soda or natural wash-up liquids only.

- ▶ You can thoroughly wash them immersing in the water diluted with one or two drops of baking soda or natural wash-up liquids for about 30 minutes' from "thoroughly wash them immersing in the water" to "thoroughly wash the parts of the topset by immersing them in water

EASY CLEANING SYSTEM

1 After closing the juice cap, pour the water into feeding tube and operate the appliance.

2 After a while, open the juice cap and discharge the water.

- ▶ Whenever changing the ingredient, it is not necessary to disassemble and wash the bowl. After juicing, make sure to disassemble and wash the bowl set.

TROUBLESHOOTING

Check the details below before contacting Technical Support for repair or service.

If you need information or if you have a problem, please contact the local Customer Care Center or visit www.versapers.com.

When applying for after sales service, check the manufacturer's serial number or bar code.

THE APPLIANCE DOES NOT WORK.

Make sure the power cord is properly plugged in. Check the hopper is assembled properly. If the hopper has not been properly locked in place, the appliance does not work for safety reason. Check if the appliance has been assembled according to the manual in an ordinary manner. See the assembly in the manual or consult with the local Customer Care Center for help.

THE HOPPER DOES NOT OPEN.

Is there lots of pulp inside the bowl? Press [ON] button to discharge internal pulp somehow.

Have you placed any foreign substances or solid object such as hard seeds?

Press the [Reverse/REV] button to make foreign substances come up again toward the feeding tube.

Do not attempt to open it by force or with too much pressure. Still it does not work following by the above process, contact the local Customer Care Center.

IT STOPS DURING NORMAL OPERATION.

Have you put a heavy load of ingredients or thick, hard ingredients? Read the manual Page 9 and follow Reverse/REV button guideline.

If the problem is not solved this way, contact the local Customer Care Center.

JUICE LEAKS OVER THE BASE.

Is Extraction packing properly inserted in?

Juice could leak when the extraction packing is not properly inserted in. Please push the extraction packing tight enough.

Juice is still leaking even though the extraction packing was inserted properly? Did you put heavy loads?

If an amount of input ingredient is too much compared to the size of pulp outlet, the packing may be slightly pushed out and juice may leak through the gap. Do not process heavy loads at a time and squeeze little by little.

THE BOWL SHAKES WHEN SQUEEZING.

Slight shaking may be occurred due to motor movement.


Large or small movements occur depending on the pulp texture of ingredients (hard or tough).

It is normal when the screw is rotating. Please note that it is not malfunction.

Hard ingredients (e.g. carrots/potatoes/radishes/beetroots, etc.) may make squeaking sounds and shake the bowl more than soft and juicy ingredients.

APPLIANCE SPECIFICATIONS

PRODUCT NAME	Versapers Slow Juicer	
MODEL NAME	Pelican	
RATED VOLTAGE	220-240 V	
RATED FREQUENCY	50-60 Hz	
RATED POWER CONSUMPTION	250 W	
RPM (REVOLUTIONS PER MINUTE)	42 RPM	
CORD LENGTH	90 cm	
MOTOR	Single Phase Induction AC Motor	
FUSE	250 V 5 A	
WEIGHT	3.4 KG	
OUTWARD DIMENSIONS	Width	200.5 mm
	Length	209.5 mm
	Height	436.5 mm
RATED OPERATING HOUR	Less than 20 minutes	

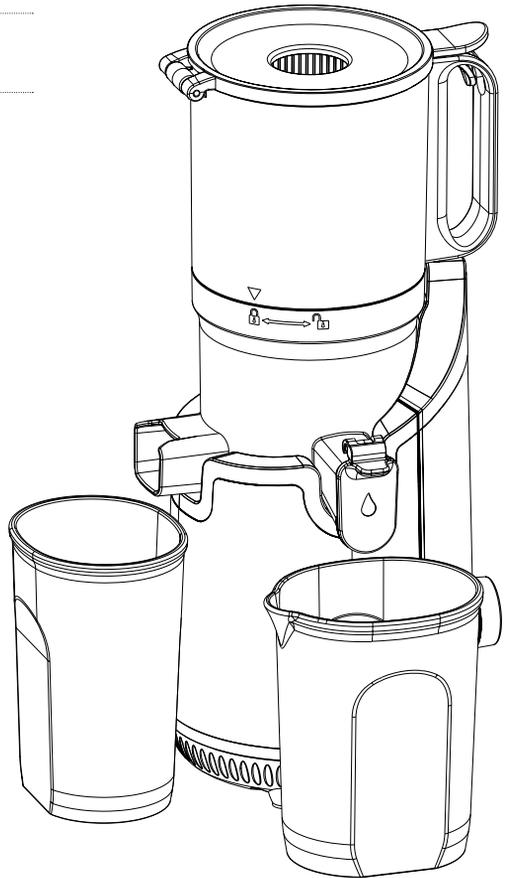

WARRANTY

To activate your warranty, simply keep your original invoice or purchase receipt. Contact Versapers by phone or email to voice the concern or question you have.

Please retain your original invoice or receipt as proof of purchase in case you need to make a warranty claim. We warrant this Versapers Pelican product to be free from defects in material construction and workmanship.

The motor is covered by a 5 year warranty, while other parts are covered for 2 years from the date of purchase for the original purchaser.

Please note that this warranty does not cover damages caused by accidents, misuse, abuse, leakage of water or juice on electrical components, commercial use, alterations, failure to follow operating instructions, or unauthorized repairs or parts.

If you require service, please contact our local Customer Care Center for technical assistance.

Manufacturer: **Versapers**

Versapers webpage: **www.versapers.com**

FINALLY

Just like you, Versapers is always evolving. We are committed to growth, learning, and development. We see home made fresh living juices as the best addition to the food you consume. Stay away from cans, packs and plastic bottles of stored juice as it's never going to match the quality of the juice you make yourself.

For the latest information on our products, please visit our website at www.versapers.com. You will also find more inspiration and the latest recipe book here.

Congratulations on your purchase and thank you for choosing Versapers!

Owner: **Joost Duisterwinkel**

Contact: **joost@versapers.nl +31 50 720 0456**



**You are now 3 minutes
away from a healthy
new experience
Go ahead and give
your body the nutrition
it is asking for
thank you...**

versapers[®]
Slow Juicer



Version 1.0

Copyright © All Rights Reserved by Versapers