 


# USER MANUAL

## Cheerble Ball Ice Cream

 
EN

### WHAT IS Cheerble Ball

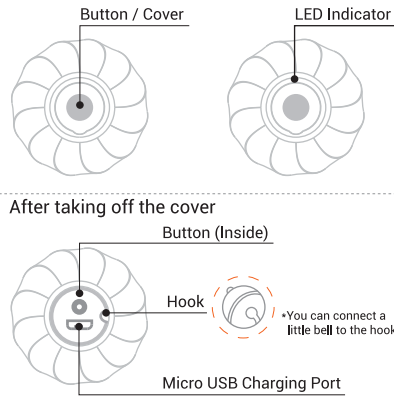


### QUICK START GUIDE

#### 1 Make sure Cheerble Ball is Fully Charged

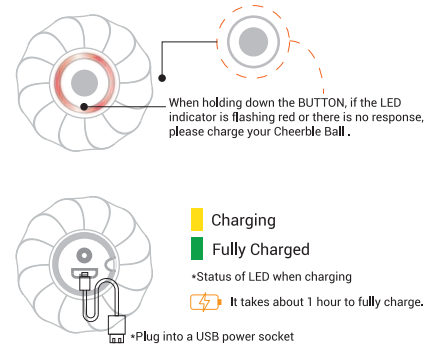


### QUICK START GUIDE
 
#### 2 Turn on and select a reaction mode

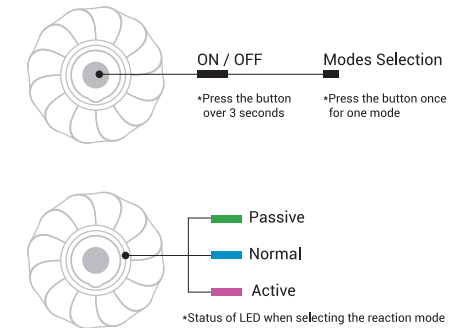

### QUICK START GUIDE
 
#### 3 Activate your Cheerble Ball

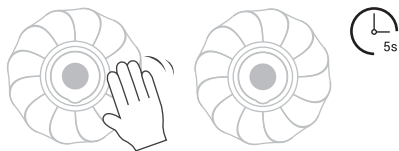

Two ways to activate your Cheerble Ball :

1. Activate it immediately by tapping or shaking.
2. It will be activated automatically after 5 seconds.

- ⚠ Before having fun with your cat, please check that your Cheerble Ball 's surface is in good condition.
- ⚠ Supervision is required during your pet's playtime.

### QUICK START GUIDE

 
#### 4 Start the Board Game



•Status of LED when working

- Tips** Cheerble Ball will play with your cat for 10 minutes, then it will rest for 30 minutes. However, during the rest, it can be re-activated by your cat's touch and play with your cat for another 10 minutes.

### SPECIFICATIONS

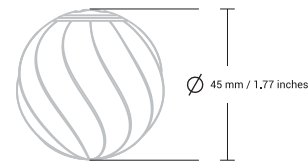

Model : C0419-C

Weight : 45 grams / 0.099 lb

Dimensions : ∅45 mm / 1.77 inches

Battery : Li-Polymer 3.7v 100mAh

Operating temperature : 0 ~ 40 °C / 32°F ~ 104°F

### Warranty

Cheerble offers one-year warranty for Cheerble Kitty Ball against any quality-related defects. Warranty starts from the date you receive your item. Warranty claims for product defects expire 90 days after opening a warranty claim.

#### Warranty are voided for/it:

- wrong item/component returned to us
- damage arising from improper use or maintenance (including, but not limited to: falls, extreme temperatures, operating devices improperly)
- damage arising from accident or external causes
- damage arising from abnormal wear and tear
- damage arising from unauthorized repair, modification or customization
- item used by other pets rather than the designated pets stated in product description (e.g. Kitty Ball used by a dog)
- normal wear down of the outershell, battery of Kitty Ball

#### Warranty are also voided for/it:

- lost or stolen items
- items that have expired their warranty period
- free products
- products that have been fully refunded
- any consumable items / parts supplied with the warranty item
- any accessories not being part or component of the warranty item
- proof of purchase is not provided by buyer
- items purchased from an unauthorized seller

More warranty details can be found at: [www.Cheerble.com](http://www.Cheerble.com)