

# Instructions



## Notice before Use

1. Read carefully of the [Notice before use] and check for water impermeability before each use.
2. Check properly the bag and accessory if there are any damage. Specially the clip and the opening of the bag. Do not expose under the sun for a long time.
3. Check the clip and opening of the bag every time after use to see if any impact happened from any hard object.
4. Sudden temperature change might cause humidity in the bag. Do open the bag and let it dry out completely.
5. If mud, dirt or sand in the bag found after use, do wash it away by clean water before storage.
6. Do not use in water, spring above 45 degree centigrade temperature.



Turn lock to open



Turn lock to close



Open

Put in

Close