

Instruction Manual




Thank you for your patronage.
Please read the manual carefully before using it and keep it for future reference.
The manual contains a variety of functional information about this product as well as some use tips to make your use experience easier and more comfortable.

1

Product introduction:

This product tends to be designed for lady use with a multi-functional trim set, with shaving head, clipper head, eyebrow trimmer head, side burns trimmer head, nose hair trimmer head, facial cleanser head, callus remover head, seven functional accessories for you to enjoy a comfortable experience from head to foot, the product uses high performance polymer lithium battery, strong magnetic power motor, imported stainless steel blade, intelligent circuit, overcharge over-discharge protection, 1 hour fast charge, low voltage reminder, travel switch lock function.

Product structure:

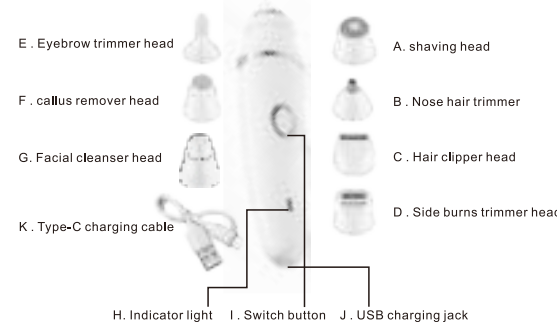

2

Warning:

- Ensure that the charging cable is dry.
- When charging is complete, remember to install the sealing ring of the charging port
- When washing and cleaning, make sure that the charging port seal is installed
- Clean the surface and keep the product dry
- When cleaning or performing other operations, hand contact is easy to turn on by mistake and hands try to avoid the induction switch area
- Do not allow the use of this product by persons (including children) who are unsound, feeling or mentally handicapped or lack relevant experience and knowledge, unless they are supervised or directed by persons responsible for their safety.
- Children should be looked after to ensure that they do not play with these products
- Do not use hot water when cleaning products. When using warm water, remember to check whether the water temperature is too high to prevent scald.
- Do not enter the charging cable into the water and wash it under the tap.
- Try not to flush the rear of the product while cleaning the product.
- Do not place products on or near metal platforms.
- Must be used, stored and charged at temperatures between \square -20 and 40.
- Use only the standard charging line of this product when charging.
- Be careful to view the power parameters when charging, only use the output DC5.0V 1000mA charger.
- Do not use this product if it is damaged.
- If the charging cable is damaged, be sure to purchase the original cable to avoid danger.
- When washing and cleaning, make sure that the charging port seal is installed.
- Be careful to use nose hair trimmer during the onset of rhinitis.
- Use carefully during skin infections and allergies. Do not use this product in patients.
- In view of health problems, it is recommended that no more people share components to avoid cross-infection of bacteria.

3

Functions and uses

- 1) When the main unit is working, the indicator light is shown as green, indicating that the product is in normal condition, and when the electricity is insufficient, the indicator light is red flashing state, which needs to be recharged and then used.
- 2) traveling or not in use for a long time, the shutdown time is 2 seconds, the product is in the state of locking machine, the wrong touch switch button will not turn on.
- 3) it takes 2 seconds to restart the switch when the switch is locked.

shaving head

- 1) This shaving head is mainly used for trimming facial beard, face and hand furry hair, and cleaning of body parts after shaving the head with sideburns and other functions to make skin surface smoother.
- 2) Check that the head and main unit are in place before use.
- 3) Turn on the unit before use, gently and repeatedly move the head of the unit opposite direction of the hair tilt until the hair is cleaned. (Figure 1)


Nose hair trimmer

- 1) Nose hair trimmer head is mainly used for nose hair, ear hair trimming.
- 2) Because the nasal cavity is a sensitive part, before using the unit to check the trimmer head sound is abnormal, or trimmer head is abnormal vibration.
- 3) When using, please gently touch the edge of the nostril, first adapt for a while, then gently stick the knife head to the inner wall of the nasal cavity, starting from the external edge of the nostril gently rotate the trimmer head until satisfactory effect. (Fig. 2)
- 4) When using nose hair trimmer, it is recommended that only the exposed parts be trimmed.

4

Hair clipper head

- 1) Pruning of large areas of body hair, such as leg hair, armpits, and private parts of the body.
- 2) First turn on the unit when using, close the blade teeth on any side of the knife head to the skin, the main unit and the skin show 30° angle, slowly move the position of the trimmer head. (Fig. 3)
- 3) Use both sides of the blade to cut the hair short, then use the middle foil perpendicular to the skin close, repeatedly move the trimmer head until the satisfactory effect. (Fig. 4)

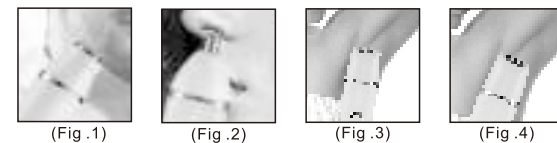

Sideburns trimmer head

- 1) Mainly used for trimming and hair modeling of sideburns, large beard and body hair.
- 2) When using, please keep the power of the product adequate, avoid hair clip, pull hair, resulting in physical discomfort.
- 3) This trimmer head can be used when any change of gestures, multi-angle use, can be trimmed a variety of shapes (Figure 5).

Eyebrow trimmer head

- 1) Double-sided T shaped blades head, mainly used for eyebrow, hair clutter and other parts.

5


- 2) When trimming the eyebrows, the top of the blade head is now slowly close to the eyebrows, and then slowly adjust the angle of use (Figure 6).
- 3) recommends to use a comb.

Callus remover head

- 1) The callus remover head is mainly used to polish the cuticle, freckles, hands, nails and other parts of the skin (Fig. 7)
WARNING: Be sure to keep your skin moist before using this callus remover head
- 2) When using this function to exfoliate, do not stay in the same position for more than 2 seconds to avoid skin burns

Facial cleansing head

- 1) The brush head is made of food grade silica gel, soft and skin friendly, mainly used for deep cleaning of the dead corner of the face (Fig. 8).
- 2) When using, first apply facial cleanser or foam to the skin, open the product, put the silicone brush head close to the skin, repeatedly move in the parts that need to be cleaned, clean the head with water.

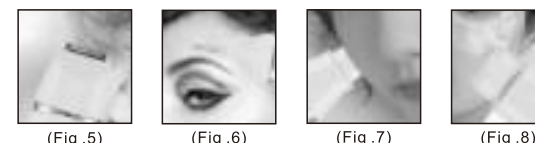

6

Low Power Tips and Charging

- When the power of the product is too low, the working indicator red light flashes.
- Wipe the product clean before charging and keep it dry.
- Open the charging hole seal plug and connect the TYPE-C connected to the product charging hole
- When charged, the indicator lights appear red, charged for 1 hour, when full charge, the indicator lights automatically switch to green

Cleaning and maintenance

- Ensure that the charging holes are sealed before cleaning
- Do not use metal such as steel wire or abrasive cleaner or corrosive liquid (e.g. gasoline or acetone) to clean the trimmer head and body surface
- The trimmer head can be washed under the tap or cleaned with an accompanying cleaning brush
- Be careful when using hot water, remember to check whether the water temperature is too high to prevent hot hands or damage to internal components
- Clean the body of the cutter head after each use in order to obtain the best use experience.
- The trimmer head and unit body can be cleaned with wet cloth.
- To ensure better use, the head of the trimmer must be cleaned regularly.
- If you do not use it for a long time, apply special lubricating oil to the head of the blade and turn on the unit for 3-5 seconds to ensure that the blade head is smooth in the next use.

Environmental protection

- When disposing the shaver, please do not put them in the general garbage heap; it should be handed in official designated recycling center. It is good for the environment.
- Built-in rechargeable batteries contain substances that may pollute the environment. Discard the shaver and make sure to remove the battery and dispose of it properly.

7

Note:

The rechargeable battery can only be removed when the shaver is discarded, please make sure the power is completely exhausted when the battery is removed.
Remove the front and back trim pieces and use a screwdriver to remove the housing and battery

8