




# Ultra Compact 35mm Camera + Waterproof Casing

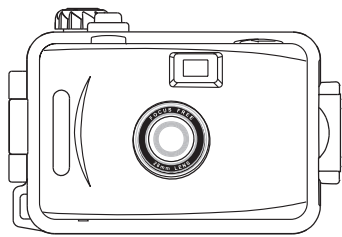


▲ 35mm camera with clear plastic waterproof casing

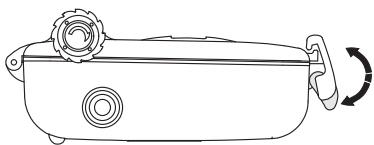


▲ Remove camera from outer casing by flipping open blue clip in direction of arrow.

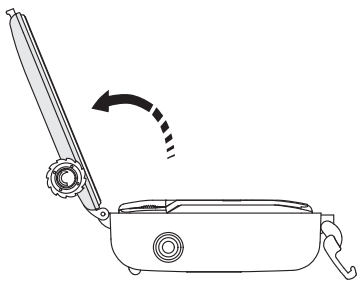


▲ Open casing back. Use care when opening; the rubber seal may be tight.

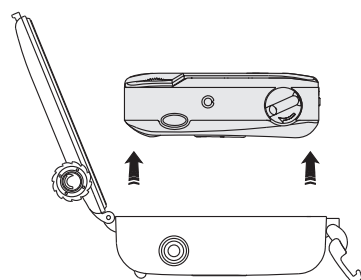

▲ Remove camera from casing to load 35mm film.

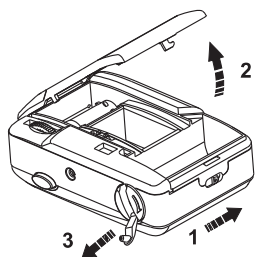


▲ To load film press down on side button (1). Open camera back (2). Flip handle up (3). Pull winder up and insert film.

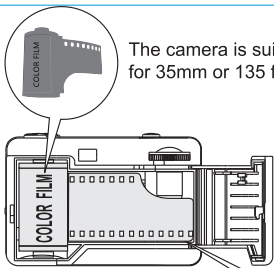


The camera is suitable for 35mm or 135 film.



▲ Place 35mm film in camera. Push winder down. Pull end of film to right side.

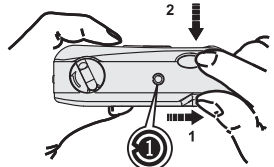


▲ Close back of camera and wind film forward (1) to advance to first frame. Press button (2) to take picture. Wind film forward to advance to next frame.

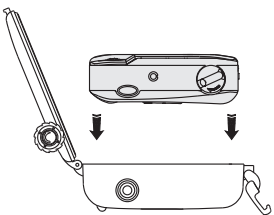


▲ For underwater use place camera inside waterproof casing. (In dry environment camera can be used either inside casing or outside of casing.)

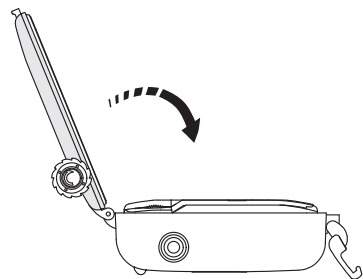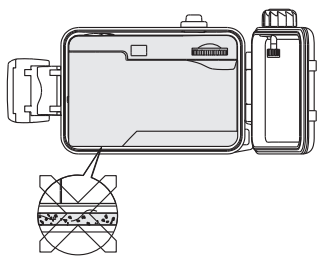


▲ Make sure the rubber seal is free from any dirt or debris in order to form waterproof seal around the camera. Close back cover of waterproof casing.

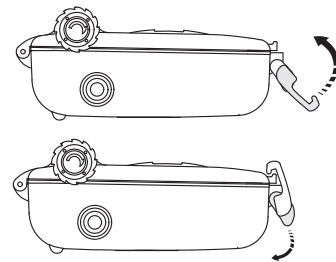


▲ Lock tight with the blue clip.

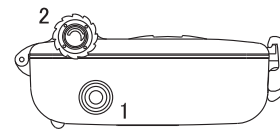



▲ To take a picture with waterproof casing attached, push down on blue button (1) on top of casing. To advance film wind blue knob (2) in direction of arrow.

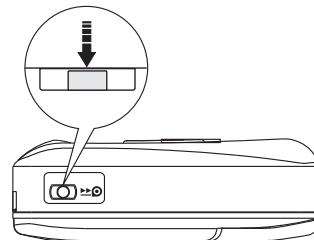

▲ To rewind film remove the camera from waterproof casing. Push in button located on bottom of camera.

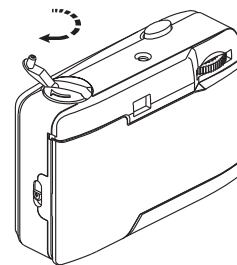

▲ Pull winder up. Wind film in clockwise direction as indicated by arrow. When counter is back to start (S) you can remove the film.

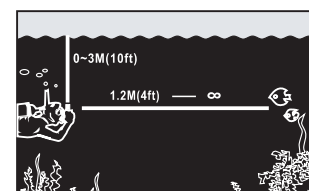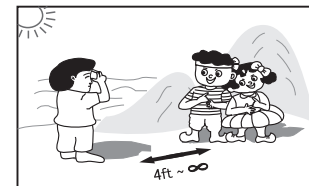

▲ Camera operates best up to maximum depth of 10 feet and distance of 4 feet.