


Game Controller Super Converters

Wii/ Wii U/ SW/ PS4 ↔ SW/ PS4 Controller Adapter

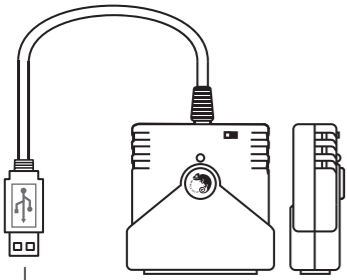

請將 Game Controller Super Converter 連接到 SW/ PS4/ PC 主機的 USB 連接埠，並按照以下內容操作以使用你的控制器。

對應 PS4 的轉接器按鍵配置對應表：

PS4 Console	NS Pro/JoyL&R	NS Joy-L	NS Joy-R	WiiU Pro	Wii Classic	Wii Stick	Wii Nunchuk	Wii Taiko	Wiiimote +Export	Wiiimote Only	PS4 DS4&Pro	XONE S
DP_U	DP_U	LS_L	RS_L	DP_U	DP_U	DP_U			DP_U	DP_L	DP_U	DP_U
DP_R	DP_R	LS_U	RS_U	DP_R	DP_R	DP_R			DP_R	DP_U	DP_R	DP_R
DP_D	DP_D	LS_R	RS_R	DP_D	DP_D	DP_D			DP_D	DP_R	DP_D	DP_D
DP_L	DP_L	LS_D	RS_D	DP_L	DP_L	DP_L			DP_L	DP_D	DP_L	DP_L
O	A	DP_D	X	A	A	A			A	1	O	
X	B	DP_L	A	B	B	B			B	2	X	
Δ	X	DP_R	Y	X	X	X			1	A	Δ	
□	Y	DP_U	B	Y	Y	Y			2	B	□	
L1	L	SL	SL	L	L	L	C				L1	L1
R1	R	SR	SR	R	R	R					R1	R1
L2	ZL	L+SL	R+SL	ZL	ZL	ZL	Z	LL			L2	L2
R2	ZR	L+SR	R+SR	ZR	ZR	ZR		RR			R2	R2
L3	L3			L3	-& ZL	-& ZL		L			L3	L3
R3	R3			R3	-& ZR	-& ZR		R			R3	R3
SHARE	-	-	HOME	-& L	-& L	-& L		-	-	SHARE	SHARE	
OPTIONS	+	CAPTURE	+	+	+	+ / ST		+	+	OPTIONS	OPTIONS	
L-Stick	L-Stick			L-Stick	L-Stick		Stick				L-Stick	L-Stick
R-Stick	R-Stick			R-Stick	R-Stick						R-Stick	R-Stick
TP-Key	CAPTURE			-& R	-& R	-& R				TP-Key	TP-Key	
PS	HOME	ZL	ZR	HOME	HOME	HOME			HOME	HOME	PS	PS

無線控制器 * 首次使用需註冊

★ NS 無線控制器連線方法

註冊你的控制器

- 確認 Game Controller Super Converter 未連接任何有線控制器。
- 按住 Game Controller Super Converter 上的 BROOK-Key 直到快閃後放開，然後按下控制器上的 SYNC 按鈕直到 NS 控制器進入無線註冊模式（LED 跑馬燈循環）以註冊您的控制器。

喚醒你的控制器

按下控制器上的任何按鍵使 LED 呈現循環跑馬燈狀態。

注意：

- 本產品支援 Joy-Con L 與 Joy-Con R 同時連線。
- 將兩支控制器依序註冊後即可使用兩支控制器同時進行遊戲。

★ Wii/ Wii U 無線控制器連線方法

註冊你的控制器

- 確認 Game Controller Super Converter 未連接任何有線控制器。
- 按住 Game Controller Super Converter 上的 BROOK-Key 直到快閃後放開，然後按下控制器上的 SYNC 按鈕直到閃爍以註冊您的控制器。

喚醒你的控制器

按下控制器上的任何按鍵可以喚醒連線，Game Controller Super Converter 的 LED 燈恆亮時表示連線完成。

★ PS4 無線控制器連線方法


註冊你的控制器

- 確認 Game Controller Super Converter 未連接任何有線控制器。
- 按住 Game Controller Super Converter 上的 BROOK-Key 直到快閃後放開，然後按下控制器上的 SHARE + PS 按鈕直到閃爍以註冊您的控制器。

喚醒你的控制器

按下控制器上的 PS 按鈕可以喚醒連線，Game Controller Super Converter 的 LED 燈恆亮時表示連線完成。

- 什麼是無線喚醒模式？**
當你將 Game Controller Super Converter 連接到 SW/ PS4/ PC 主機時，Game Controller Super Converter 上的 LED 燈會以每秒一次的間隔快速閃爍。此時已註冊的控制器可以被喚醒。
- 什麼是無線註冊模式？**
當 Game Controller Super Converter 處於無線喚醒模式時，按下 BROOK-Key 可切換至無線註冊模式，此時 Game Controller Super Converter 上的 LED 燈會以每秒三次的間隔快速閃爍。

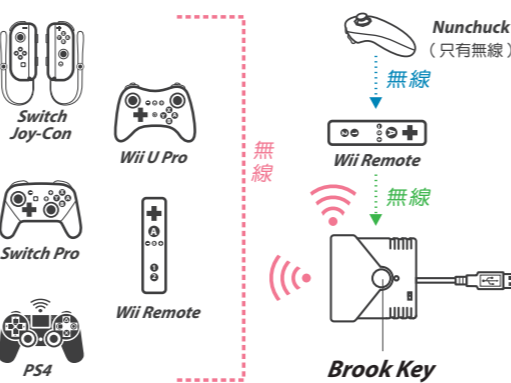

對應 Nintendo Switch 的轉接器按鍵配置對應表：

NS Console	NS Pro/JoyL&R	NS Joy-L	NS Joy-R	WiiU Pro	Wii Classic	Wii Stick	Wii Nunchuk	Wii Taiko	Wiiimote +Export	Wiiimote Only	PS4 DS4&Pro	XONE S
DP_U	DP_U	LS_L	RS_L	DP_U	DP_U	DP_U			DP_U	DP_L	DP_U	DP_U
DP_R	DP_R	LS_U	RS_U	DP_R	DP_R	DP_R			DP_R	DP_U	DP_R	DP_R
DP_D	DP_D	LS_R	RS_R	DP_D	DP_D	DP_D	L		DP_D	DP_R	DP_D	DP_D
DP_L	DP_L	LS_D	RS_D	DP_L	DP_L	DP_L			DP_L	DP_D	DP_L	DP_L
A	A	DP_D	X	A	A	A	R		A	1	O	B
B	B	DP_L	A	B	B	B			B	2	X	A
X	X	DP_R	Y	X	X	X			1	A	Δ	Y
Y	Y	DP_U	B	Y	Y	Y			2	B	□	X
L	L	SL	SL	L	L	L	C				L1	L
R	R	SR	SR	R	R	R					R1	R
ZL	ZL	L+SL	R+SL	ZL	ZL	ZL	Z	LL			L2	LT
ZR	ZR	L+SR	R+SR	ZR	ZR	ZR		RR			R2	RT
L3	L3			L3	-& ZL	-& ZL					L3	L3
R3	R3			R3	-& ZR	-& ZR					R3	R3
-	-	-	HOME	-& L	-& L	-& L		-	-	SHARE	View+L	
+	+	CAPTURE	+	+	+	+ / ST		+	+	OPTIONS	Menu	
L-Stick	L-Stick			L-Stick	L-Stick		Stick				L-Stick	L-Stick
R-Stick	R-Stick			R-Stick	R-Stick						R-Stick	R-Stick
CAPTURE	CAPTURE			-& R	-& R	-& R				TP-Key	View+R	
HOME	HOME	ZL	ZR	HOME	HOME	HOME			HOME	HOME	PS	Xe


有線控制器

★ 有線控制器連線方法

將控制器接入 Game Controller Super Converter 即可使用。

★ 有線控制器透過 Wii Remote 連線方法

- 將已註冊成功之 Wii Remote 喚醒與 Game Controller Super Converter 連線。
- 將有線控制器接上 Wii Remote 即可使用。
- 按下 Wii Remote 上的 Home 按鈕可以喚醒連線，Game Controller Super Converter 的 LED 燈恆亮時表示連線完成。

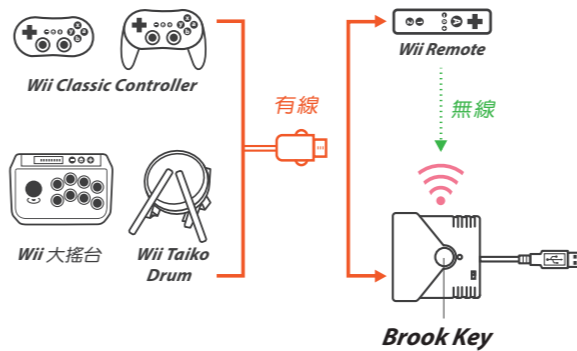

對應 PC(XID) 的轉接器按鍵配置對應表：

PC/XID Console	NS Pro/JoyL&R	NS Joy-L	NS Joy-R	WiiU Pro	Wii Classic	Wii Stick	Wii Nunchuk	Wii Taiko	Wiiimote +Export	Wiiimote Only	PS4 DS4&Pro	XONE S
DP_U	DP_U	LS_L	RS_L	DP_U	DP_U	DP_U			DP_U	DP_L	DP_U	DP_U
DP_R	DP_R	LS_U	RS_U	DP_R	DP_R	DP_R			DP_R	DP_U	DP_R	DP_R
DP_D	DP_D	LS_R	RS_R	DP_D	DP_D	DP_D	L		DP_D	DP_R	DP_D	DP_D
DP_L	DP_L	LS_D	RS_D	DP_L	DP_L	DP_L			DP_L	DP_D	DP_L	DP_L
B	A	DP_D	X	A	A	A			B	2	O	B
A	B	DP_L	A	B	B	B			A	1	X	A
Y	X	DP_R	Y	X	X	X			1	A	Δ	Y
X	Y	DP_U	B	Y	Y	Y			2	B	□	X
L	L	SL	SL	L	L	L	C				L1	L
R	R	SR	SR	R	R	R					R1	R
LT	ZL	L+SL	R+SL	ZL	ZL	ZL	Z	LL			L2	LT
RT	ZR	L+SR	R+SR	ZR	ZR	ZR		RR			R2	RT
L3	L3			L3	-& ZL	-& ZL					L3	L3
R3	R3			R3	-& ZR	-& ZR					R3	R3
BACK	-	-	HOME	-	-	-		-	-	SHARE	View	
START	+	CAPTURE	+	+	+	+		+	+	OPTIONS	Menu	
L-Stick	L-Stick			L-Stick	L-Stick		Stick				L-Stick	L-Stick
R-Stick	R-Stick			R-Stick	R-Stick						R-Stick	R-Stick
Xe	HOME	ZL	ZR	HOME	HOME	HOME			HOME	HOME	PS	Xe

連射功能設定

以下說明使用 Wii U Pro 為範例，使用其他控制器請參照按鍵配置對應表。

連射功能設定

允許設定連射功能的按鈕：
A, B, X, Y, L, R, ZL, ZR, L3, R3 (或 PS4 控制器上的 O, X, Δ, □, L1, R1, L2, R2, L3, R3) 10 個按鈕 (以下稱為 FB)。
*Wii Remote 無線控制器本體不適用此功能，但透過 Wii Remote 連接的有線控制器依然支援此功能。

- 進入設置模式：**
按 (-) 和 Home，轉換器的 LED 將綠色變為紅色。
- 選擇 FB 按鈕：**
(例如：A 設置 turbo 功能) 按住 (-)，然後按 A
- 完成設置模式：**
釋放所有按鈕，然後按 (+)
- 退出設置模式：**
按 Home 鍵，轉換器的 LED 將紅色變為綠色。

取消連射功能

- 進入設置模式：**
按 (-) 和 Home，轉換器的 LED 將綠色變為紅色。
- 如果要清除所有 turbo 功能按鈕：**
按 (+) 和 (-) 然後轉到 Step.5
- 選擇 FB 按鈕：**
(例如：A 清除 turbo 功能) 按 A
- 完成設置模式：**
按 (+)
- 退出設置模式：**
按 Home 鍵，轉換器的 LED 將紅色變為綠色。

*完成 Step4. 之後若想繼續進行更多設定，可以從 Step2. 再度進行操作。完成所有設定後再轉至 Step5. 退出設置模式。

重新分配設定

以下說明使用 Wii U Pro 為範例，使用其他控制器請參照按鍵配置對應表。

重新分配設置

允許設定重新分配的按鈕：
A, B, X, Y, L, R, ZL, ZR, L3, R3 (或 PS4 控制器上的 O, X, Δ, □, L1, R1, L2, R2, L3, R3) 10 個按鈕 (以下稱為 FB)。
*Wii Remote 無線控制器本體不適用此功能，但透過 Wii Remote 連接的有線控制器依然支援此功能。

- 進入設置模式：**
按 (+) 和 Home，轉換器的 LED 將綠色變為紅色。
- 選擇 FB 按鈕：**
(例如：X 做 A+B 功能) 按 X。
- 選擇重新分配按鈕：**
按住 (-)，然後按 A+B。
- 完成設置模式：**
釋放所有按鈕，然後按 (+)
- 退出設置模式：**
按 Home 鍵，轉換器的 LED 將紅色變為綠色。

取消重新分配

- 進入設置模式：**
按 (-) 和 Home，轉換器的 LED 將綠色變為紅色。
- 如果要清除所有重映射功能按鈕：**
按 (+) 和 (-) 然後轉到 Step.5
- 選擇清除 FB 按鈕：**
(例如：A 清除重映射功能) 按 A。
- 進入清除功能：**
按 (+)
- 退出設置模式：**
按 Home 鍵，轉換器的 LED 將紅色變為綠色。

*完成 Step4. 之後若想繼續進行更多設定，可以從 Step2. 再度進行操作。完成所有設定後再轉至 Step5. 退出設置模式。

Taiwan regulatory information(NCC)

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

- ◆ 前項合法通信，指依電信法規定作業之無線電通信。
- ◆ 低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

CCAN19LP0740T1

005-102091


P/N: ZPPA00G
FM00007212

更多詳細操作請上官網查詢
www.brookaccessory.com



Game Controller Super Converters

Wii/ Wii U/ SW/ PS4 ↔ SW/ PS4 Controller Adapter

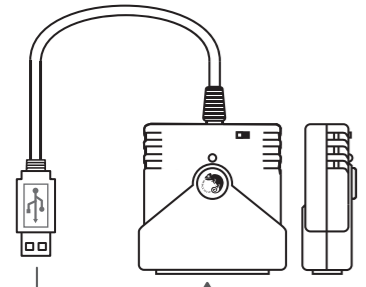

Please connect your Game Controller Super Converter to the USB port of the SW/PS4/PC and follow the instructions below to use your controller.

Wireless Controller

★ How to Connect NS wireless Controllers

Register your controllers

- step.1** Make sure that the Game Controller Super Converter is not connected with any wired controller.
- step.2** Press and hold the BROOK-Key on the Game Controller Super Converter until it flashes quickly and then release it, then press the SYNC button on the controller until NS controller enters the wireless registration mode (LED loop) to register your NS Controller.

Wake up your controllers

Press any button on controller to make the LED appear looping.

Note: This product supports to use Joy-Con L and Joy-Con R at the same time. By registering the two controllers in sequence, you can use both controllers to play the game at the same time.

★ How to Connect Wii/Wii U Wireless Controller

Register your controllers

- step.1** Make sure that the Game Controller Super Converter is not connected with any wired controller.
- step.2** Press and hold the BROOK-Key on the Game Controller Super Converter until it flashes quickly and then release it, then press the SYNC button on the controller until it flashes to register your controller.

Wake up your controllers

Press any button on controller to wake up the connection. When the LED of the Game Controller Super Converter is steady on, it indicates that the connection is complete

★ How to Connect PS4 Wireless Controller

Register your controllers


- step.1** Make sure that the Game Controller Super Converter is not connected with any wired controller
- step.2** Press and hold the BROOK-Key on the Game Controller Super Converter until it flashes quickly and then release it, then press the SHARE + PS button on the controller until it flashes to register your controller.

Wake up your controllers

Press the PS button on controller to wake up the connection. When the LED of the Game Controller Super Converter is steady on, it indicates that the connection is complete.

What is the wireless wake-up mode?
When you connect the Game Controller Super Converter to a SW/PS4/PC, the LED on the Game Controller Super Converter will flash slowly at once per second. The registered controller can be wake up.

What is the wireless registration mode?
When the Game Controller Super Converter is in wireless wake-up mode, press BROOK-Key to switch to wireless registration mode, and the LED on the Game Controller Super Converter will flash rapidly at three times per second.

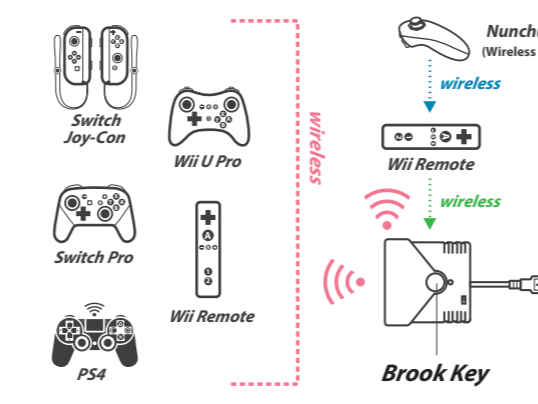


Wired Controller

★ How to Connect Wired Controller

Just connect the controller to the Game Controller Super Converter to use.

★ Via Wii Remote

- step.1** Wake up Wii Remote controller.
- step.2** Connect the wired controller to Wii Remote for use.
- step.3** Press the Home button on Wii Remote to wake up the connection. When the LED of the Game Controller Super Converter is steady on, it indicates that the connection is complete.

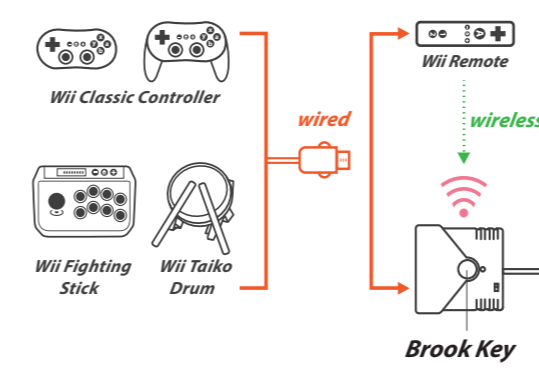

Turbo Setting

The following description uses the Wii U Pro controller as an example. For other controllers, please refer to the button configuration table.

How to set Turbo

Turbo function available buttons: A, B, X, Y, L, R, ZL, ZR, L3, R3(or O, X, Δ, □, L1, R1, L2, R2, L3, R3 on PS4 Controller) In total 10 buttons (referred to as FB). *This function is not available on the Wii Remote wireless controller. However, wired controllers connected via Wii Remote still support this function.

- step.1** Enter the setting mode:
Press (-) & Home, the converter's LED will change Green to Red.
- step.2** Choice FK button:
Ex: A to set turbo function. Hold on (-), then press A.
- step.3** Complete the setting mode:
Release all buttons then press (+).
- step.4** Exit the setting mode:
Press Home, the converter's LED will change Red to Green

How to clear Turbo

- step.1** Enter the setting mode:
Press (+) & Home, the converter's LED will change Green to Red.
- step.2** If wanted to clear all turbo function buttons, press on (+) & (-) then Go to Step 5.
- step.3** Choice FK button:
(Ex: A to clear turbo function), press A.
- step.4** Complete the setting mode:
Press (+).
- step.5** Exit the setting mode:
Press Home, the converter's LED will change Red to Green.

*Note: If you want to continue with more settings after completing Step4, you can do it again from Step2. After completing all settings, go to Step 5 to exit setup mode.

Remap Setting

The following description uses the Wii U Pro controller as an example. For other controllers, please refer to the button configuration table.

How to set Remap

Remap function available buttons: A, B, X, Y, L, R, ZL, ZR, L3, R3(or O, X, Δ, □, L1, R1, L2, R2, L3, R3 on PS4 Controller) In total 10 buttons (referred to as FB). *This function is not available on the Wii Remote wireless controller. However, wired controllers connected via Wii Remote still support this function.

- step.1** Enter the setting mode:
Press (+) & Home, the converter's LED will change Green to Red.
- step.2** Choice FK button:
Ex: X to do A+B function, press X
- step.3** Choice Remap button:
Hold on (-), then press A+B
- step.3** Complete the setting mode:
Release all buttons then press (+)
- step.4** Exit the setting mode:
Press Home, the converter's LED will change Red to Green.

How to clear Remap

- step.1** Enter the setting mode:
Press (+) & Home, the converter's LED will change Green to Red.
- step.2** If wanted to clear all remap function buttons, press on (+) & (-) Go to Step 5
- step.3** Choice to clear FK button:
Ex: A to clear remap function, press A
- step.4** Enter to the clear function:
Press (+).
- step.5** Exit the setting mode:
Press Home, the converter's LED will change Red to Green.

*Note: If you want to continue with more settings after completing Step4, you can do it again from Step2. After completing all settings, go to Step 5 to exit setup mode.

Button Configuration for PS4

PS4 Console	NS Pro/JoyL&R	NS Joy-L	NS Joy-R	WiiU Pro	Wii Classic	Wii Stick	Wii Nunchuk	Wii Taiko	Wiiexport	Wiiexport Only	PS4 DS4&Pro	XONE S
DP_U	DP_U	LS_L	RS_L	DP_U	DP_U	DP_U			DP_U	DP_L	DP_U	DP_U
DP_R	DP_R	LS_U	RS_U	DP_R	DP_R	DP_R			DP_R	DP_U	DP_R	DP_R
DP_D	DP_D	LS_R	RS_R	DP_D	DP_D	DP_D			DP_D	DP_R	DP_D	DP_D
DP_L	DP_L	LS_D	RS_D	DP_L	DP_L	DP_L			DP_L	DP_D	DP_L	DP_L
O	A	DP_D	X	A	A	A			A	1	O	B
X	B	DP_L	A	B	B	B			B	2	X	A
Δ	X	DP_R	Y	X	X	X			1	A	Δ	Y
□	Y	DP_U	B	Y	Y	Y			2	B	□	X
L1	L	SL	SL	L	L	L	C				L1	L1
R1	R	SR	SR	R	R	R					R1	R1
L2	ZL	L+SL	R+SL	ZL	ZL	ZL	Z	LL			L2	L2
R2	ZR	L+SR	R+SR	ZR	ZR	ZR		RR			R2	R2
L3	L3			L3	-&ZL	-&ZL		L			L3	L3
R3	R3			R3	-&ZR	-&ZR		R			R3	R3
SHARE	-	-	HOME	-&L	-&L	-&L		-	-		SHARE	SHARE
OPTIONS	+	CAPTURE	+	+	+	+ / ST		+	+		OPTIONS	OPTIONS
L-Stick	L-Stick			L-Stick	L-Stick		Stick				L-Stick	L-Stick
R-Stick	R-Stick			R-Stick	R-Stick						R-Stick	R-Stick
TP-Key	CAPTURE			-&R	-&R	-&R					TP-Key	TP-Key
PS	HOME	ZL	ZR	HOME	HOME	HOME		HOME	HOME		PS	PS

Button Configuration for Nintendo Switch

NS Console	NS Pro/JoyL&R	NS Joy-L	NS Joy-R	WiiU Pro	Wii Classic	Wii Stick	Wii Nunchuk	Wii Taiko	Wiiexport	Wiiexport Only	PS4 DS4&Pro	XONE S
DP_U	DP_U	LS_L	RS_L	DP_U	DP_U	DP_U			DP_U	DP_L	DP_U	DP_U
DP_R	DP_R	LS_U	RS_U	DP_R	DP_R	DP_R			DP_R	DP_U	DP_R	DP_R
DP_D	DP_D	LS_R	RS_R	DP_D	DP_D	DP_D	L		DP_D	DP_R	DP_D	DP_D
DP_L	DP_L	LS_D	RS_D	DP_L	DP_L	DP_L			DP_L	DP_D	DP_L	DP_L
A	A	DP_D	X	A	A	A	R		A	1	O	B
B	B	DP_L	A	B	B	B			B	2	X	A
X	X	DP_R	Y	X	X	X			1	A	Δ	Y
Y	Y	DP_U	B	Y	Y	Y			2	B	□	X
L	L	SL	SL	L	L	L	C				L1	L
R	R	SR	SR	R	R	R					R1	R
ZL	ZL	L+SL	R+SL	ZL	ZL	ZL	Z	LL			L2	LT
ZR	ZR	L+SR	R+SR	ZR	ZR	ZR		RR			R2	RT
L3	L3			L3	-&ZL	-&ZL					L3	L3
R3	R3			R3	-&ZR	-&ZR					R3	R3
-	-	-	HOME	-&L	-&L	-&L		-	-		SHARE	View+L
+	+	CAPTURE	+	+	+	+ / ST		+	+		OPTIONS	Menu
L-Stick	L-Stick			L-Stick	L-Stick		Stick				L-Stick	L-Stick
R-Stick	R-Stick			R-Stick	R-Stick						R-Stick	R-Stick
CAPTURE	CAPTURE			-&R	-&R	-&R					TP-Key	View+R
HOME	HOME	ZL	ZR	HOME	HOME	HOME		HOME	HOME		PS	Xe

Button Configuration for PC(XID)

PC/XID Console	NS Pro/JoyL&R	NS Joy-L	NS Joy-R	WiiU Pro	Wii Classic	Wii Stick	Wii Nunchuk	Wii Taiko	Wiiexport	Wiiexport Only	PS4 DS4&Pro	XONE S
DP_U	DP_U	LS_L	RS_L	DP_U	DP_U	DP_U			DP_U	DP_L	DP_U	DP_U
DP_R	DP_R	LS_U	RS_U	DP_R	DP_R	DP_R			DP_R	DP_U	DP_R	DP_R
DP_D	DP_D	LS_R	RS_R	DP_D	DP_D	DP_D			DP_D	DP_R	DP_D	DP_D
DP_L	DP_L	LS_D	RS_D	DP_L	DP_L	DP_L			DP_L	DP_D	DP_L	DP_L
B	A	DP_D	X	A	A	A			B	2	O	B
A	B	DP_L	A	B	B	B			A	1	X	A
Y	X	DP_R	Y	X	X	X			2	B	Δ	Y
X	Y	DP_U	B	Y	Y	Y			1	A	□	X
L	L	SL	SL	L	L	L	C				L1	L
R	R	SR	SR	R	R	R					R1	R
LT	ZL	L+SL	R+SL	ZL	ZL	ZL	Z	LL			L2	LT
RT	ZR	L+SR	R+SR	ZR	ZR	ZR		RR			R2	RT
L3	L3			L3							L3	L3
R3	R3			R3							R3	R3
BACK	-	-	HOME	-	-	-		-	-		SHARE	View
START	+	CAPTURE	+	+	+	+		+	+		OPTIONS	Menu
L-Stick	L-Stick			L-Stick	L-Stick		Stick				L-Stick	L-Stick
R-Stick	R-Stick			R-Stick	R-Stick						R-Stick	R-Stick
Xe	HOME	ZL	ZR	HOME	HOME	HOME		HOME	HOME		PS	Xe

CCAN19LP0740T1
 005-102091
 P/N: ZPPA00G
 FM00007212
 For more details, please visit our official website at: www.brookaccessory.com