

CONTENTS LIST



X120



PLEASE REFER TO THE USER MANUAL FOR MORE INFORMATION



CONTENTS LIST

NO. B7201



REQUIRES 2XAA 1.5V BATTERIES (NOT INCLUDED)

IMPORTANT! READ THESE INSTRUCTION CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- Instruction for removing / inserting batteries
- Open the bottom of the train.
- Carefully remove battery compartment.
- Using a screwdriver, unfasten the screw securing the cover of the compartment.
- Remove cover.
- Insert 2 X AA batteries, ensuring these are at the correct polarities.
- Replace the cover.
- Fasten screw, ensuring cover is securely sealed.

تحذير: يرجى الاحتفاظ بهذه التعليمات بعناية للاطلاع عليها في المستقبل.

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS

غير مناسب للأطفال دون سن 3 سنوات بسبب الأجزاء الصغيرة

COUNTRY OF ORIGIN: CHINA

بلد المنشأ: الصين

NO. B7201
MADE IN CHINA



WARNING: CHOKING HAZARD - small parts. Not for children under 3 years.

PRECAUCIONES: PELIGRO DE ASFIXIA. Contiene partes pequeñas. No recomendable para niños menores de 3 años.

SPECIFICATIONS, COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS. PLEASE RETAIN PACKAGING FOR FUTURE REFERENCE.



RANDOM COLORS MAY HAPPEN IN PARTS

RANDOM COLORS MAY HAPPEN IN PARTS