


PRO PHONE



TO REPLACE BATTERIES:

Remove the safety screws and open the battery compartment cover. Install the batteries making sure that the positive (+) and the negative (-) poles are in correct position. To ensure proper and safe operation, battery replacement must always be done by an adult. Never let a child use this product unless battery cover is secured. Batteries are small objects and could be ingested. Keep all batteries away from small children. Immediately and safely dispose all used batteries.

BATTERY INSTALLATION INSTRUCTIONS

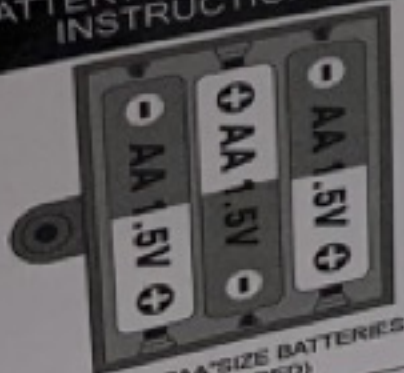

USES 3X 1.5V AA SIZE BATTERIES (NOT INCLUDED)



PLEASE RECYCLE



PRECAUCIONES:

PELIGRO DE AHOGARSE Contiene partes pequeñas. No recomendado para niños menores de 3 años.

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS
 غير مناسب للأطفال الذين هم أقل من 3 سنوات بسبب الأجزاء الصغيرة
 0-3

ممنوع للأطفال الذين هم أقل من 3 سنوات بسبب الأجزاء الصغيرة
 ممنوع للأطفال الذين هم أقل من 3 سنوات بسبب الأجزاء الصغيرة

WARNING
 CHOKING HAZARD - Not for children under 3 years

ATTENTION:

- Do not mix old and new batteries.
- Do not mix alkaline standard (carbon-zinc) and rechargeable batteries.
- Only the same or equivalent type of batteries are to be recharged.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be recharged in the correct manner.
- Exhausted or dead batteries are to be removed immediately.
- Always remove the batteries if the toy is not to be used for a long period.