 


专业推剪

 
我为专业人士报名
型号：YS系列



操作手册

Professional push shear

DESIGNED FOR THE PROFESSIONAL
MODEL: YS-series



Operating Manual

保修卡

品名	专业版充电剪	保修期
产品型号		一年内购买日期
购买日期	出发地：(年月日)	致：(年月日)

顾客	添加		姓名	
			电话	
零售商	添加		姓名	
	姓名		电话	

产品保证：

1. 这个产品是通过精确的质量制造的管理和检查过程。
2. 如果在正常运行期间出现任何故障，客户可以免费送零售商或维修中心维护。
(蓄电池和叶片为易损件，不在保修范围内仅在付款后提供)
- 三。以下任何一种情况均不得提供免费服务：
 - A. 未经制造厂认可的维修改造造成的任何损坏。
 - B. 因错误、意外使用或事故造成的任何损坏。
 - C. 任何由自然灾害和异常电压引起的损坏。
 - D. 因不遵守本操作手册中的说明而造成的任何损坏。
4. 本保修卡是唯一的保修凭证，不允许凭发票对产品进行维修。

Warranty Card


Product Name	Rechargeable Clipper for the Professional	Warranty Period
Product Model		Within one year since the purchase date
Purchase Date	From: (M/D/Y)	To: (M/D/Y)

Customer	Add.		Name	
			Tel.	
Retailer	Add.		Name	
	Name		Tel.	

Product Assurances:

1. This product has been manufactured through the precise quality management and inspection process.
2. In case of any failure during the normal operating, customer may send to the retailer or maintenance center for free-of-charge Maintenance.
(Battery and blade are quick-wear parts excluding from the warranty which shall only be provided upon the payment)
3. Free service shall not be provided in either case below:
 - A. Any damage caused by the maintenance and transformation that is not recognized by the manufacturer.
 - B. Any damage caused by mistake, inadvertent use or accident
 - C. Any damage caused by natural disaster and abnormal voltage.
 - D. Any damage caused by non-compliance with the notes as stated in this operating manual.
4. This Warranty Card shall be the only proof of warranty, while the product maintenance against invoice shall not be allowed

 
注意

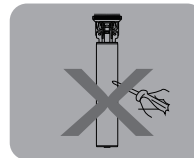


1. 请不要拆卸产品。



 2. 切忌用水冲洗，操作时要防潮。

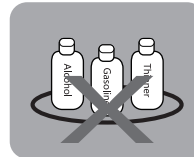

 3. 只需使用少量湿布或中性液体肥皂清洁产品。

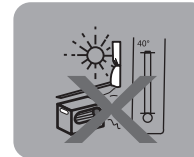


4. 切勿在高于40°C的热源或低于0°C的环境中对产品充电。


*正常情况下，在运行或充电过程中轻微发热。

*电池寿命结束后，安全地将电池取下并扔到指定的回收地点。不要随意丢弃。

 
Note

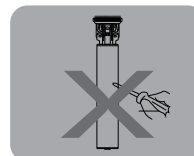

 
1. Please do not disassemble the product.

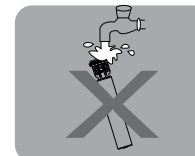

 2. Water must not be used to wash the clipper, keep away from the dampness while operating.

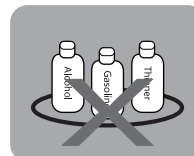

 3. Only use a little wet cloth or neutral liquid soap to clean the product.

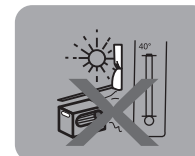


4. Never charge the product above 40°C heat source or below 0°C environment.

*Slight heating during the operating or charging is normal case

*After the battery life expires, take off and throw the battery in safe manner into the designated recycling site. Never dump it randomly.


刀具清洗和维护

 锥形叶片清洗

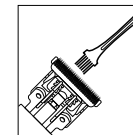

用清洁刷清理刀片。

 
锥形叶片维护

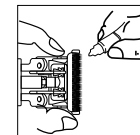


使用前或使用后，在如左图所示的红点处滴一些油，以保持刀片。

叶片拆卸和安装

 叶片拆卸

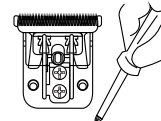

- 如用螺丝刀将旋转刀盘下部，拆下刀盘

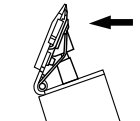 

- 为了防止刀子掉下来，用另一只手握住它。

叶片安装

 


- 用螺丝刀拧紧螺丝，确保刀头不会脱落。

温馨提示：刀尖未经任何技巧不得拆卸。


Cutter Cleaning and Maintenance

Taper Blade Cleaning

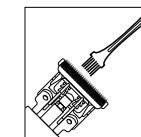

Clear up the blade with cleaning brush.

 
Taper Blade Maintenance

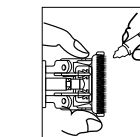


Before or after use, maintain the blade by dripping some oil on the red point. Places like the left picture.

Blade Removal & Installation

 Blade Removal

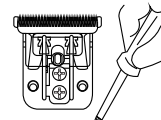


 - Such as a screwdriver with the rotary cutter head under part, remove the cutter head

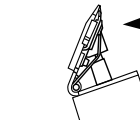

- To prevent the knife from falling, use another hand to hold it

 Blade Installation



- Tighten the screw with a screwdriver to ensure the head of the knife, will not fall off.

Warm tip: do not disassemble the knife head without any skill.

