

Child Safety Locks

Removable Instructions:

1. To remove the latch you can heat adhesive ads on each side with a hair dryer for and then they will come off very easily.
2. Use a length of dental floss or a thin plastic object, such as a kitchen knife or expired credit card, and pull of mounts starting from the edges. Wipe off excessive adhesive with a soft cloth and soapy water.
3. Do not pull it out too tight. If it's too difficult to pull off, just keep heating it with the hair dryer.


Caution:

1. This is not a toy.
2. Please do not use if there is any damage
3. This product can not replace adult supervision.


Material: ABS +TPE

Made in China

Normal Lock Function

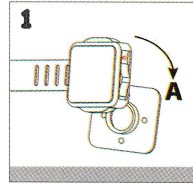


Put the lock back to the base. (Part A)

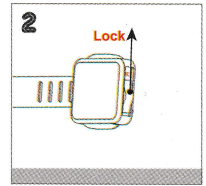


Slide up the button to "Lock" (Lock)

Normal Open Function

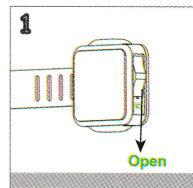


Slide down the button to "Open" (Open)

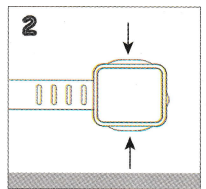


Press down the two buttons to open the lock

Installation tips:


1. Clean furniture's surface before installing.
2. All the locks adhesive 24 hours. Do not test the lock strength before this point.
3. When installing, do not touch adhesive with hands or double-use, this will weaken the adhesive and make it ineffective.

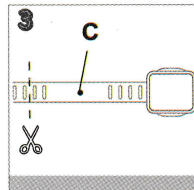


Cut the strap (Part C) to your suitable length and re-install it.

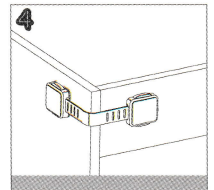


Install the lock and press firmly down with your hands

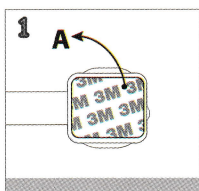

Unlock and take out the base. (Part A)

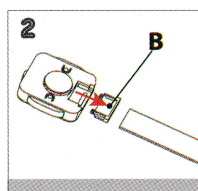

Push out strap fastener. (Part B)

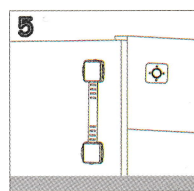

When children are absent, you can keep the lock as normal open function