



Queen

brand: Picun

Manufacturer: Shenzhen Picun Digital Technology Co., Ltd.

Executive standard: GB/T 14471-2013

http: //www.picun.com.cn

E-mail: service@picun.com.cn


## picun

### LED Indicator Description

Pairing	Flash in red and blue
Power On	Steady blue
Stand By	Steady blue
Low battery	Rapidly flash in red
Charging	Steady in red, off after fully charged

### Basic Key Operation

#### Power On

Press and hold  for 3 seconds to turn on headphones, and stand by pairing. Indicator flashes in red and blue.

#### Power Off

Press and hold  for 3 seconds to turn off headphones.

## picun

### Volume Control

Click "+" to volume up, click "-" to volume down.

### Song Track


Press and hold "-" for next track.

Press and hold "+" for previous track.

### Multifunction Button


Click  to pause the music.

Click  to play the music.

Click  to accept a call.

Click  to hang up a call.

Press and hold  to reject a call.

Double press  will re-dial the last phone number in your call record.

Double-click the touch area to play or pause the music.

Double-click the touch area to accept or hang up a call.

## picun

### Headphones Charging

When the battery power is low, please use the USB charging cable to charge for about 2 hours. During the charging process, the headphones will automatically shut down. When charging, the red LED is always on, and goes off after fully charged.

### Battery Capacity State

When the headset is connected to an IOS device, the current battery status of the headset is displayed in the upper right corner of the screen.

### Line-in Mode

After plugging the aux cable into the headset, it will default to power off.


Note: Headset could not be turned on with aux cable in.

### Wireless Mode

Powering on the headset, the indicator will flash in red and blue. Open the wireless feature and search the device named "Queen", click the name to complete connection.

## picun

### Appearance Wireframe

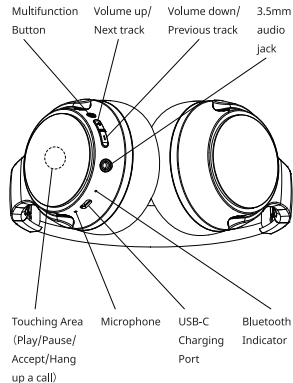

### One With Two Feature

1. Press the power-on button for 3 seconds in the power-on state, let the headphones enter the pairing state, and then connect the first mobile phone.
2. Turn off the wireless of the first mobile phone, let the headphones enter the pairing state, and then connect the second mobile phone.
3. Turn on wireless feature on the first mobile phone and manually connect the headset.

### Clear Paired Information

Press and hold the volume + and volume - buttons simultaneously for 3 seconds.

### Automatic Shutdown And Over-Distance Re-Connection

The headset will be disconnected when out of the effective distance range. The headset will automatically reconnect when returning to the effective range within 5 minutes otherwise shut down automatically.

### Product Parameter

<b>Bluetooth Protocol</b>	A2DP/AVRCP/HFP/HSP
<b>Effective Distance</b>	10m
<b>Speaker Unit</b>	40mm
<b>Frequency Range</b>	20HZ---20kHZ
<b>Sensitivity</b>	117±3dB
<b>Impedance</b>	32Ω±15%
<b>Mic Sensitivity</b>	-42dB±1dB
<b>Operating Current</b>	6-50mA
<b>Charging Voltage</b>	5V

### Packaging Accessories

1. Bluetooth Headphones	2. Charging Cable
3. Audio Cable	4. User Manual

### Warm Tips

1. Use the 5V 1A/5V 2A charger to charge the headphones. Charging headphones with a charging device with excessive voltage may be damaged.
2. When the headphones have not been used for more than 3 months, you need to charge them before using them.
3. When not in use for a long time, it is recommended to charge the headphones once every 3 months, which can protect the battery more effectively.
4. Please charge the headphone before using.

### Warning

\* Using headphones at high volume for a long time may cause damage to your hearing.

### Attentions

- \* Do not place headphones in high temperature, including direct sunlight.
- \* Do not place headphones near fire sources or other overheated environments.
- \* Do not put headphones in damp or submerged liquid, and keep them dry.
- \* Please don't try to charge the headphones by any other method except the provided charging cable.
- \* Do not disassemble the headphones, and any attempt to repair or modify the headphones is prohibited.
- \* Please pay attention to excessive drop, impact, scratch or other behaviors that affect the function of headphones. If there is any damage, such as dent, puncture, tear deformation or corrosion, please immediately stop using the headphones and contact the purchased merchant or contact us through the contact information on the warranty card.
- \* If the headset produces an abnormal smell, is higher than the normal temperature, and the color or shape changes abnormally, please stop using the headset immediately and contact the purchased merchant or contact us through the contact information on the warranty card.

## Warranty Card

Model: \_\_\_\_\_ Color: \_\_\_\_\_

Date: \_\_\_\_\_ Shop: \_\_\_\_\_

Account: \_\_\_\_\_ Reason: \_\_\_\_\_

Name: \_\_\_\_\_ Tel: \_\_\_\_\_

Address: \_\_\_\_\_

### Warranty Description

Please keep the warranty card and valid proof of purchase properly, and present them together when the product fails to be repaired. If you cannot provide the warranty card or relevant purchase certificate, the product warranty period will be calculated based on the product's ex-factory date.

### Warranty Rules

1. Consulting services, users can call 4008894883 for consultation if they encounter any problems during the warranty process.
2. If the product has a quality failure within one year from the date of purchase, the company's technicians have confirmed that the failure of the machine occurred under normal use, and a free replacement service will be provided.
3. In the following cases, the company refuses to provide free warranty services, only provides maintenance services, free of labor costs, and only charges for parts:
  - A. The product has been damaged due to wrong operation, negligent use or force majeure;
  - B. The product has been disassembled and repaired without the authorization of the company;
  - C. When the earphone unit is used at a high volume, debris or impact will cause the deformation of the diaphragm, the disconnection of the earphone cable, crushing, water immersion, damage to the casing, deformation and other man-made damage;
  - D. The original warranty card and the sales certificate of the sales unit cannot be provided, and the purchase date exceeds the warranty period.
4. The free service provided by this warranty card does not include product accessories, other decorations, gifts and other items.