

Power On/Off

Simply press the power button once and the ChargePack Multi is ready to go. The LED display will show how much charge the battery has. To turn off your device, just double press the power button.

Charge

The ChargePack Multi is our most versatile power bank including two built-in cables, USB charging ports and wireless charging. Additionally, plug the ChargePack Multi into a power outlet and charge using USB-A or USB-C out via pas-through charging.

Universal Recharge

Recharging the ChargePack Multi is simple & unique to other power banks. Simply plug into a power outlet, the LED display will begin flashing indicating it is recharging. Once the display reaches 100, it is fully charged.

More Information

Scan the QR code and visit our website for more information about your new product.



ChargePack Multi

5 in 1 Travel Power Bank

Welcome to your ChargePack Multi

Let us help get your new charger up and running in no time with this quick start guide.



What's Included

- ChargePack Multi • Magnetic Ring • Travel Pouch • AU/EU/UK Plug Adaptors

Support
For detailed product information, frequently asked questions and help from our support team, head to www.cheroy.nl.

Warranty & Safety
All Chéroy products are protected and covered against product defects in materials, workmanship and faults for a period of one (1) years from the date of original purchase, when purchased through our online store or an authorised reseller. Changes or modifications not expressly approved could cause damage to the product and may void the user warranty.

Technical Specifications
Battery: 10,000mAh @ 3.7V (37Wh)
AC Input: 100-230VAC 50Hz/60Hz 0.3A (Max)
USB-C Input: DC 5V-12V PD 18W Max
USB-C Output: DC 5V-12V PD 20W Max
USB-A Output: DC 5V/4.5A, 9V/2A, 12V/1.5A, 22.5W Max
Lightning Cable Output: DC 5V/2.4A Max
USB-C Cable Output: DC 5V/3A Max
Wireless Output: 15W Max

CHEROY

Burgstraat 6, 4283GG, Giessen, The Netherlands.
info@cheroy.nl | www.cheroy.nl

Copyright 2024 © All Rights Reserved

