 


## OPERATION ILLUSTRATE

1. Fully extend the antenna of the controller.
2. Turn on the power switch of the controller and car.
3. Operate the car by the two control sticks of the controller.

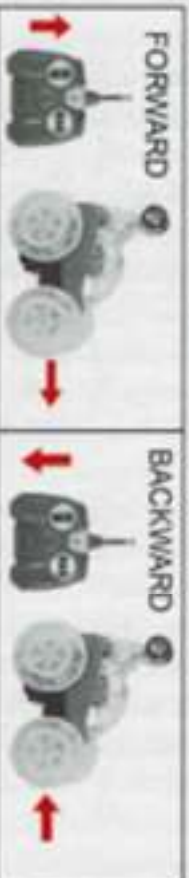

### PERFORM ACROBATIC TUMBLE



### FORWARD & FRONT WHEEL CAN ROTATE CLOCKWISE



### FORWARD & FRONT WHEEL CAN ROTATE COUNTER-CLOCKWISE



## ATTENTIONS

Do not play on the road or in a dangerous place.  
Do not play the car in a place where it could easily get wetted.  
Do not play the car on sands or other uneven surfaces or in a place with too much dust.  
Do not put your face near the wheel while it is spinning in case of spotted.  
Do not play on the carpet in case of malfunction with enlaced fur.

### CHARGING SPECIFICATION

1. To make sure the ON/OFF power button in the car bottom is in the off position, take out the battery door.
2. Matching the positive and negative polar indication to install batteries.
3. Install the battery properly, cover the battery door.
4. When car speed decreases, follow the procedure 1, 2, 3 to change new batteries.

### RADIO CONTROL(BATTERY INSTALLATION AND CHANGING)



1. Take out the battery door.
2. Matching the positive and negative polar indication to install 2x1.5V batteries.
3. Replace the cover.
4. When button malfunction or light indicator become dimmer, follow step 1, 2, 3 to change new batteries.

### OPERATION

1. Turn the power switch in the car bottom to the ON position.
2. Press the forward button in the remote control, radio control car start to move.
3. Adjust the rotary button in the car bottom, to adjust the radio control car to move in straight path.
4. If want to turn left or right, press forward button and on the same time press the left/right button.
5. When finish, turn the power position to OFF position.



**WARNING**  
**CHOKING HAZARD.**  
Small parts not for children under 8 years.

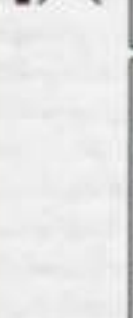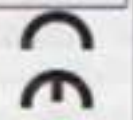

MADE IN CHINA