

Sportfloww



 
HANDLEIDING

ROWING MACHINE



Sportfloww





Index

- English 8
- Nederlands 20


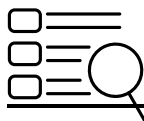 


Table of contents

• Safety instructions	9
• Overall product Diagram	10
• Assembly instructions	13
• Adjustment guide	16
• Instructions for the monitor	17
• App Connecting	19
• Warranty Information	23
• Customer Support	23
• Disposal of Electrical Devices	23

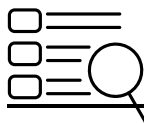 

Inhoudsopgave

• Veiligheidsmaatregelen	26
• Algemeen Product Diagram	27
• Installatie stappen	30
• Aanpassingsgids	33
• Instructies voor het scherm	34
• APP verbinding	36
• Garantie	40
• Klantenservice	40
• Inleveren van elektrische apparaten	40

Thank you for your purchase



We hope you enjoy your new Rowing machine
as much as we do

Looking for help?



Our helpful, in-house family is ready to assist you with any
questions you might have!



Support@Sportfloww.com

 
+31 6 58016454 (Whatsapp)




Safety Instructions

Thank you for purchasing our products, the correct use of this machine is your safety and health guarantee, please read the following carefully before using the rowing machine:

- It is very important to read the manual completely before installation and use. Only when properly installed, maintained and used this equipment can the practice be safe and effective.
- Before starting an exercise program, consult your doctor to determine your current physical condition and see if it will pose a risk to your health when you exercise with this equipment. If you are undergoing some treatments regarding heart rate, blood pressure, and cholesterol, then doctor's advice is very necessary.
- Pay attention to some signals from your own body. Incorrect and excessive exercise will harm your health. If you experience any of the following discomforts: pain, chest tightness, rapid heartbeat, shortness of breath, lightheadedness, dizziness and nausea, stop practicing immediately. If you want to continue your exercise program, consult your doctor first.
- Keep children and pets away from this equipment, which is specially designed for adults.
- Use a strong, flat material on the bottom of the equipment to protect your floor and carpet. For safety, please ensure that there is at least 0.5m of free space around the equipment.
- Please make sure that each screw and nut are locked tightly before use.
- Please use this equipment with caution. If you notice any defects while installing or using the equipment, or hear any unusual sounds, stop practicing immediately. Do not continue to use until the problem is resolved.
- Wear well-fitting clothing during exercise to prevent loose clothes from tripping on equipment or restricting exercise. Please be aware that incorrect and excessive practice may cause harm to the body.
- This equipment is only suitable for indoor and household use.
- Be as careful as possible when handling this equipment to avoid unnecessary injury.
- This product cannot be used as a medical device.



Product overall Diagram

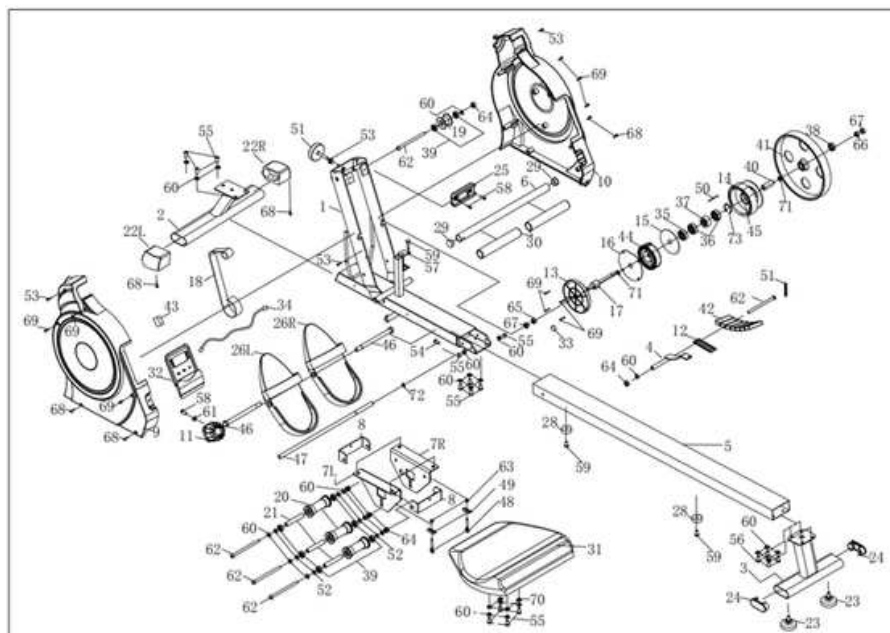 


	#60 d8*Ø16*1.5 15PCS
	#55 M8*15*S6 11PCS
	#46 M12*160*S19 2PCS
	#54 M6*10 1PC
	#56 M8*15*S6 4PCS
	#59 M6*20 1PC
	#74 S6 1PC
	#75 S13-14-15-17-19 1PC

NO.	Description	SPEC	QTY
1	Main frame	Weldment	1
2	Front Stabilizer		1
3	Rear stabilizer	Weldment	1
4	Magnet Holder		1
5	Slide rail tube		1
6	Handrail tube		1
7	Right support plate of seat cushion	Sheet metal parts	2
8	U-shaped baffle	Sheet metal parts	2
9	Left chain cover		1
10	Right chain cover		1
11	Tension Control	I=210	1
12	Screw	M6	1
13	Scroll spring cover	118.5*11.8	1
14	webbing belt wheel set	Φ35*110	1
15	webbing belt wheel cover PC board	Φ89*Φ16.5*0.5	1
16	webbing belt PC board	Φ111*Φ16*0.5	1
17	webbing belt axis welded	Φ22*133	1
18	Webbing belt	t1.5*22*2150	1
19	Webbing belt wheel	POM/φ42*φ22*32	1
20	Transport wheel	Φ40*92 POM	3
21	Transport wheel sleeve	Φ13*Φ8*78 ABS	3
22	Front bottom tube	30*70	2
23	Flat pad	M8	2
24	Oval inner tube	70*30	2
25	handlebar fix pad	104*50*18 PVC	1


NO.	Description	SPEC	QTY
46	Bolt	M12 *160*S19	2
47	Stepper axis 1	Φ12*440	1
48	adjust pull rod	φ8 M8, L45	2
49	Adjust chain U seat	30*10*1.5 2	2
50	Webbing belt fix axis	φ5*43	1
51	Support pad	M8*35 PVC	1
52	transport wheel bushing	D8*Φ15*4	6
53	Screw	M5*8	2
54	Screw	M6*10	1
55	Screw	M8*16 、S=6	15
56	Screw	M8*15 、S=6	4
57	Spring		1
58	Screw	M5*15	1
59	Screw	M6*20	3
60	Washer	φ16*φ8*1.5	24
61	Washer	φ20*φ5*1.0	1
62	Bolt	M8*125*15 *S14 A	5
63	Nut	M6*H6*S10	2
64	Nut	M8*H7.5*S13	5
65	Nut	M10*1.0H5 17	1
66	Nut	M10*1.0H3 17	1
67	Nut	M10*1*H8*S14	2
68	Screw	ST4.2*20*Φ8	4
69	Screw	ST4.2*16*Φ8	8
70	Spring washer	φ8	4



 
Assembly instruction

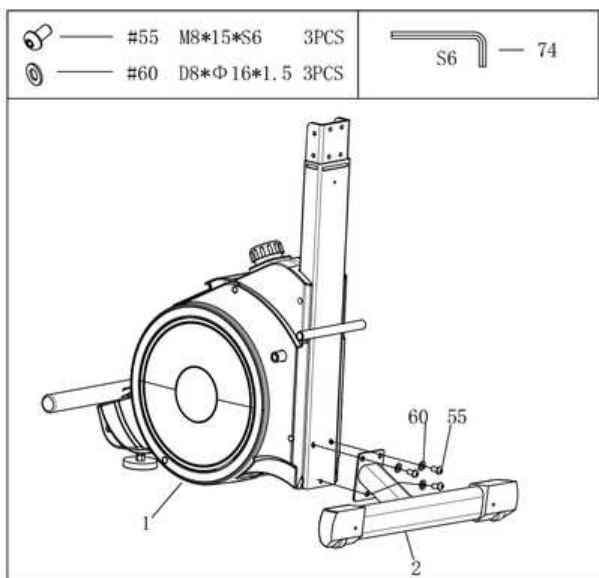

 Step 1: Use 3 screws (55) and 3 washers (60) to install the front stabilizer (2) to the main frame (1). Use an wrench (74) to tighten and secure. Note the rollers of the front legs forward:

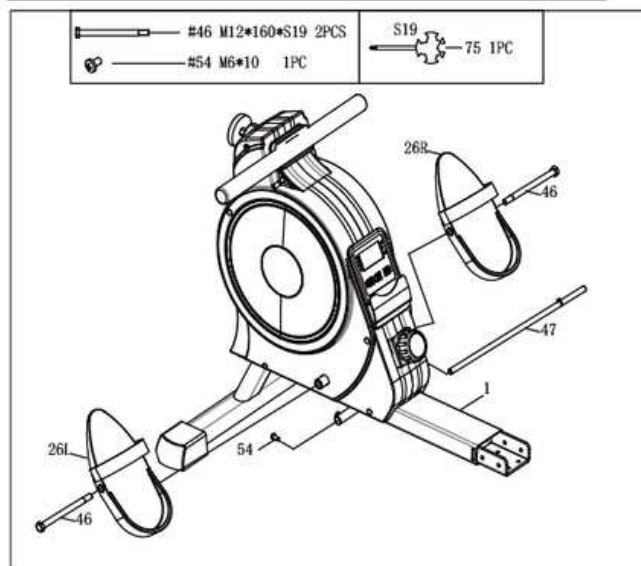


 Step 2:
 1. Pass the foot pedal fixing shaft (47) through the main frame (1), match the screws (54) and use wrench (75) to tighten and fix.
 2. Use the screw (46) through the foot pedal (26) and use wrench (75) to tighten and fix. Pay attention to the left and right marks of the pedals

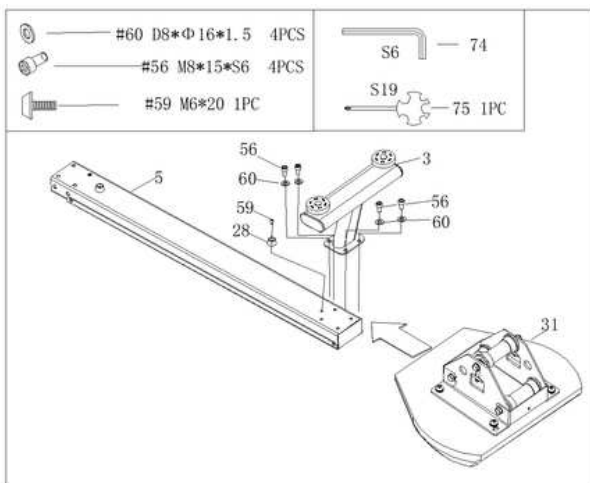

Step 3:

 1. Insert the seat (31) into the slide rail (5).
2. Use 4 screws (56) and 4 washers (60) to install the rear support frame (3) to the slide rail (5). Use an wrench (74) to tighten and secure.
3. Then fix the screw (59) and cushion (28) at the upper limit of the slide rail.

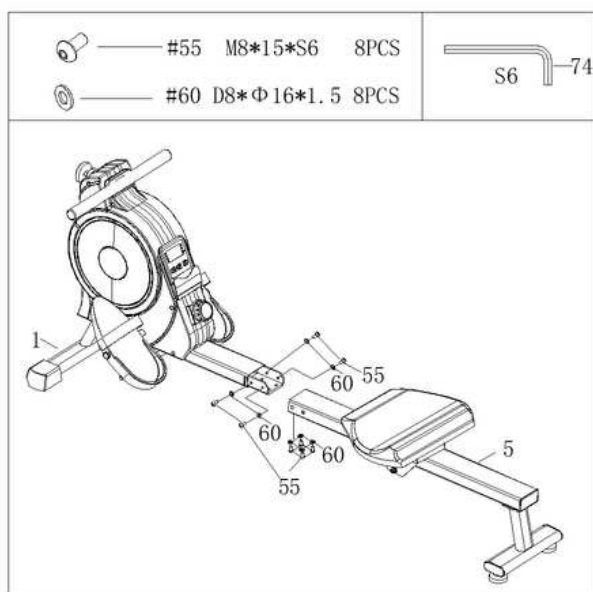


Step 4:

1. Use 8 screws (55) and 5 washers (60) to install the slide rail (5) to the main frame (1), and use wrench (74) to tighten and fix them all.

Step 5:

 
1. Push the monitor (32) on the main frame upward, and then take out the monitor (32) from the main frame (1).
2. Disconnect the middle line (34) and the wire of the monitor. Install 2 AAA batteries into the electronic meter.

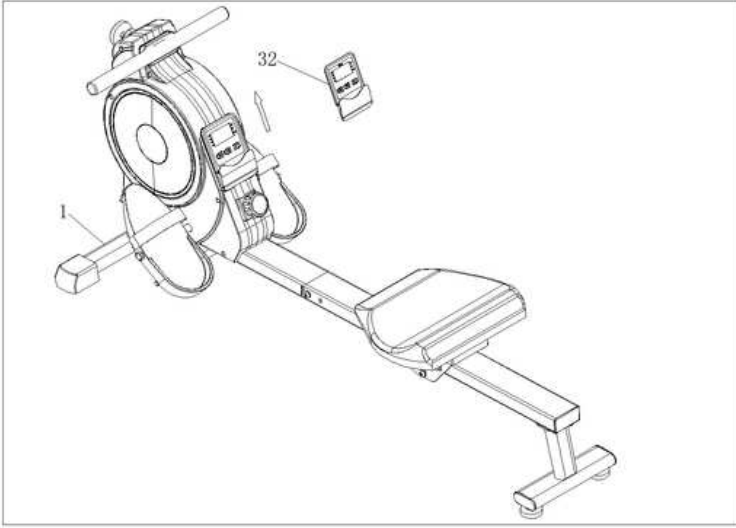

Step 6:

1. Connect the middle line (34) with the wire of the monitor (32), put the monitor (32) back into the main frame (1), and then push the itdown to make it in a suitable position.

 Note: The two upper tabs of the electronic watch (32) should be aligned with the two upper slots of the monitor of the main frame (1).

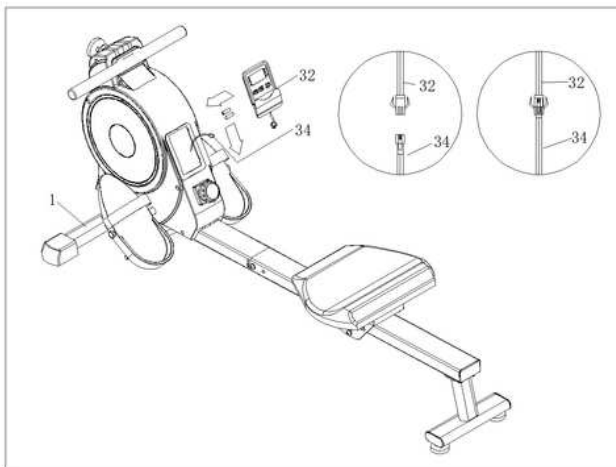



Adjustment Guide

	knob use: Resistance adjustment: Adjust the knob (11) clockwise to increase the resistance and counterclockwise to reduce the resistance.
	Height adjustment: Balance adjustment: If the product is found to be unbalanced during use, the product can be balanced by adjusting the flat foot pad (23). Adjust the flat foot pad clockwise (23) to raise the height; Adjust the flat foot pad (23) counterclockwise to lower the height.
	Foot pedal adjustment method: Pedal strap adjustment instructions: The length of the strap can be adjusted by the size of the foot, and the direction of elastic adjustment is shown on the left.
	Product placement: When not in use, you can save space by placing the product upright. The product will be supported by a flat foot pad (77) in contact with the ground level and can be placed upright. Safety precautions: The seat cushion (31) will slide down when the slide rail (5) is erected. Warn! <i>When you erect the product, be careful with your fingers to avoid getting pinched by the saddle slipping!</i>
	Moving function: When handling, lift the rear support tube 45 degrees forward.



Instructions for the monitor

Button Functions

MODE – Press to select a function. Press and hold to reset time, count, or calories.

SET – Set time or calories when not in scan mode.

RESET – Press to clear the set time, count, or calories.

1. Auto Scan Mode

Press the MODE button until SCAN is displayed. The monitor will automatically switch the display every 6 seconds in the following order:
Time → Count → Total Count → T-Count → RPM → Calories

2. TIME

1. Displays the total time from the beginning to the end of exercise.
2. Press the MODE button until TIME is displayed. Press the SET button to select a countdown time.
 - When the countdown reaches 0, the monitor will pause for about 1 second and then begin counting upward.

3. COUNT

1. Displays the current number of repetitions/movements.
2. Press the MODE button until COUNT is displayed. Press the SET button to set a countdown number of repetitions.
 - When the countdown reaches 0, the monitor will pause for about 1 second and then begin counting upward.

4. T-COUNT

Displays the total accumulated number of repetitions from the start of use (stored in memory).


5. DIST

Displays the distance traveled from the beginning to the end of movement.

6. CALORIES


1. Displays calories burned from the start to the end of exercise.
2. Press the MODE button until CAL is displayed. Press the SET button to select a target calorie countdown.
 - When the countdown reaches 0, the monitor will pause for about 1 second and then begin counting upward to show calories burned.

Function	Automatic scanning	Switch data every 6 seconds
	Time	00:00'~99:59'
	Count	0-9999
	Total count	0-9999
	Calorie	0.0~999.9 kcal
	Distance	0-9999
Battery model		2 AAA or UM -4
Operating temperature		0°C ~ +40°C
Storage temperature		-10°C ~ +60°C


 


APP Connecting

 
(1) Search "Kinomap" in the mobile app store to download the app.

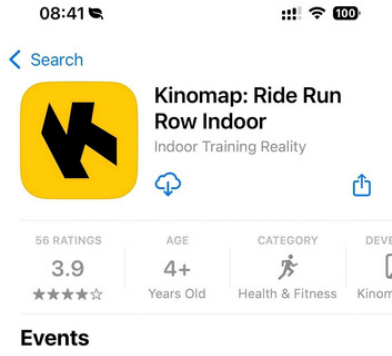

 
 
(2) Click on user registration and bind your username and email address and set a password

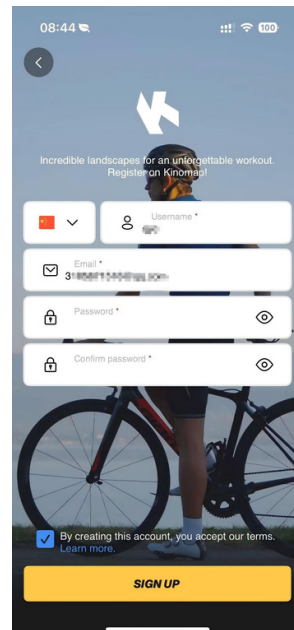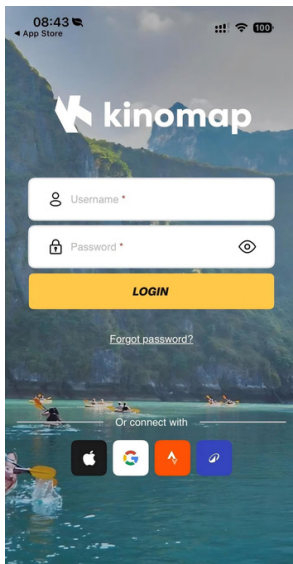


 
(3) Go to the home page and click Add New Gym Equipment in the upper left corner

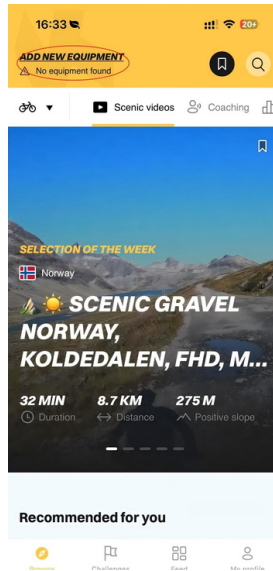

 
 
(4) Select Add New Fitness Equipment and select the rower and click Next

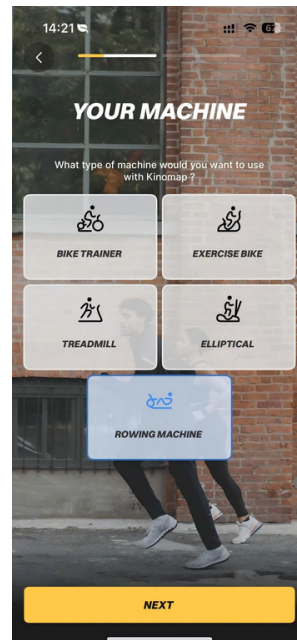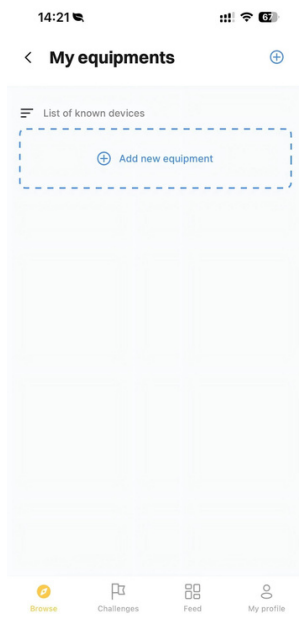

 
 
(5) Select the brand of the device 'FTMS' and select the model

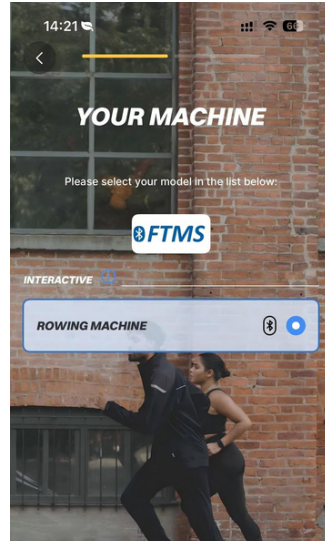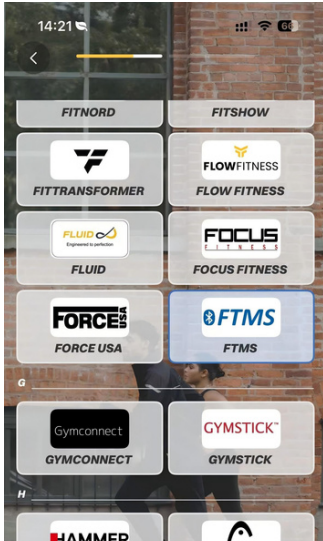

  (6) Select our Bluetooth name '(FTMS)LABGREY-H300' and enter the Bluetooth name and click OK to proceed to the next step

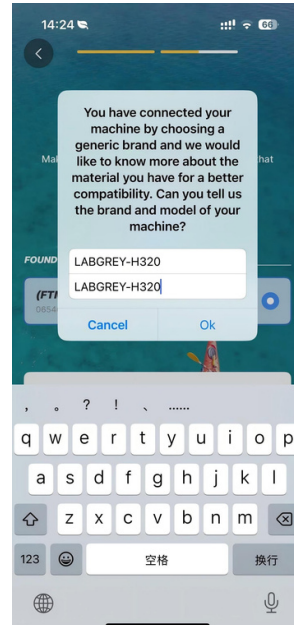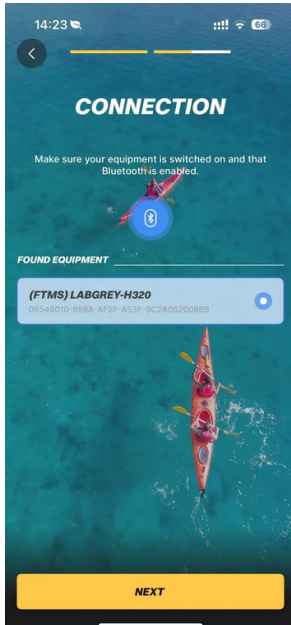

  (7) After the connection is successful, you can start moving

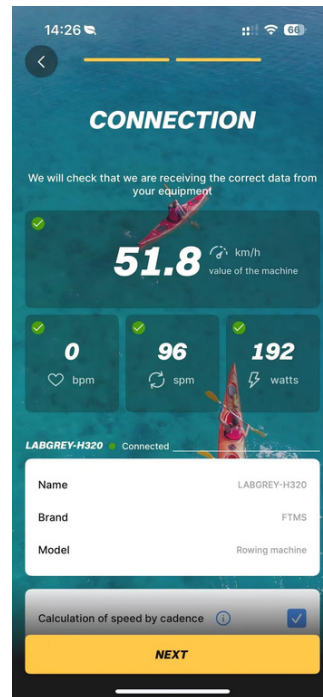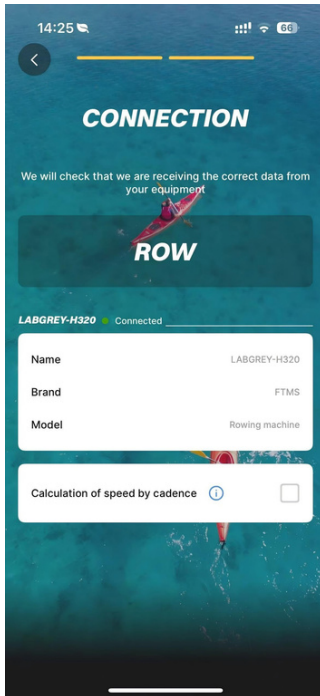



Warranty information

Sportfloww guarantees that products are of the highest quality in material, craftsmanship and service for 2 years, effective from the date of purchase to the end of the warranty period. Warranty lengths may vary between product categories. The warranty is only valid for careful and proper use.

If you have any questions or concerns about your new product, please don't hesitate to contact us.



Customer support

SPORTFLOWW

Techniekweg 15
4205 HC, Gorinchem
The Netherlands

Our helpful, in-house family is ready to assist you with any question you might have!



Support@sportflow.com

+31 6 58016454 (Whatsapp)

Please keep your order ID ready before contacting our customer support.



Disposal of electrical devices

The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimise the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Sportfloww



Bedankt voor je aankoop



We hopen dat je net zoveel zal genieten van je nieuwe roeitrainer als dat wij dat doen!

Op zoek naar hulp



Onze behulpzame, in-house familie staat klaar om jou te helpen met al jouw vragen!



Support@sportflow.com

+31 6 58016454 (Whatsapp)



 
Veiligheidsmaatregelen

Dank u voor de aankoop van ons product. Het correct gebruiken van deze machine is essentieel voor uw veiligheid en gezondheid. Lees de volgende instructies zorgvuldig door voordat u de roeimachine gaat gebruiken:

- Het is zeer belangrijk om de hele handleiding volledig te lezen vóór installatie en gebruik. Alleen wanneer dit apparaat correct wordt geïnstalleerd, onderhouden en gebruikt, kan de training veilig en effectief verlopen.
- Raadpleeg uw arts voordat u een trainingsprogramma start, om uw huidige gezondheidstoestand te bepalen en om na te gaan of het gebruik van deze apparatuur risico's voor uw gezondheid met zich mee kan brengen. Als u wordt behandeld voor hartslagproblemen, bloeddruk of cholesterol, is medisch advies zeker noodzakelijk.
- Let goed op de signalen van uw lichaam. Onjuiste of overmatige training kan schadelijk zijn voor uw gezondheid. Stop onmiddellijk met trainen als u een van de volgende symptomen ervaart: pijn, drukkend gevoel op de borst, snelle hartslag, kortademigheid, duizeligheid, licht in het hoofd worden of misselijkheid. Als u uw trainingsprogramma wilt voortzetten, raadpleeg dan eerst uw arts.
- Houd kinderen en huisdieren uit de buurt van deze apparatuur, die speciaal is ontworpen voor volwassenen.
- Plaats sterk en vlak materiaal onder de apparatuur om uw vloer of tapijt te beschermen. Zorg om veiligheidsredenen voor minimaal 0,5 meter vrije ruimte rondom het apparaat.
- Zorg ervoor dat alle schroeven en moeren stevig zijn vastgedraaid voordat u de roeimachine gebruikt.
- Ga voorzichtig om met dit apparaat. Als u tijdens de installatie of het gebruik defecten of ongewone geluiden opmerkt, stop dan onmiddellijk met trainen. Gebruik het apparaat niet verder voordat het probleem volledig is opgelost.
- Draag goed aansluitende kleding tijdens het trainen om te voorkomen dat losse kledingstukken verstrikt raken in het apparaat of uw bewegingen beperken. Houd er rekening mee dat verkeerde of te intensieve training schadelijk kan zijn voor het lichaam.
- Deze apparatuur is uitsluitend geschikt voor gebruik binnenshuis en voor huishoudelijk gebruik.
- Wees zo voorzichtig mogelijk bij het verplaatsen of hanteren van het apparaat om onnodige verwondingen te voorkomen.
- Dit product mag niet worden gebruikt als medisch hulpmiddel.



Algemeen Product Diagram

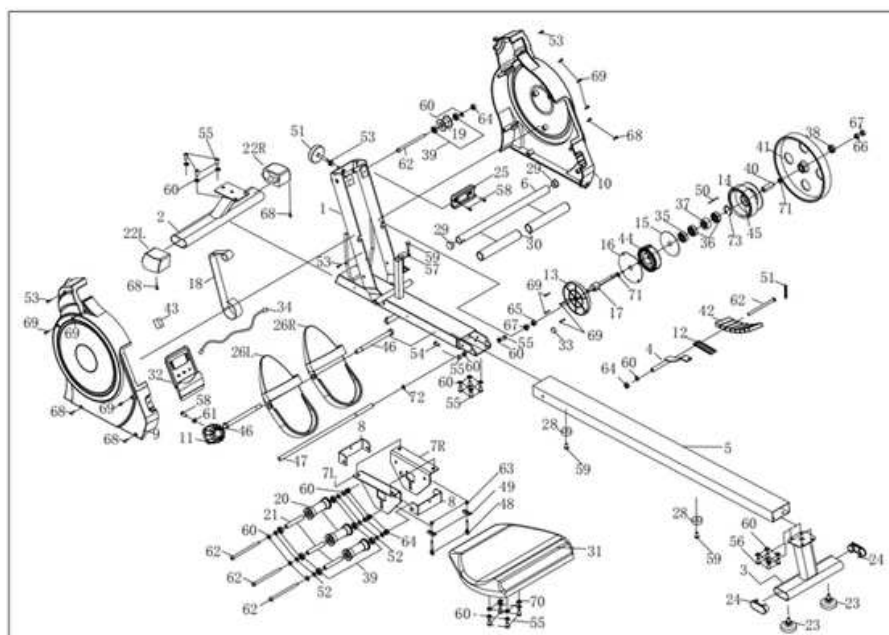

	#60 d8*Ø16*1.5 15PCS
	#55 M8*15*S6 11PCS
	#46 M12*160*S19 2PCS
	#54 M6*10 1PC
	#56 M8*15*S6 4PCS
	#59 M6*20 1PC
	#74 S6 1PC
	#75 S13-14-15-17-19 1PC

 
NO.	Description	SPEC	QTY
1	Main frame	Weldment	1
2	Front Stabilizer		1
3	Rear stabilizer	Weldment	1
4	Magnet Holder		1
5	Slide rail tube		1
6	Handrail tube		1
7	Right support plate of seat cushion	Sheet metal parts	2
8	U-shaped baffle	Sheet metal parts	2
9	Left chain cover		1
10	Right chain cover		1
11	Tension Control	I=210	1
12	Screw	M6	1
13	Scroll spring cover	118.5*11.8	1
14	webbing belt wheel set	Φ35*110	1
15	webbing belt wheel cover PC board	Φ89*Φ16.5*0.5	1
16	webbing belt PC board	Φ111*Φ16*0.5	1
17	webbing belt axis weld	Φ22*133	1
18	Webbing belt	t1.5*22*2150	1
19	Webbing belt wheel	POM/φ42*φ22*32	1
20	Transport wheel	Φ40*92 POM	3
21	Transport wheel sleeve	Φ13*Φ8*78 ABS	3
22	Front bottom tube	30*70	2
23	Flat pad	M8	2
24	Oval inner tube	70*30	2
25	handlebar fix pad	104*50*18 PVC	1

NO.	Description	SPEC	QTY
46	Bolt	M12 *160*S19	2
47	Stepper axis 1	Φ12*440	1
48	adjust pull rod	φ8 M8, L45	2
49	Adjust chain U seat	30*10*1.5 2	2
50	Webbing belt fix axis	φ5*43	1
51	Support pad	M8*35 PVC	1
52	transport wheel bushing	D8*Φ15*4	6
53	Screw	M5*8	2
54	Screw	M6*10	1
55	Screw	M8*16 、S=6	15
56	Screw	M8*15 、S=6	4
57	Spring		1
58	Screw	M5*15	1
59	Screw	M6*20	3
60	Washer	φ16*φ8*1.5	24
61	Washer	φ20*φ5*1.0	1
62	Bolt	M8*125*15 *S14 A	5
63	Nut	M6*H6*S10	2
64	Nut	M8*H7.5*S13	5
65	Nut	M10*1.0H5 17	1
66	Nut	M10*1.0H3 17	1
67	Nut	M10*1*H8*S14	2
68	Screw	ST4.2*20*Φ8	4
69	Screw	ST4.2*16*Φ8	8
70	Spring washer	φ8	4

26	Stepper board	320*140*55	2	71	Spring washer	d10*Φ15*0.3	2
27	Belt disk	Φ130*φ71*43	1	72	Axis block	D12	1
28	Cushion pad	φ25.2*φ22*15	2	73	Hole block	d38	1
29	Inner tube	φ25*1.5/PVC	3	74	Wrench	S8	1
30	Handlebar foam	L 200	2	75	Cross wrench	S=13、14、17、19	1
31	Seat	Sets	1				
32	Monitor		1				
33	Round magnetic	Φ11*3	1				
34	Sensor	L370 with sensor	2				
35	6300 axis	Φ35*Φ10*11	1				
36	16003 axis	Φ30*Φ17*7	2				
37	Single axis	35*17*16	1				
38	6000 axis	Φ26*Φ10*8	1				
39	608 axis	Φ22*Φ8*7	8				
40	Bearing sleeve	Φ17*46	1				
41	Magnetic wheel	Φ176*25 2.5kg	1				
42	Magnetic block	25*20*5 3500	3				
43	Sensor seat		1				
44	Scroll spring	t0.5*22*5080	1				
45	Webbing belt wheel sleeve	Φ42*44.5	1				




Installatiestappen

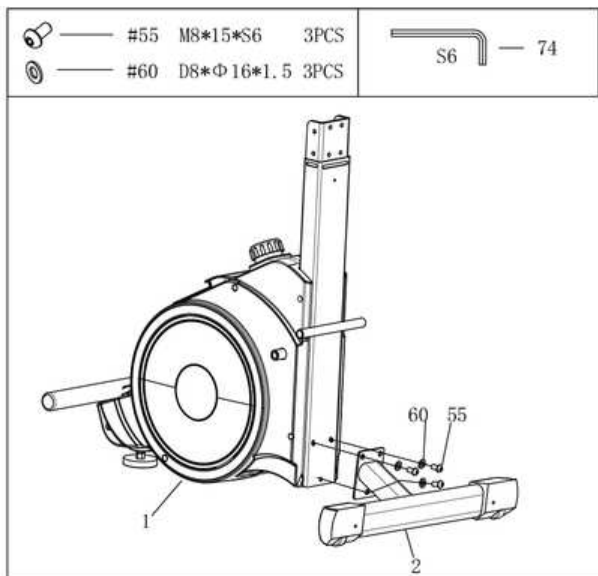


Stap 1: Gebruik 3 schroeven (55) en 3 ringen (60) om de voorste stabilisator (2) op het hoofdframe (1) te installeren. Gebruik een steeksleutel (74) om alles stevig vast te draaien.

 Let op dat de wieltjes van de voorpoten naar voren gericht zijn.

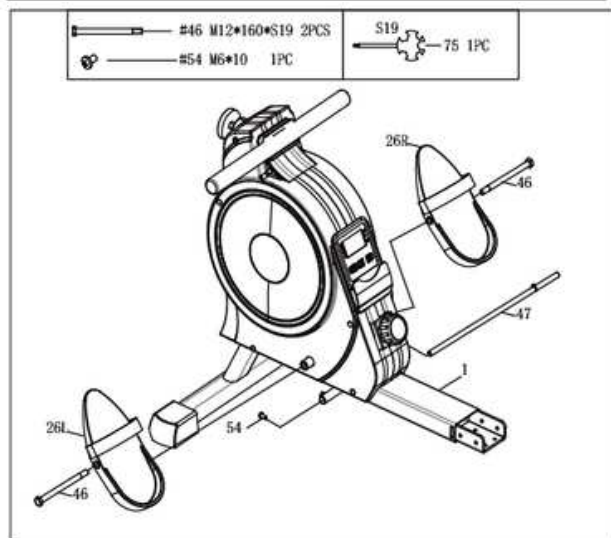


Stap 2:

 1. Steek de bevestigingsas van het voetpedaal (47) door het hoofdframe (1), plaats de schroeven (54) en draai deze vast met de steeksleutel (75).
2. Gebruik schroef (46) om het voetpedaal (26) te bevestigen en draai deze vast met de steeksleutel (75). Let op de linker- en rechtermarkeringen op de pedalen.

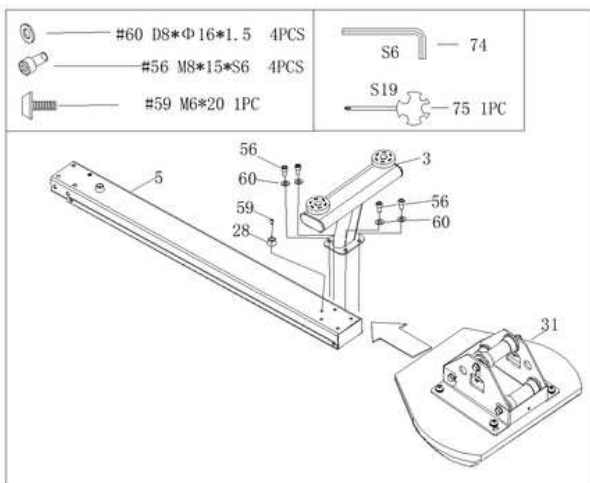

Stap 3:

 1. Plaats de zitting (31) in de glijrail (5).
2. Gebruik 4 schroeven (56) en 4 ringen (60) om het achterste steunframe (3) op de glijrail (5) te monteren. Gebruik een steeksleutel (74) om alles stevig vast te zetten.
3. Bevestig vervolgens schroef (59) en het kussentje (28) aan de bovenste aanslag van de glijrail.

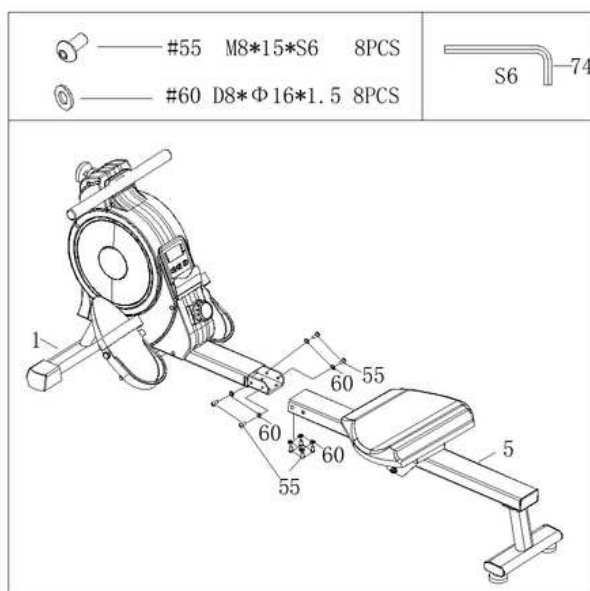


Stap 4:

1. Gebruik 8 schroeven (55) en 5 ringen (60) om de glijrail (5) op het hoofdframe (1) te monteren. Gebruik een steeksleutel (74) om alles stevig vast te draaien.

Stap 5:

 
1. Duw de monitor (32) op het hoofdframe naar boven en verwijder vervolgens de monitor (32) van het hoofdframe (1).
2. Koppel de middendraad (34) en de kabel van de monitor los. Plaats 2 AAA-batterijen in de elektronische meter.

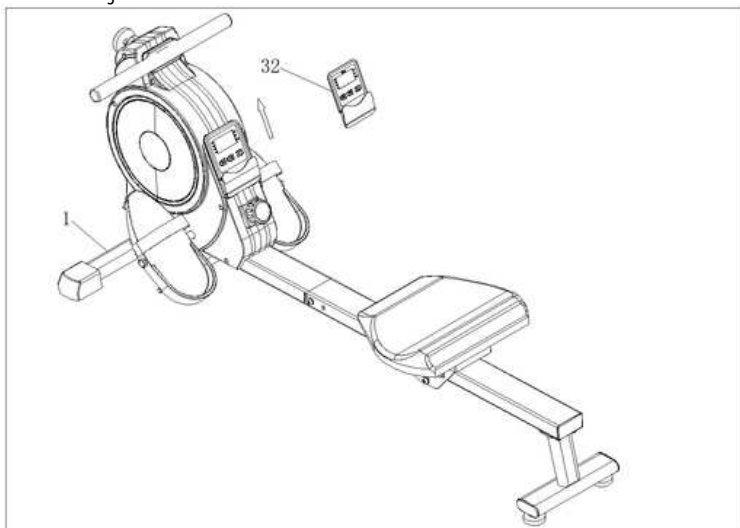

Stap 6:

1. Verbind de middendraad (34) met de kabel van de monitor (32), plaats de monitor (32) terug in het hoofdframe (1) en duw hem vervolgens naar beneden totdat hij goed op zijn plaats zit.

 Let op: De twee bovenste lipjes van de elektronische meter (32) moeten uitgelijnd zijn met de twee bovenste sleuven van de monitoropening in het hoofdframe (1).

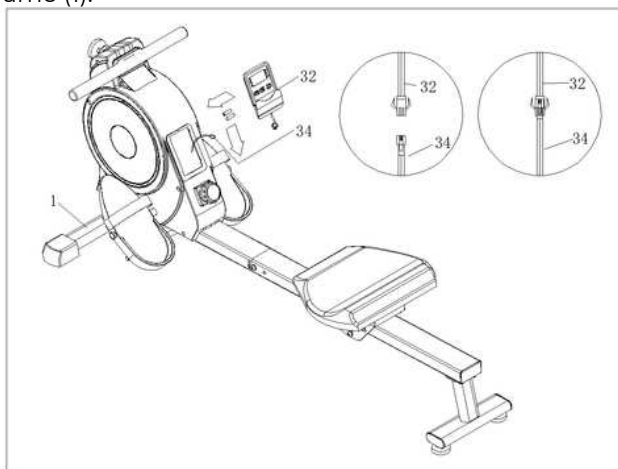



Aanpassingsgids

	Weerstandsaanpassing: Draai aan de knop (11) met de klok mee om de weerstand te verhogen en tegen de klok in om de weerstand te verlagen.
	Hoogte-instelling / Balansaanpassing Als het product tijdens het gebruik niet stabiel blijkt te zijn, kan het worden uitgebalanceerd door de stelvoet (23) te verstellen. Draai de stelvoet (23) met de klok mee om de hoogte te verhogen; draai tegen de klok in om de hoogte te verlagen.
	Afstelling van de voetpedalen Instructies voor het afstellen van de voetriem: De lengte van de riem kan worden aangepast aan de grootte van de voet. De richting waarin de elastische riem wordt versteld, wordt links weergegeven.
	Plaatsing van het product Wanneer het apparaat niet wordt gebruikt, kunt u ruimte besparen door het rechtop te plaatsen. Het product wordt dan ondersteund door een vlakke voetpad (77) die in contact staat met de vloer en stabiel kan worden neergezet. Veiligheidswaarschuwing: Het zitkussen (31) kan naar beneden schuiven wanneer de glijrail (5) rechtop staat. Waarschuwing! Wanneer u het apparaat rechtop zet, wees voorzichtig met uw vingers om te voorkomen dat ze bekneld raken door een verschuivend zadel!
	Verplaatsingsfunctie Tijdens het verplaatsen tilt u de achterste steunbuis 45 graden naar voren.



Instructies voor het scherm

Knopfuncties

MODE – Druk om een functie te selecteren. Houd ingedrukt om tijd, aantal herhalingen of calorieën te resetten.

SET – Stel tijd of calorieën in wanneer u niet in scanmodus bent.

RESET – Druk om de ingestelde tijd, het aantal herhalingen of calorieën te wissen.

1. Automatische Scanmodus

Druk op de MODE-knop totdat SCAN wordt weergegeven. De monitor schakelt automatisch elke 6 seconden tussen de volgende gegevens:

Tijd → Aantal → Totaal aantal → T-Count → RPM → Calorieën

2. TIJD (TIME)

Toont de totale tijd van het begin tot het einde van de training.

Druk op de MODE-knop totdat TIME wordt weergegeven. Druk op de SET-knop om een afteltijd in te stellen. Wanneer de afteltijd op 0 komt, pauzeert de monitor ongeveer 1 seconde en begint vervolgens omhoog te tellen.

3. AANTAL (COUNT)

Toont het huidige aantal herhalingen/bewegingen. Druk op de MODE-knop totdat COUNT wordt weergegeven. Druk op SET om een aftelaantal in te stellen. Wanneer de ingestelde waarde 0 bereikt, pauzeert de monitor ongeveer 1 seconde en begint vervolgens omhoog te tellen.

4. T-COUNT

Toont het totale aantal herhalingen dat vanaf het eerste gebruik is opgeslagen (geheugenfunctie).

5. DIST

Toont de afgelegde afstand van het begin tot het einde van de beweging.

6. CALORIEËN (CALORIES)


Toont het aantal verbrande calorieën vanaf het begin tot het einde van de training. Druk op de MODE-knop totdat CAL wordt weergegeven. Druk op SET om een doel-calorieaftelling in te stellen. Wanneer de aftelling 0 bereikt, pauzeert de monitor ongeveer 1 seconde en begint vervolgens omhoog te tellen om de verbrande calorieën te tonen.

Functie	Automatische scan	Wisselt gegevens elke 6 seconden
	Tijd	00:00'~99:59'
	Aantal (Count)	0-9999
	Totaal aantal	0-9999
	Calorieën	0.0~999.9 kcal
	Afstand	0-9999
Batterijtype		2 AAA or UM -4
Bedrijfstemperatuur		0°C ~ +40°C
Opslagtemperatuur		-10°C ~ +60°C





APP Verbinding

 
(1) Zoek in de mobiele app-store naar “Kinomap” om de app te downloaden.

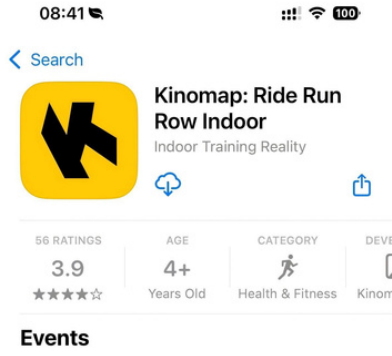

 
 
(2) Klik op 'gebruikersregistratie' en koppel je gebruikersnaam en e-mailadres, en stel een wachtwoord in.

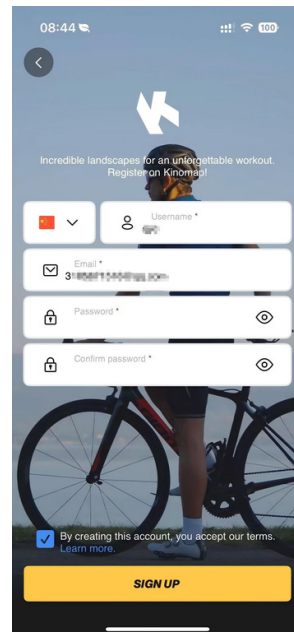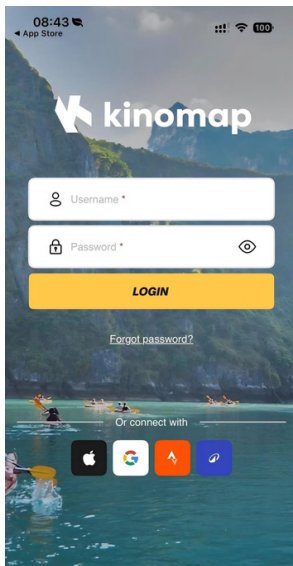


 
(3) Ga naar de startpagina en klik linksboven op 'Nieuwe fitnessapparatuur toevoegen'.

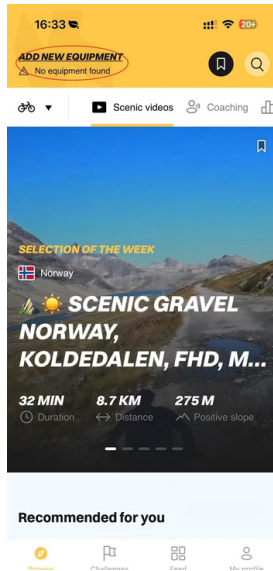

 
 
(4) Kies 'Nieuwe fitnessapparatuur toevoegen', selecteer de roeitrainer en klik op 'Volgende'.

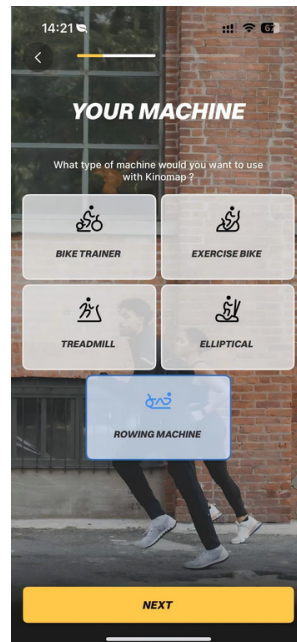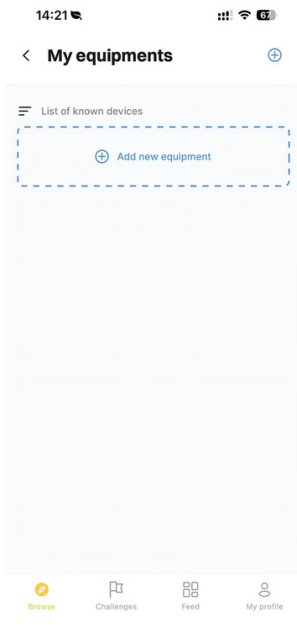

 
 
(5) Selecteer het merk van het apparaat 'FTMS' en kies het model.

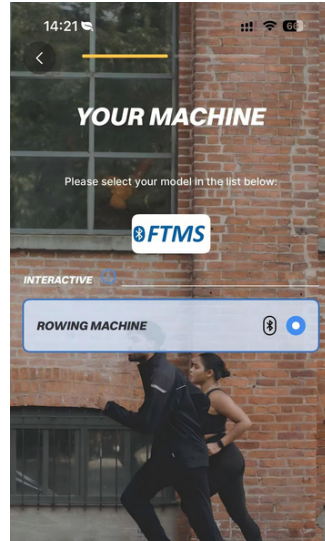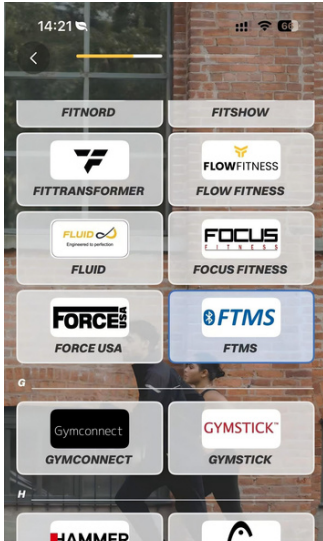

  (6) Selecteer onze Bluetooth-naam '(FTMS)LABGREY-H300', voer de Bluetooth-naam in en klik op 'OK' om door te gaan naar de volgende stap.

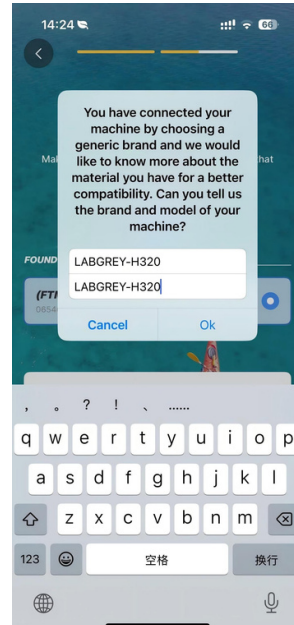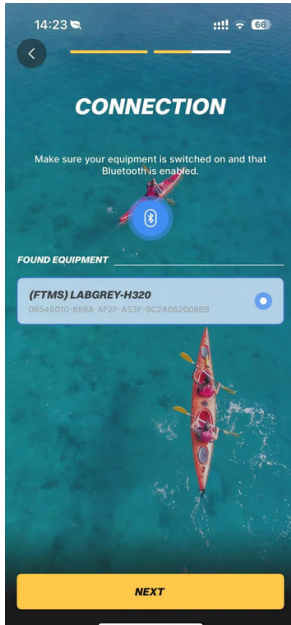

  (7) Zodra de verbinding tot stand is gebracht, kun je beginnen met trainen.

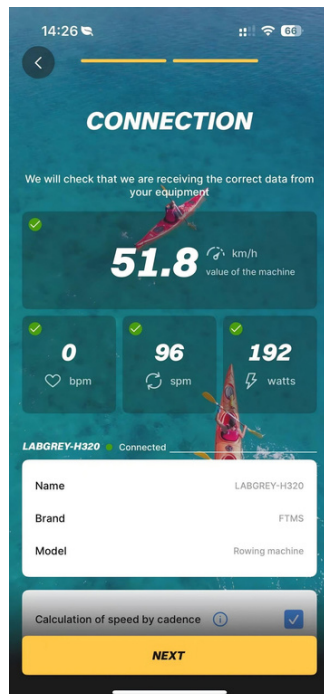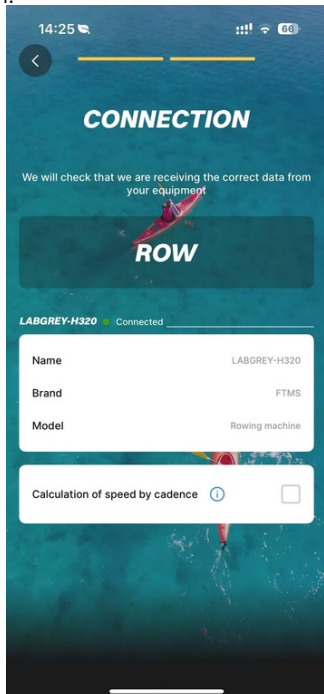



Garantie

Sportfloww garandeert dat de producten van de hoogste kwaliteit zijn wat betreft materiaal, vakmanschap en service voor een periode van 2 jaar, geldig vanaf de aankoopdatum tot het einde van de garantieperiode. De garantieduur kan variëren tussen productcategorieën. De garantie is alleen geldig bij zorgvuldig en juist gebruik.

Als je vragen of zorgen hebt over je nieuwe product, aarzel dan niet om contact met ons op te nemen.



Klantenservice

SPORTFLOWW

Techniekweg 15
4207 HC, Gorinchem
The Netherlands

Onze behulpzame, in-house familie staat klaar om jou te helpen met al jouw vragen!



Support@sportflow.com

+31 6 58016454 (Whatsapp)

Houd a.u.b. je bestelnummer gereed wanneer je contact opneemt met onze klantenservice/



Inleveren van elektrische apparaten

De Europese richtlijn 2012/19/EU betreffende Waste Electrical and Electronic Equipment (afgedankte elektrische en elektronische apparatuur) (AEEA) bepaalt dat oude huishoudelijke elektrische apparaten niet bij het normale ongesorteerde huishoudelijke afval mogen worden gedeponeerd. Oude apparaten moeten apart worden ingezameld om de terugwinning en recycling van de materialen die ze bevatten te optimaliseren en de impact op de volksgezondheid en het milieu te beperken. Het symbool van de doorgekruiste "vuilnisbak" op het product herinnert je aan jouw verplichting om het apparaat op de juiste wijze af te voeren. Consumenten moeten contact opnemen met hun plaatselijke autoriteiten of detailhandelaar voor informatie over de correcte verwijdering van oude apparaten en/of hun batterijen.

Sportfloww



Sportfloww

Questions or concerns?
Support@sportfloww.com
Whatsapp: +31 6 58016454

