

CABLE
TESTER

RJ45 + BNC

POWER

OFF ON S

1 100Ω

2 100Ω

3 100Ω

4 100Ω

5 100Ω

6 100Ω

7 100Ω

8 100Ω

G 100Ω

MASTER



RJ45

1

2

3

4

5

6

7

8

G

REMOTE