

Swim Essentials Inflatable Hammock Instructions/Manual



SWIM ESSENTIALS



Warning:

ONLY TO BE USED IN WATER IN WHICH THE CHILD IS WITHIN ITS DEPTH AND UNDER ADULT SUPERVISION. NEVER ALLOW DIVING INTO THIS PRODUCT. NEVER LEAVE IN OR NEAR THE WATER WHEN NOT IN USE. FOLLOW THESE RULES TO AVOID DROWNING, PARALYSIS OR OTHER SERIOUS INJURY. 6+ YEARS.

THIS IS NOT A LIFE-SAVING DEVICE.

Type: SE Hammock Rose Gold Leopard
SE HAMMOCK TROPICAL
SE HAMMOCK COW
SE HAMMOCK TOUCAN BANANA




























Manufacturer:

The Essentials B.V.
Rietveldweg 40, 5222 AR, 's-Hertogenbosch, North Brabant, The Netherlands.






























































Importer:

The Essentials B.V.
Rietveldweg 40, 5222 AR, 's-Hertogenbosch, North Brabant, The Netherlands.

                           EN 71-1:2014+A1:2018, EN 71-2:2020



DEFINITIONS

                                                             

ENGLISH
Swim Essentials Inflatable Hammock Instructions/Manual
GB- General instructions

Assemble and Inflatng Instructions

- Open the package of the inflatable carefully and without any sharp objects.
- Take the product out of the package and out of the polybag.
- Check the product on damages.
- Locate a clean area free of stones or other sharp objects.
- Make sure the product is fully inflated before use. Make sure the product is firm to the touch but not hard. If there is any straining at the seams, the product is over-inflated. If any seams begin to strain, immediately stop the inflation and release air to reduce the pressure until signs of stress on the seam are gone. The product has to be inflated until there are some small visible folds or wrinkles around the seam. **CAUTION:** To prevent bursting, do not over inflate, use high pressure air compressor or exceed the recommended design working pressure. Fill with cold air only.
- Close and recss the inflation valve securely.
- Ensure that adequate air pressure is maintained in the product during use. Verify the pressure frequently, especially on very hot or cold days, using the air pressure checking method described in the instructions.

Maintenance

- Check seams and valves regularly for tears.
- Clean the device after each use with a garden hose and air dry thoroughly before storage.
- If this product is used in an indoor swimming pool, ensure that there is sufficient headroom.

Storage

- Ensure the device is thoroughly clean and dry first, see maintenance section.
- Open all air valves and deflate the device completely.
- Remove all accessories if applicable.
- Fold the device loosely and avoid sharp bends, corners and creases which can damage the device. Replace all inflation valves caps.
- Store in a dry place and indoors.

Repair

The device comes with a repair patch. If you have an idea where the leak is, use a mix of dishwashing liquid and water in a spray bottle, and spray over the suspicious area. Any leak will produce bubbles that will pinpoint the location of the leak. Thoroughly clean the area surrounding the leak to remove any dirt or grime. Cut a piece of repair patch large enough to overlap the damaged area by approximately 1.5 cm (1/2"). Round off the edges, and place the patch on the damaged area and press down firmly. You may want to use a weight on top to keep it in place. Do not inflate in one hour after patching. If the patch does not stick, you can purchase silicon or polyurethane based glue for repairing camping mats, tents or shoes from your local shop or purchase the patch the device; please refer to the instruction of the glue for patching.

Please save this instruction.

NOT FOLLOWING THESE GUIDELINES MAY RESULT IN DROWNING OR OTHER SERIOUS INJURY. THE PRODUCT WARNINGS, INSTRUCTIONS, AND SAFETY RULES PROVIDED WITH THE PRODUCT REPRESENT SOME COMMON RISKS OF USING WATER RECREATING DEVICES AND DO NOT COVER ALL INSTANCES OF RISKS AND/OR DANGER.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
*For a full and complete description of each safety information symbol and safety sign printed on the product and the packaging please refer to the definition section or sheet.

SAFETY INFORMATION

GB) WARNING:

WARNING: ONLY TO BE USED IN WATER IN WHICH THE CHILD IS WITHIN ITS DEPTH AND UNDER ADULT SUPERVISION. NEVER ALLOW DIVING INTO THIS PRODUCT. NEVER LEAVE IN OR NEAR THE WATER WHEN NOT IN USE.FOLLOW THESE RULES TO AVOID DROWNING, PARALYSIS OR OTHER SERIOUS INJURY. 6+ YEARS.

THIS IS NOT A LIFE-SAVING DEVICE.



DEUTSCH
Swim Essentials Inflatable Hammock Instructions/Manual
DE- Allgemeine Anweisungen

Anweisungen zum Zusammenbauen und Aufpumpen
1. Öffnen Sie die Verpackung des Schlauchboots vorsichtig und ohne scharfe Gegenstände.
2. Nehmen Sie das Produkt aus der Verpackung und aus dem Polybeutel.
3. Überprüfen Sie das Produkt auf Beschädigungen.
4. Suchen Sie einen sauberen Bereich, der frei von Steinen oder anderen scharfen Gegenständen ist.
5. Stellen Sie sicher, dass das Produkt vor dem Gebrauch vollständig aufblasen ist. Stellen Sie sicher, dass sich das Produkt fest anfühlt, aber nicht hart ist. Wenn die Nähte belastet sind, ist das Produkt überfüllt. Wenn sich Nähte zu strapazieren beginnen, stoppen Sie sofort das Aufblasen und lassen Sie Luft ab, um den Druck zu verringern. Sie keine Anzeichen von Stress mehr auf der Naht vorhanden sind. Das Produkt muss aufblasen werden, bis sich einige kleine sichtbare Falten oder Knickc um die Naht befinden. **VOR-SICHT:** Um ein Platzen zu vermeiden, nicht übermäßig aufblasen. Hochdruckluftkompressoren verwenden oder den empfohlenen Antriebsdruck überschreiten. Nur kein kalter Luft füllen.
6. Schließen Sie das Aufblasventil und lassen Sie es sicher einatzen.
7. Stellen Sie sicher, dass während des Gebrauchs ein ausreichender Luftdruck im Produkt herrscht. Überprüfen Sie den Druck häufig, insbesondere an sehr heißen oder kalten Tagen, mit der in der Anleitung beschriebenen Luftdruckprüfmethode.

Instandhaltung

- Überprüfen Sie Nähte und Ventile regelmäßig auf Risse.
- Reinigen Sie das Gerät nach jedem Gebrauch mit einem Gartenschlauch und lassen Sie es vor der Lagerung an der Luft trocknen.
- Wenn dieses Produkt in einem Innenpool verwendet wird, stellen Sie sicher, dass genü-gend Kopfhöhe vorhanden ist.

Lager
1. Stellen Sie sicher, dass das Gerät zünftig sauber und trocken ist, siehe Abschnitt Wartung.
2. Alle Luftventile öffnen und das Gerät vollständig entleeren.
3. Entleeren Sie gegebenenfalls sämtliches Zubehör.
4. Falten Sie das Gerät locker und vermeiden Sie scharfe Biegungen, Ecken und Knickc, die das Gerät beschädigen können. Ersetzen Sie alle Aufblasventilklappen.
5. Trocken und drinnen lagern.

Reparatur

Das Gerät wird mit einem Reparatur-Patch geliefert. Wenn Sie eine Idee haben, wo das Leck ist, verwenden Sie eine Mischung aus Spülmittel und Wasser in einer Sprühflasche und sprühen Sie über den verdächtigen Bereich. Jedes Leck erzeugt Blasen, die den Ort des Lecks genau be-stimmen. Reinigen Sie den Bereich rund um das Leck gründlich, um Schmutz und andere Ver-schmutzungen zu entfernen. Schneiden Sie ein Stück Reparaturmaterial ab, das groß genug ist, um den beschädigten Bereich um ca. 1,5 cm zu überlappen. Runden Sie die Kanten ab, legen Sie das Pflaster über die beschä-digte Stelle und drücken Sie es fest zum unteren. Möglicherweise möchten Sie ein Gewicht oben verwenden, um es an Ort und Stelle zu halten. Nicht innerhalb einer Stunde nach dem Fixieren aufblasen.
WICHTIG: Nach nicht-haltbarem oder Polyurethanbeschädelt zum Reparieren von Campingmatten, Zelten oder Schuhen in Ihrem örtlichen Geschäften oder auf dem Markt kaufen, um das Gerät zu patchen.

Bitte beachten Sie die Anleitung des Klebers zum Patchen.

DIE NICHTBE