 


Sensor Dustbin Operational Manual

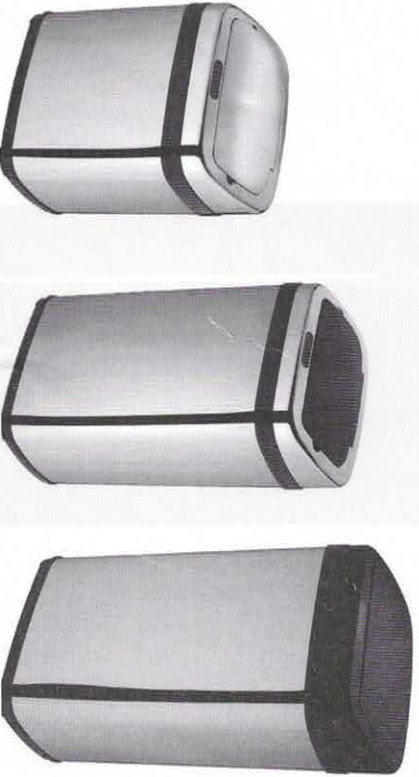


Item NO.	Dimensions		Capacity	Power(AC/DC adaptor)
	long	wide*high (cm)		
01	33x25x37.5cm±1cm		15L	4x size AA batteries
02	33x25x42.5cm±1cm		20L	4x size AA batteries
03	33x25x58cm±1cm		30L	4x size AA batteries
04	33x25x70cm±1cm		40L	4x size AA batteries
05	33x25x85cm±1cm		50L	4x size AA batteries

Safety Cautions

- ※ Before using, please carefully read the safety checkpoints

Related signs

- ※ For the safety of you and others, please abide by the safety caution check points.

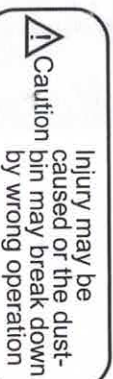

Example of signs

indicate and explain the items you must abide by

⊘ This means forbidden

ⓘ This means you must do it

- ※ Please remember the points after you read them.

Caution


- ⊘ Not to be flushed with water because of the electric and electronic components. Can be wiped with wet wipes on surface.
- ⊘ Avoid direct casting of sunshine on the induction receiver window
- ⊘ During the opening process of the cover, don't press the cover with force.
- ⊘ Dismantling, repair and alteration of the product are absolutely
- ⓘ When batteries are going run out, please replace with new ones instantly
- ⊘ Don't put anything on the dustbin cover

Product Introduction

Most dustbins for sale in the market need your hand or foot to press on the cover to operate it. This new infrared induction dustbin doesn't require this. The cover will automatically open & close so it's very simple to use. When you put your hand or an object close to the induction window (at a distance of about 15-25cm) the cover will open automatically. After you drop the trash in the bin, the lid will close automatically. The product adopts a photoelectric technique, it has stable performance, long use and power consumption.

Its Parts

● Appearance

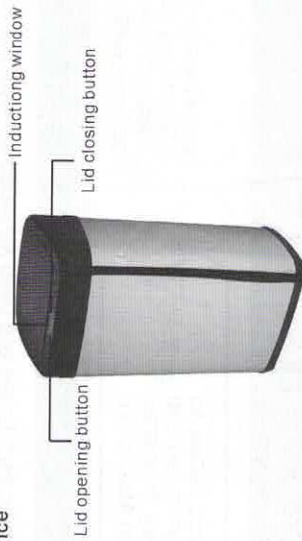

Operation Instruction

- (1) Open the battery cover at the bottom of the lid and insert 4pcs #AA batteries according to the correct polarity then close the battery cover.
- (2) Turn on the power switch on the rear cover, then the indicator will turn red for 3 seconds(approx). When the indicator twinkles every 3 seconds, it means the electronic circuit is waiting in a normal status.
- (3) When you need to toss the garbage into the bin, simply hover your hand above the lid within 15-25cm and it will open. The lid will then close after 5 seconds of inactivity. The cover will keep open if your hand or object stays in the induction area.
- (4) When the dustbin is full, press the "open" button at the induction window to keep the lid open. This is in order to deal with the frequent switch of the dustbin. Press the "close" button to close the lid and then the circuit resumes its automatic induction function.
- (5) When the dustbin is inactive, the indicator twinkles red every 3 seconds. When the cover is open, the indicator is green. When the cover is closing, the indicator is red. When you use the manual open-cover function, the indicator twinkles green every 3 seconds.
- (6) If the indicator twinkles yellow every 3 seconds, this means the batteries are going to run out. If the dustbin is opened and closed approximately 20 times per day, the battery life is 3 months(approx).