

TOBI™ ROBOT SMARTWATCH

Your robot smartwatch can do so much! Tobii™ has moving arms and legs with over 100 expressions and tons of interactivity! Take photos and film P.O.V. videos with dual cameras, track steps with the built-in pedometer, select a cool watch face to display, and play a variety of fun games! Tobii™ is the only robot smartwatch that Comes to Life Before Your Eyes™!



Only one Tobii™ Robot Smartwatch included. Multiple shown for reference only.

- 1. Tobii™ Robot Smartwatch
2. Watchband
3. Clip/Stand
4. Micro-USB Cable

 
Prior to giving this product to a child, remove all packaging material including plastic covers, tape, ties, tags and packaging locks. The plastic cover over the smartwatch surface is packaging material included for protective purposes and should be removed prior to use.

MICRO-USB PORT

NOTE: An adult must charge the device and connect to a computer. Use the included Micro-USB Cable to connect the device to your computer to transfer photos and videos and to charge the device.
1. Open the cover over the Micro-USB port on Tobii™.
2. Insert the Micro-USB side of the cable into the port.
3. Insert the large USB end into a USB port on your computer.

BATTERY CHARGING

Prior to use, it is recommended that you fully charge Tobii™ for optimal performance. NOTE: The device should be OFF prior to charging. To power OFF, hold the home button for about 5 seconds, until a sound plays and the device shuts off.
1. Remove the watchband or clip/stand from around Tobii™.
2. Insert the larger end of the Micro-USB cable into a USB port on your computer.
3. Lift open the cover over the Micro-USB port on Tobii™ and insert the Micro-USB cable into the port.
4. A battery symbol will turn green on the screen once the device is fully charged. Remove the device from the Micro-USB cable. Do not over charge the battery.
5. You can now turn on the device, add your favorite accessory and begin playing.

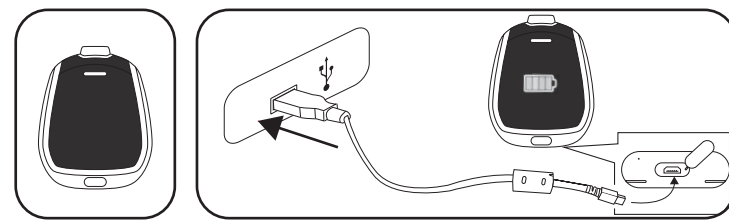

Remove Tobii™ from the watchband or clip/stand. Open the port cover on the underside of Tobii™ and plug the Micro-USB end of the cable into the port. Plug the charging cable into the USB port on your computer.

 
NOTE: See page 24 for more BATTERY INFORMATION.

SYSTEM REQUIREMENTS

Compatible systems include Microsoft® Windows XP, Windows® 7, Windows® 8, and Windows® 10 Operating System or a Macintosh Computer with macOS X version 10.13 and 10.14. Other operating systems may be compatible or eligible for upgrade to a compatible system. USB port required.

USING THE DUAL CAMERAS

There are two cameras on Tobii™ Robot Smartwatch, a front-facing camera on the smartwatch's surface and an outward-facing (P.O.V.) camera on the top of the device. Open the Camera or Video applications to use the camera. View your images and videos in their respective galleries on your device. For more information, see pages 17-18.

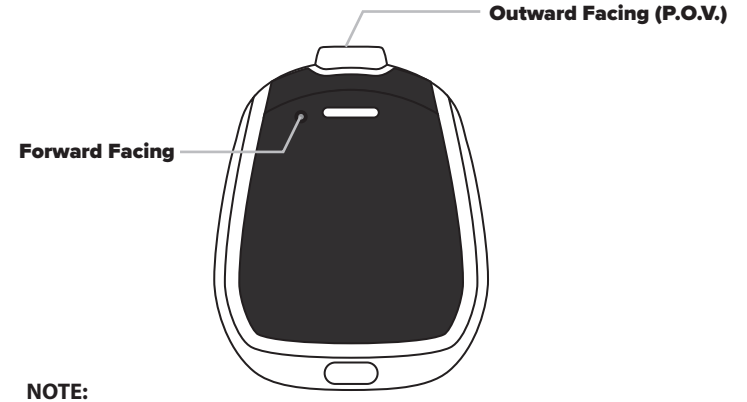

NOTE: For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.

TRANSFERRING FILES FROM TOBII™

To start, plug the device into your computer using the included Micro-USB cable, and follow the instructions on page 4.

 
On your computer, you will see a removable drive called TOBII. Click on this drive to transfer files from the device to your computer using the folders called PHOTOS and VIDEOS. Copy and paste the files in these folders to the desired location on your computer. TIP: Photo and video files will not be deleted from Tobii™ until you manually delete them on the device by pressing the trash can icon in the photo and video apps.

You cannot load photos or videos from other devices onto Tobii™, as the file types may not be compatible.

NOTE: Once the device is connected to your computer, do not disconnect the smartwatch or the cable while files are transferring. Once your smartwatch completes the transfer, properly eject the device from your computer. Then, physically disconnect the cable and the smartwatch.

HOME BUTTON

Press and hold the home button on the front of the smartwatch for about 5 seconds to turn it on. Once the smartwatch is turned on, press the home button once to rotate the display between TOBI MODE, MENU MODE and WATCH SCREEN MODE. From TOBI MODE, press the home button to switch to MENU MODE. From MENU MODE, press the home button to switch to WATCH SCREEN MODE. From WATCH SCREEN MODE press the home button to switch to TOBI MODE.

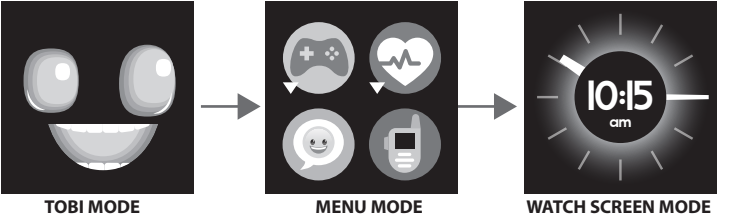

QUICK MENU VIEW

Swipe down on the touchscreen to quickly see the volume, time, wireless connectivity, daily steps, and battery charge level. Swipe up to make this quick view menu disappear or it will disappear after a few seconds. Tap on the volume or wireless connectivity icons to make changes to those settings.

NOTE: The quick view menu will not appear by swiping down on the screen while Tobii is listening to you in Tobii™ Mode.

TOBII™ MODE

 
Press the home button on the front of the smartwatch to rotate the display to TOBII™ MODE.

Tobii™ Robot Smartwatch does so many fun things and has over 100 expressions! 1. When you touch the screen in Tobii Mode, Tobii's arms and legs will move!

- 2. Shake Tobii around to make Tobii dizzy!
3. Leave Tobii alone and watch Tobii yawn or get annoyed.
4. Swipe right to tickle Tobii and make Tobii giggle.
5. Swipe left to make Tobii annoyed!
6. Swipe up and Tobii will listen to you! Try saying, "Hi Tobii," or asking a question to see Tobii's response. Swipe down, left, or right on Tobii's face to disable the listening mode.
7. Press and hold Tobii's mouth to select a treat to feed Tobii! Select a food by pressing on the treat. Then, press the green check to feed it to Tobii.
8. Sometimes Tobii will suggest a game to play or an app to use with a speech bubble icon. Click on the icon to open the app Tobii suggests. This will also boost Tobii's happiness on the stat bar (see HEALTH on page 14). PLUS SO MUCH MORE! What else can Tobii™ Robot Smartwatch do?

GAMES MENU

All games have three level options, where 1 is the easiest level and 3 is the hardest level. See if you can win each game playing all three levels!

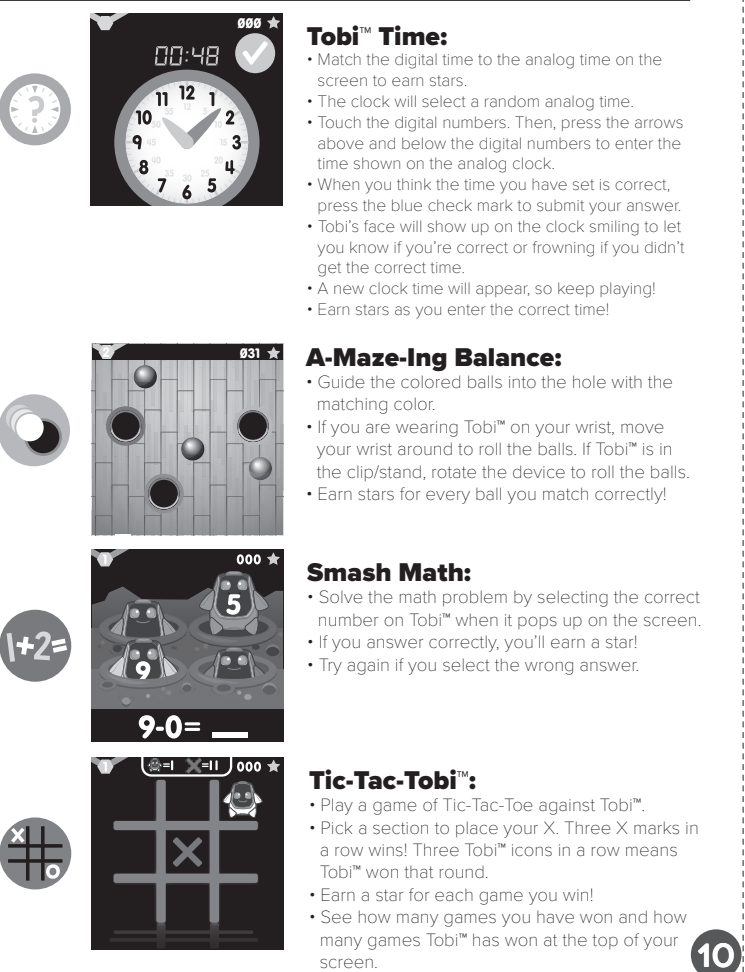

Tobii™ Time: Match the digital time to the analog time on the screen to earn stars. The clock will select a random analog time. Touch the digital numbers. Then, press the arrows above and below the digital numbers to enter the time shown on the analog clock. When you think the time you have set is correct, press the blue check mark to submit your answer. Tobii's face will show up on the clock smiling to let you know if you're correct or frowning if you didn't get the correct time. A new clock time will appear, so keep playing! Earn stars as you enter the correct time!

 
A-Maze-Ing Balance: Guide the colored balls into the hole with the matching color. If you are wearing Tobii™ on your wrist, move your wrist around to roll the balls. If Tobii™ is in the clip/stand, rotate the device to roll the balls. Earn stars for every ball you match correctly!

Smash Math: Solve the math problem by selecting the correct number on Tobii™ when it pops up on the screen. If you answer correctly, you'll earn a star! Try again if you select the wrong answer.

Tic-Tac-Toe: Play a game of Tic-Tac-Toe against Tobii™. Pick a section to place your X. Three X marks in a row wins! Three Tobii™ icons in a row means Tobii™ won that round. Earn a star for each game you win! See how many games you have won and how many games Tobii™ has won at the top of your screen.

MESSAGING

REMEMBER: Your Tobii™ smartwatch can connect to other Tobii™ smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in SETTINGS (making sure it is toggled to the ON [Green] position). Now, you can send messages with other nearby Tobii™ smartwatches. NOTE: Wireless connectivity is only compatible with other Tobii™ smartwatches, and will not connect to other devices.

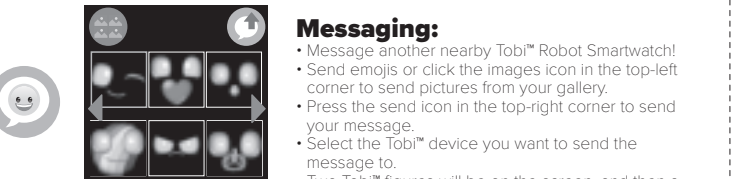


Messaging: Message another nearby Tobii™ Robot Smartwatch! Send emojis or click the images icon in the top-left corner to send pictures from your gallery. Press the send icon in the top-right corner to send your message. Select the Tobii™ device you want to send the message to. The receiving device must press the chat bubble to view the message. NOTE: Pictures sent to another Tobii™ device cannot be saved on that device. They will disappear after about 15 seconds.




Walkie Talkie: Press the button on the top of the two-way radio to record. Press it again to stop recording. Press the middle icon to select fun voice effects, like extra fast, slow-mo, robot, chipmunk or no effect. Press the trash can icon to delete the message. Press the play button to play your message back. Press the Tobii™ icon to send the message to a nearby Tobii™ device. Select the Tobii™ device you want to send the message to. Two Tobii™ figures will be on the screen, and then a chat bubble will pop up on the receiving Tobii™ device when your message has sent. The receiving device must press the chat bubble to view the walkie talkie message. NOTE: Messages sent to another Tobii™ device cannot be saved on that device. They will disappear after about 15 seconds.

 STATS (CONT.)

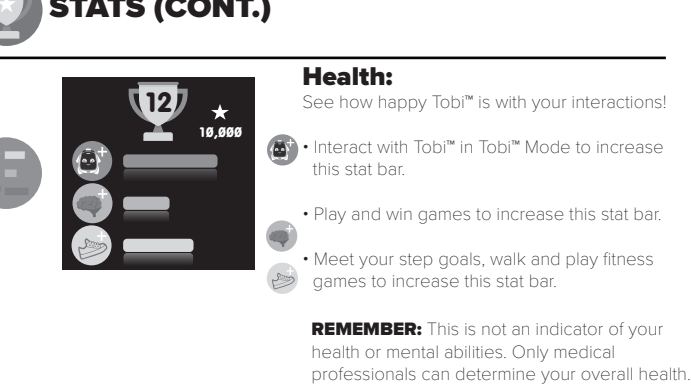

Health: See how happy Tobii™ is with your interactions! Interact with Tobii™ in Tobii™ Mode to increase this stat bar. Play and win games to increase this stat bar. Meet your step goals, walk and play fitness games to increase this stat bar. REMEMBER: This is not an indicator of your health or mental abilities. Only medical professionals can determine your overall health.

 SETTINGS MENU Date, Time, Date Format, 12 or 24 Hour Clock, Language, Brightness, Volume To cycle through each setting, swipe left or right on the screen. Make the appropriate changes. Then, press the green check mark to set your selection. If the setting is already accurate, press the green check to continue or swipe left to the next screen.

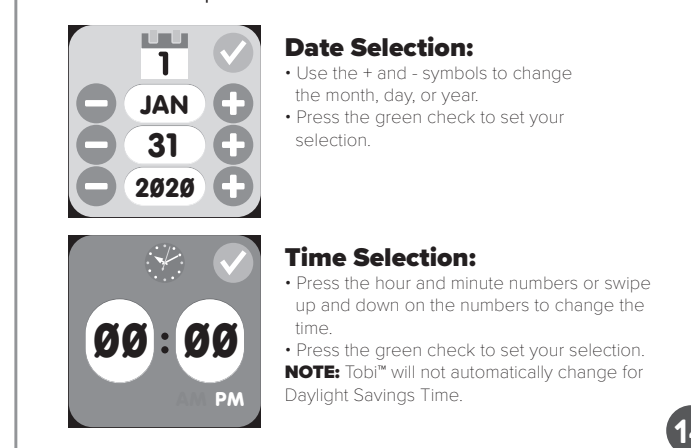

Date Selection: Use the + and - symbols to change the month, day, or year. Press the green check to set your selection. Time Selection: Press the hour and minute numbers or swipe up and down on the numbers to change the time. Press the green check to set your selection. NOTE: Tobii™ will not automatically change for Daylight Savings Time. Date Format Selection: Choose how you want to display the date: MM/DD/YY, DD/MM/YY, or DD/MM/YY. Press the check mark next to your selection to set the display. The check mark will turn green. 12 or 24 Hour Clock Selection: Choose how you want to display the time: 12 Hour Cycle, 24 Hour Cycle (for example, 6:00 p.m. would display as 18:00). Press the check mark next to your selection to set the display. The check mark will turn green. Language Selection: Tap on the language name to cycle between English, Spanish, French, Dutch, German. Press the green check mark to select your language. REMEMBER: Tobii™ does not speak any language. The only apps that use language are the calendar and activity tracker. Brightness Setting: Use the + and - symbols to change the brightness of the screen. Volume Setting: Use the + and - symbols to change the device's volume level.

SPECIFICATIONS

Table with 2 columns: Specification and Value. Includes Display (Curved 1.54" 240 x 240), Supported Languages (English, Spanish, French, Dutch, German), Photo Resolution (VGA (640 x 480 pixels)), Video Resolution (QVGA 14fps (320 x 240 pixels)), Focus Range (3 ft. (1m)), Internal Memory (512MB), Storage Capacity (Photos: 3000 QR Video: 30 min), File Format (Photo: JPEG Video: AVI), Connectivity (Wireless Connectivity: 3.0 & BLE + EDT Micro-USB Cable: 2.0 HS), Battery (Lithium Polymer battery), Battery Life (Low Usage: 5 Days Typical Usage: 2 Days Heavy Usage: 8 Hours), Optimum Operating and Charging Temperature (14°F (-10°C) ~ 140°F (60°C)), Frequency Band(s) (2402MHz-2480MHz), Max. Radio Frequency Power Transmitted (-2.3dBm)

FIRMWARE UPDATE

Before beginning, it is important to check for any available firmware updates so that Tobii™ is operating optimally. To update the firmware on your device: 1. On your computer, download the latest firmware pack from WWW.TOBISMARTWATCH.COM. 2. Unzip the firmware pack. 3. Turn off Tobii™. To turn off the device, press and hold the home button on the front of the device for about 5 seconds until a sound plays and the screen turns off. 4. Follow the steps on page 4 to connect the Micro-USB Cable to Tobii™ and your computer. 5. Look for the drive on your computer named TOBII. A charging icon will show on the device's touchscreen. 6. Quickly tap the screen 5 times to unlock. Then, an unlock icon will appear on the device's touchscreen. 7. Copy all files in the firmware pack folder to the drive on your computer named TOBII. 8. If your computer prompts you, replace all files in the TOBII drive. 9. Properly eject the device from your computer when copying is finished. Then, remove the Micro-USB Cable. 10. Turn on Tobii™. A firmware update screen will be displayed on the device. Press the check mark icon on the screen to complete the firmware update. NOTE: After Tobii™ cycles back on, it is recommended you turn the device off and back on again to confirm the update was successful.

STARTING UP TOBII™ ROBOT SMARTWATCH

To turn on the device, press and hold the home button on the front of the device for about 5 seconds until the screen turns on and a sound plays. When you first start the smartwatch, ensure the firmware is up to date, as mentioned above. Make sure the device is fully charged (see page 4). To begin, you'll be prompted to set the language, date format, time, and name of the device. For more information on how to set these features, see SETTINGS on pages 14-15.

WAKE UP TOBII™ ROBOT SMARTWATCH

After about 25 seconds of inactivity, the touchscreen will go dark. If you're wearing Tobii™ Robot Smartwatch on your wrist, raise your arm and turn the device toward you to wake it up and light up the touchscreen. If Tobii™ is in the clip/stand, lift Tobii™ to light up the touchscreen. You can also press the home button once to wake up the device.

WIRELESS CONNECTIVITY

Your Tobii™ Robot Smartwatch can connect to other Tobii™ Robot Smartwatches using wireless connectivity. To connect, open the Menu Mode and select the wireless connectivity icon in SETTINGS. Make sure wireless connectivity is toggled to the ON position (button turns green). Now, you can share photos and message with other Tobii™ users. Users must be close by to connect over wireless connectivity. For example, about 50 ft. (15m) or less unobstructed. The device must also have sufficient battery power to connect wirelessly and share photos and messages. NOTE: Wireless connectivity is only compatible with other Tobii™ smartwatches, and will not connect to other devices. Users receiving messages must accept the message from their device before they can view it.

WEARING TOBII™ ROBOT SMARTWATCH

 
As with all wearable devices, some users may have skin sensitivities that are irritated by wearing the watchband for extended periods. Irritation may occur from moisture, sweat, soap or other irritants that get caught between the band and the skin. If irritation occurs, remove the watchband. It is not recommended to wear the watchband to bed at night or for extended periods. Always keep your wrist and the watchband dry and clean. To clean the band, wipe it off regularly with a damp cloth and dry thoroughly.

Avoid wearing the watchband too tightly, which may also contribute to skin irritation. The band should not be too loose so that it does not stay in place properly, but it should also not be so tight that it is uncomfortable to wear. If you notice any redness or swelling or other skin irritation, remove the watchband and consult a doctor if necessary.

If you do find that your skin is sensitive to the watchband, it is recommended you use the included clip/stand to play with Tobii™ Robot Smartwatch.

USING THE CLIP/STAND


In addition to wearing Tobii™ Robot Smartwatch on your wrist, you can use the included clip/stand to attach Tobii™ to your clothing or use it as a display stand on a table. Tobii™ will still count your activity, steps, and motion if you clip it to your clothing, but will not track activity if used as a stand. For the most accurate activity tracking, wear the device on your wrist or clipped onto your waistband. TIP: For both the watchband and the clip/stand, make sure Tobii's arms and legs are able to move in and out of the casing. Ensure a proper fit before use.

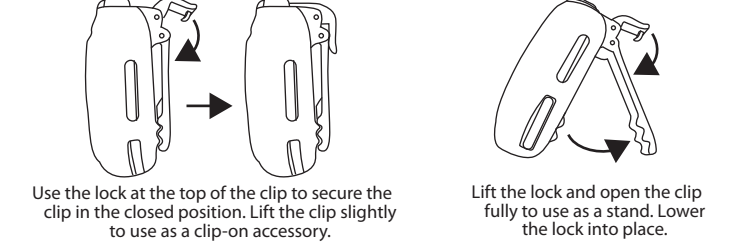

MENU MODE

Select from a variety of action-packed games, activities, and dual P.O.V. and selfie cameras! Press the icons on the screen to open up sub-menus (indicated by an arrow next to the icon). To exit a menu selection, press the home button.

 There are four main menu screens, and three sub-menus for games, fitness games/tracking, and settings. Swipe left or right on the smartwatch to navigate between the four menu screens.

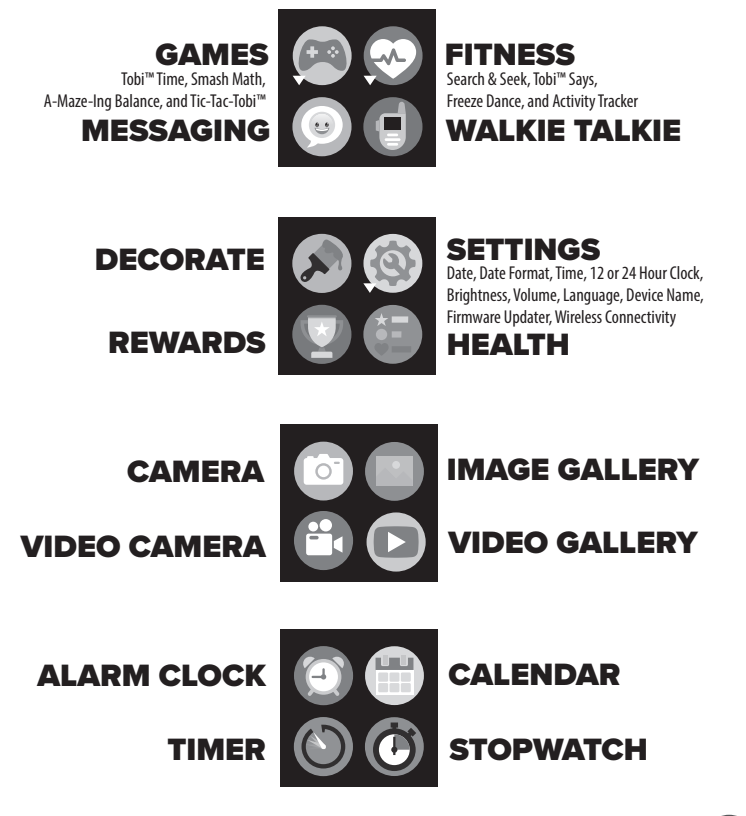

FITNESS MENU

Search & Seek: Start walking around with your smartwatch. You'll earn room decorations. Match pictures in the center square to moving objects with this augmented reality game. When you match the picture to the object, tap the center square to "catch" it. For each correct catch, earn stars! Freeze Dance: Dance until the music stops! When the music stops and Tobii™ is on screen with a stop sign, make sure to freeze! Don't move while the music is stopped. Don't stop moving while the music is playing. Earn a star for each minute of play when you freeze at the right time! If you are still dancing when the music stops, or if you stop moving while music plays, the clock will go back to 0! Tobii™ Says: Watch the move that Tobii™ wants to you copy. Perform that move the number of times that the screen shows. The number will count down as you perform the move repetitively. Earn stars for completing moves! Activity Tracker: View your daily activity steps. Set a step goal by clicking on the target icon. Set a target step goal by pressing the + and - icons. Your goal can be as low as 1,000 steps per day. Increase the goal in 1,000 step increments up to 100,000 steps. Press the green check mark to set your goal. REMEMBER: Always consult a doctor before starting new physical activities.

STATS

Decorate: As you play games and interact with Tobii™, you'll earn room decorations. Swipe left or right on the touchscreen to see all of Tobii's rooms! Open the treasure chest icon in the top-left corner to see all the decoration items you have collected. Tap an item and press the green check to add it to the room you're in. Press and hold the item to move it around in the room, and then press the green check when you're happy with it. Uncheck the icon to move the item. Drag the item to the right side of the screen to remove it from the room. Tobii™ will appear to check out the room you decorated! Rewards: See all the trophies you've earned from playing games and interacting with Tobii™. If you don't have a trophy yet, Tobii™ will react with a sad face. Keep playing to earn trophies! Reward Scoring: Earn one star for each correct answer. Earn a new sticker reward for every 10 stars collected. For every 3 out of four stickers, you will earn a room sticker. On the fourth sticker reward, earn a new food to feed Tobii™. Level up after 100 stars to earn a trophy and see a new animation!

TOBI™ Robot Smartwatch



Comes to Life Before Your Eyes™

USER GUIDE

Illustrations are for reference only. Styles may vary from actual contents.

655333, 655340
655333E5C, 655340E5C

4+

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

This warranty is applicable only to the original purchaser, is non-transferable and applies only to The Little Tikes Company products or parts. This product is covered by a 6-month warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This warranty does not apply to:

- Consumable parts, such as batteries
- Cosmetic damage, including but not limited to scratches and dents
- Damage caused by use with non-Little Tikes® products
- Damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes
- Damage caused by operating this product outside the permitted or intended uses described by The Little Tikes Company in this manual
- A product or part that has been modified
- Defects caused by normal wear and tear or otherwise due to the normal aging of the product
- If any Little Tikes® serial number has been removed or defaced

26

LIMITED WARRANTY (CONT.)

For assistance, please contact consumer service: **U.S.A and Canada:** For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. **United Kingdom:** For warranty service or replacement part information, please visit our website at: littletikes.co.uk, and/or call +0800 521 558 or write to 50 Presley Way, Crownhill, Milton Keynes MK8 OES, Bucks UK. Some replacement parts may be available for purchase after the warranty expires – contact us for details. **Australia:** For warranty service or replacement part information, please visit our website at: littletikes.com.au, and/or call 1300 059 676 or write to Suite 2.02, 32 Delhi Road, Macquarie Park NSW 2113. Some replacement parts may be available for purchase after the warranty expires – contact us for details. **Benelux Region:** For warranty service or replacement part information, please visit our website at: littletikes.nl, and/or call +31(0) 172 758038 or write to klantenservice@mga.com. Some replacement parts may be available for purchase after the warranty expires – contact us for details. **Outside of these countries:** Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under warranty. Return of the product under warranty must adhere to the following rules: If The Little Tikes Company believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage. **THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF THE LITTLE TIKES COMPANY CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY THE LITTLE TIKES COMPANY IN ITS SOLE DISCRETION. ANY DISPUTES RESULTING FROM THIS WARRANTY SHALL BE SUBJECT TO THE FINAL AND CONCLUSIVE DETERMINATION OF THE LITTLE TIKES COMPANY.** To the extent permitted by law, The Little Tikes Company will not be responsible for direct, special, incidental or consequential damages resulting from any breach of warranty.

27

DATED SALES RECEIPT REQUIRED FOR PROOF OF PURCHASE

LiPo BATTERY SAFE USAGE

This device is equipped with a Lithium Polymer (LiPo) rechargeable battery. Please pay attention to the following cautions for safety use:

- Before recharging, allow the battery to cool for at least 10 minutes after use.
- Do not dispose of the battery in fire or extreme heat.
- Do not use or leave the battery near a heat source such as a fire or a heater.
- Do not strike or throw the battery against hard surfaces.
- Do not immerse the battery in water.
- Keep the battery in a cool, dry place.
- When recharging, only use the Micro-USB Cable specifically included for that purpose.
- Do not over-charge the battery.
- Do not directly solder the battery and pierce the battery with a nail or other sharp object.
- Do not disassemble or alter the battery.
- Charge the battery as necessary. Failure to charge the battery frequently may result in a battery that will no longer accept a charge.
- Do not transport or store the battery with metal objects such as necklaces, hairpins, etc.
- Please recycle a used battery after covering the battery wires/terminals with electrical tape or by inserting it into an individual poly bag. Check local laws and regulations for recycling and/or disposal information.
- Under the environment with electrostatic discharge, the product may malfunction and require the user to reset the product by turning it off and back on again.
- Rechargeable batteries are only to be charged by an adult.

BATTERY LIFE AND MAINTENANCE

Check the battery charge level on the quick menu view. If the battery is yellow, it's time to charge soon. If the battery is red, charge the battery as soon as possible.

USAGE	BATTERY LIFE
Low Usage	5 Days
Typical Usage	2 Days
Heavy Usage	8 Hours

Charge the battery regularly to maintain optimum performance, even when the device isn't regularly in use. For example, charge the device at least once every six months. Turn the device OFF before charging the battery. Keep the device OFF when the device will not be in use for an extended period.

This chart is only an estimate of the projected battery life before charging is needed.

24

TROUBLESHOOTING

The smartwatch has stopped working.	1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. NOTE: if the device still does not work, charge the battery (see page 4) and follow the steps above.
The touchscreen is not responding properly.	1. Turn the power OFF by pressing and holding the home button until the device turns off. 2. Turn the device back ON by pressing and holding the home button until the device turns on. It should now work properly. NOTE: if the device screen still does not work, charge the battery (see page 4) and follow the steps above. TIP: Use the tip of your finger rather than your finger nail for best results using the touchscreen.
The image or video taken is not clear.	1. Ensure the lighting in the area you are shooting is sufficient. 2. Check that the camera lens is clean. If dirty, wipe with a dry, soft cloth and blow on it to remove debris. See CARE AND MAINTENANCE on page 23.
Cannot connect the device to a computer.	1. Ensure there is a good connection between the device and the computer via the Micro-USB Cable. See MICRO-USB PORT on page 4 and other supporting sections for more information. 2. If the cable is damaged, contact consumer service. Do not attempt to use the cable if it is damaged.
Wireless connectivity is not working properly.	1. Stay within close proximity (about 50 ft./15m with nothing in the way) of other Tobi™ Robot Smartwatches when connecting wirelessly. 2. The device must have a sufficient amount of battery power to connect wirelessly. Recharge the device using the included Micro-USB cable.
The device is not charging.	1. Only use the included Micro-USB cable to charge the device. 2. It is recommended you only charge the device using a USB port on your computer. 3. Make sure to charge the device regularly, even if it is not in use. A battery that has not been charged in a long time may no longer accept a charge.

22

 
CALENDAR & TIMERS (CONT.)



Timer:

- Set a custom timer by tapping on the minutes and seconds numbers to set the desired duration of time.
- Select a preset timer by pressing the icon in the top left. By default these times are:
 - Hourglass: 1 Minute
 - Moon and Stars: 30 Minutes
 - Book: 15 Minutes
 - Broom: 15 Minutes
 - Meditation: 2 Minutes
 - Music: 30 Minutes
 - Phone: 15 Minutes
 - Brushing Teeth: 2 Minutes

NOTE: You can change the default time on the preset timer by pressing the numbers. • Press the green check to set the timer. • Press the play button to start the timer. • Press pause to pause the timer. • Tobi™ will appear when the timer is done.

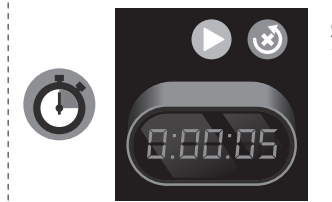

Stopwatch:

- Time yourself doing various activities and having fun!
- Press the play button to start the stopwatch.
- Press the stop button to stop the stopwatch.
- Press the X button to reset the stopwatch.

20

CAMERA


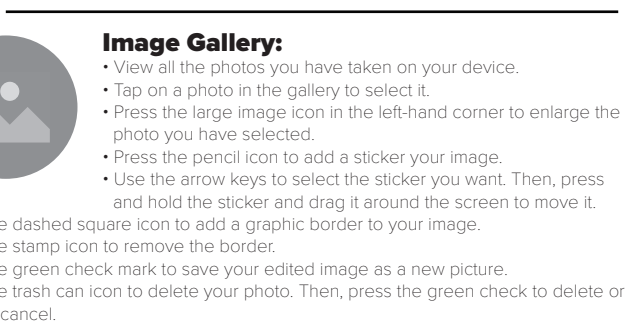 



Image Gallery:

 - View all the photos you have taken on your device.
- Tap on a photo in the gallery to select it.
- Press the large image icon in the left-hand corner to enlarge the photo you have selected.
- Press the pencil icon to add a sticker your image.
- Use the arrow keys to select the sticker you want. Then, press and hold the sticker and drag it around the screen to move it.
- Press the dashed square icon to add a graphic border to your image.
- Press the stamp icon to remove the border.
- Press the green check mark to save your edited image as a new picture.
- Press the trash can icon to delete your photo. Then, press the green check to delete or the X to cancel.

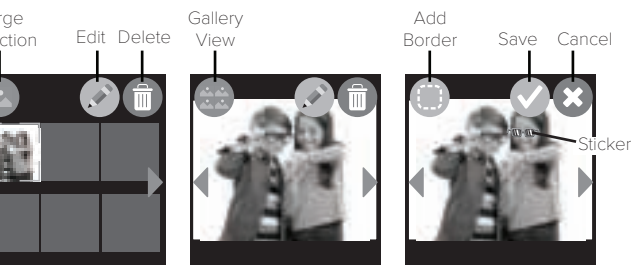

Video Gallery:

 - View all videos that you've taken on your device.
- Tap on a video to enlarge and watch it.
- Press the icon in the top left to go between the enlarged video view and the gallery view.
- Press the play button over the video to play it.
- Press the two arrows icon to rotate your video.
- Press the trash can icon to delete the video. Then, press the green check to delete or the X to cancel.

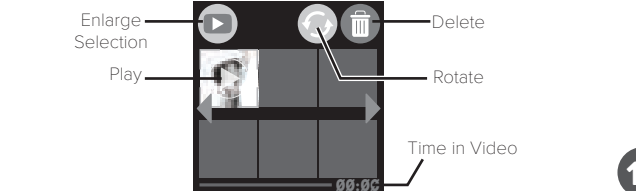

18

CALENDAR & TIMERS



Alarm Clock:

- Set up to three different alarms with custom wake up sounds.
 - Press the X icon next to the time to select that timer.
 - Press the X icon next to the timer again to make the numbers appear.
 - Next, press the numbers to select that alarm.
 - Press the hour and minute numbers to change the selection.
 - Continue changing the hour numbers to switch between AM and PM.
 - Press the icon next to AM/PM to set the alarm sound, like a bell, a puppy barking, a rooster, music, and water.
 - Cycle back to the X icon to delete the alarm.
 - When your alarm goes off, Tobi™ will appear.
 - Press the stop icon to turn the alarm off.
- NOTE: The alarm will stay set for the next day unless you cycle back to the X icon to clear the alarm.

Calendar:

 
- Select from day or month calendar views by clicking on the calendar icon in the left-hand corner.
- Swipe left or right on the month calendar view to see different months of the year.
- In the day view, press the stamp icon in the upper right-hand corner to access stickers to mark special occasions, like travel, pets, birthday cake, holidays and more!
- Press the arrow keys to cycle through the sticker options.
- Press the green check mark to add the sticker to the date.
- Press the X icon to remove it.
- The calendar icon will rotate between day or month calendar views.

19

WATCH SCREEN MODE

Press the home button to rotate the display to WATCH SCREEN MODE.

Swipe left or right on the touchscreen smartwatch surface to select from over 50 watch faces. Stop swiping to set the watch face that you like.

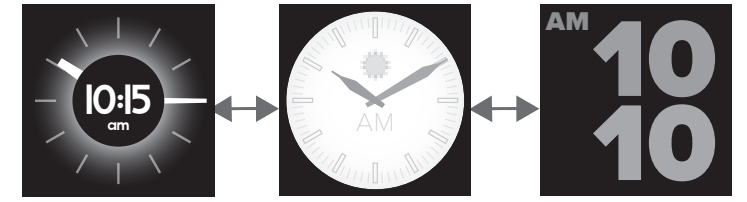

21

WARNING

This toy produces flashes that may trigger epilepsy in sensitized individuals. A very small percentage of people, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain light patterns or flashing lights. While this product does not contribute any additional risks, it is recommended that parental supervision is enforced during play. If you experience any dizziness or altered vision, disorientation or convulsions, IMMEDIATELY discontinue use and consult a physician. Focus on screens in close proximity for an extended amount of time may cause fatigue or discomfort. For every one hour of play, take a 15 minute break, or take breaks more frequently as needed.

CARE AND MAINTENANCE

- Always keep the port cover closed during use to prevent water or debris from entering the device. Only open the port cover to connect the device to your computer.
- Keep the device clean by wiping it off with a slightly damp cloth and drying it thoroughly. Do not place the device under running water or use harsh chemicals or abrasive materials to clean.
- Remove the device from the watchband and clip/stand to clean. Wipe the accessories with a damp cloth regularly to keep them clean. Always air dry; do not subject to heat.
- Keep the device and accessories out of direct sunlight for long periods of time. Do not expose the device or accessories to direct heat sources.
- Do not drop the device on a hard surface to prevent damage.
- Keep the camera lens clean. If pictures are blurry, it could be because dust or dirt is covering the camera lens. Wipe clean with a dry, soft cloth and/or blow gently on the lens to remove any debris.
- If you do not plan to use the device for an extended period, it is recommended that you turn the device off. Regularly charge the battery when not in use to ensure the battery accepts a charge. See **BATTERY LIFE AND MAINTENANCE** on page 24.

SPLASHPROOF

While your device can withstand splashes from washing your hands or dancing in the rain, it is not recommended to submerge the device in water.

 
- To prevent water damage:
1. Always ensure the cover over the Micro-USB port is completely closed to prevent water from getting inside the smartwatch.
 2. Do not place the device under running water.
 3. Do not submerge in water or wear while showering, bathing or swimming.

RESTARTING THE WATCH

If your device is unresponsive or if you wish to reset the watch to the way it was upon unboxing, press and hold the home button for 8 seconds to reset the watch. NOTE: You may need to reset all custom settings.

23

BATTERY DISPOSAL

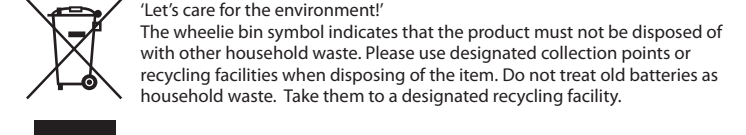


Let's care for the environment! The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

BATTERY REMOVAL INSTRUCTIONS

This toy contains a battery that is non-replaceable. Do not attempt to open the device unless you are permanently disposing the device. Opening the device for any other reason could void the warranty. Battery removal is permanent, and the device will no longer work after removing the battery.

 
CAUTION: An ADULT must remove the battery for proper disposal. Always wear protective safety goggles in case of battery leakage.

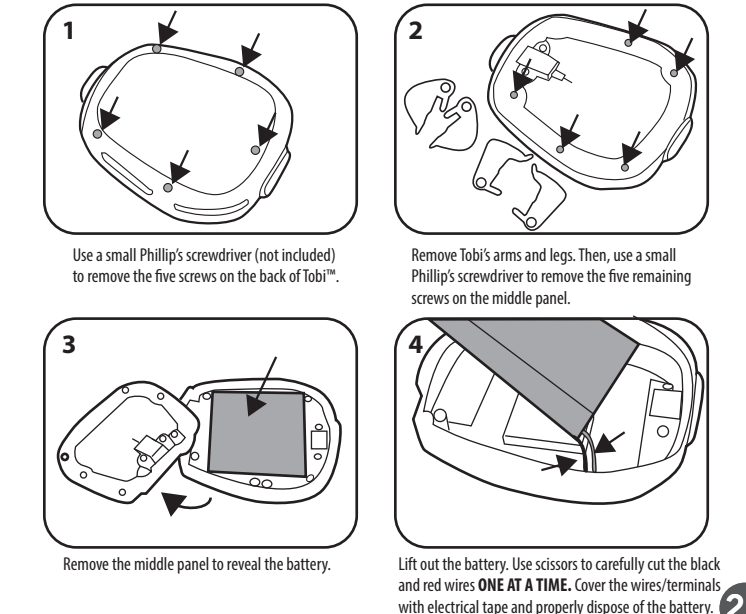

25

SETTINGS

 Device Name, Firmware Updater, Wireless Connectivity

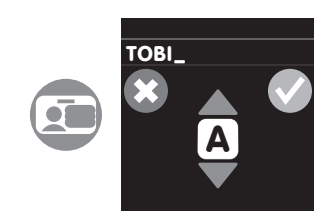


Tobi™ Device Name:

- Your device is named Tobi™ by default, but you can add onto Tobi's name to customize it!
 - Should you choose a new name, press the up and down arrows to select a letter.
 - Press the letter to set it.
 - Press the X to clear the letter you've selected.
 - Press the green check mark to save your new device name.
- NOTE: Your device name will always start with TOBI. The first four letters T-O-B-I cannot be erased.



Firmware Updater:

 - Check that Tobi™ is up to date with the latest available firmware.
 - The screen will show you which version you have.
 - Visit www.tobismartwatch.com to confirm you have the latest version.
- NOTE: You will also see this screen on your first start up after updating the firmware.

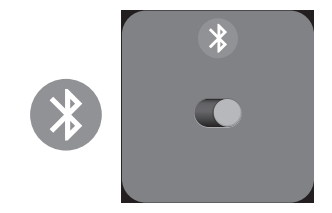

Wireless Connectivity Selection:

- Use the toggle button to turn wireless connectivity on (green) or off (pink).
- NOTE: See page 5 for more wireless connectivity information.

16

 
CAMERA

REMEMBER: For your security, the camera and microphone on your device will be disabled when connecting to a computer with the Micro-USB Cable, as the device must be off. Properly eject the device from your computer, unplug the Micro-USB cable, and turn the device on before using these features.




Outward Facing (P.O.V.)
Hold the device parallel to the ground to shoot objects in front of you. Hold the device upright to shoot objects above you.

Forward Facing
Take selfies when the device's touchscreen is facing you.

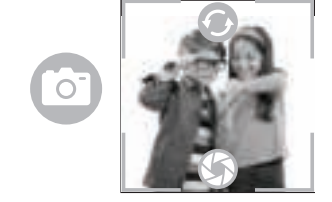

Camera:

 - Take selfies or point of view (P.O.V.) photos with your device!
- Use the arrow icon at the top of the screen to change the view between Selfie and P.O.V.
- Press the shutter button on the bottom of the screen to take your picture.

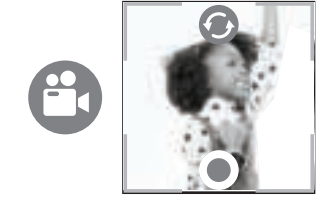

Video Camera:

- Record selfies or P.O.V. videos with your device!
- Use the arrow icon at the top of the screen to change the view between Selfie and P.O.V.
- Press the record button on the bottom of the screen to start and stop recording your video.

17

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

Little Tikes Consumer Service
2180 Barlow Road, Hudson, Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton Keynes, MK8 OES, Bucks, UK 0800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404GG Alphen a/d Rijn, The Netherlands
Tel: +31 (0) 172 758038
E-mail: klantenservice@mga.com.

Imported by MGA Entertainment Australia Pty Ltd
Suite 2.02, 32 Delhi Road Macquarie Park NSW 2113 1300 059 676

www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

28