

# ENG

## INSTRUCTION MANUAL

- Insert battery: Rotate the battery cap **8** counter clockwise, to open the battery compartment. Insert a new 9V battery (note polarity).
- Power on/off: Press and hold the upper button **5**, until you hear a sound. Two sounds and the LED-Light **4** indicate, that the pinpointer is ready to search.
- A metal object is signaled by increasing sound and vibration, the nearer the pinpoint tip **1** and side scan area **3** get to it.
- Switch between tone+vibration/ tone/vibration by pressing the lower button **6** multiple times.
- Change the sensitivity level by holding the lower button **6** and pressing the upper button **5** at the same time. The sound indicates the current sensitivity level. 1 to 3 sounds = sensitivity level 1 to 3, permanent sound = level 4.
- If the XPointer has not been used for 3 minutes or the battery runs low, an alarm tone is played.
- Keep the O-ring clean and greased.

