



Network Video Recorder

User Manual

UD04699B

<u>User Manual</u>

COPYRIGHT ©2017 Hangzhou Hikvision Digital Technology Co., Ltd.

ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to Network Video Recorder (NVR).

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website

(http://overseas.hikvision.com/en/).

Please use this user manual under the guidance of professionals.

Trademarks Acknowledgement

and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or

dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include

lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

Applicable Models

This manual is applicable to the models listed in the following table.

Series	Model
	DS-9608NI-18
DS-9600NI-18	DS-9616NI-I8
D3-9000111-18	DS-9632NI-18
	DS-9664NI-18
	DS-9616NI-I16
DS-9600NI-I16	DS-9632NI-I16
	DS-9664NI-I16
	DS-8608NI-18
DS-8600NI-18	DS-8616NI-I8
D3-8000111-18	DS-8632NI-18
	DS-8664NI-18
	DS-7608NI-12
DS-7600NI-12	DS-7616NI-I2
	DS-7632NI-12
	DS-7608NI-12/8P
DS-7600NI-12/P	DS-7616NI-I2/16P
	DS-7632NI-I2/16P
	DS-7708NI-I4
DS-7700NI-I4	DS-7716NI-I4
	DS-7732NI-I4
	DS-7708NI-I4/8P
DS-7700NI-I4/P	DS-7716NI-I4/16P
	DS-7732NI-I4/16P
	DS-8608NI-K8
DS-8600NI-K8	DS-8616NI-K8
	DS-8632NI-K8
	DS-7708NI-K4
DS-7700NI-K4	DS-7716NI-K4
	DS-7732NI-K4
DS-7700NI-K4/P	DS-7708NI-K4/8P
23-7700INI-N4/F	DS-7716NI-K4/16P

	DS-7732NI-K4/16P
	DS-7608NI-K2
DS-7600NI-K2	DS-7616NI-K2
	DS-7632NI-K2
	DS-7608NI-K2/8P
DS-7600NI-K2/P	DS-7616NI-K2/16P
	DS-7632NI-K2/16P
	DS-7604NI-K1
DS-7600NI-K1	DS-7608NI-K1
	DS-7616NI-K1
DS-7600NI-K1/4P	DS-7604NI-K1/4P

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description		
	Provides additional information to emphasize or supplement important points of the main text.		
	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.		
	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.		

Safety Instructions

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100~240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

Product Key Features

General

- Connectable to network cameras, network dome and encoders.
- Connectable to the third-party network cameras like ACTI, Arecont, AXIS, Bosch, Brickcom, Canon, PANASONIC, Pelco, SAMSUNG, SANYO, SONY, Vivotek and ZAVIO, and cameras that adopt ONVIF or PSIA protocol.
- Connectable to the smart IP cameras.
- H.265+/H.265/ H.264+/H.264/MPEG4 video formats
- PAL/NTSC adaptive video inputs.
- Each channel supports dual-stream.
- Up to 8/16/32/64 network cameras can be added according to different models.
- Independent configuration for each channel, including resolution, frame rate, bit rate, image quality, etc.
- The quality of the input and output record is configurable.

Local Monitoring

- HDMI/VGA1 and HDMI2/VGA2 outputs provided for DS-9600NI and DS-8600NI series NVR.
- HDMI and VGA outputs provided for DS-7600NI and DS-7700NI series NVR.
- HDMI Video output at up to 4K resolution and VGA video output at up to 2K resolution.
- Multiple screen display in live view is supported, and the display sequence of channels is adjustable.
- Live view screen can be switched in group. Manual switch and auto-switch are provided and the auto-switch interval is configurable.
- 3D positioning supported by I series NVR in live view.
- Configurable main stream and sub-stream for the live view.
- Quick setting menu is provided for live view.
- POS information overlay on live view by I series NVR.
- Motion detection, video tampering, video exception alert and video loss alert functions.
- Privacy mask.
- Multiple PTZ protocols supported; PTZ preset, patrol and pattern.
- Zooming in by clicking the mouse and PTZ tracing by dragging mouse.

HDD Management

Up to 16 SATA hard disks and 1 eSATA disk can be connected for DS-9600NI-I16, up to 8 SATA hard disks and 1 eSATA disk can be connected for DS-9600NI-I8, DS-8600NI-I8 and DS-8600NI-K8, 4 SATA hard disks for DS-7700NI, 2 SATA hard disks for DS-7600NI-I2/K2 (/P), and 1 SATA hard disk for DS-7600NI-K1 (/P) series NVR.

- Up to 6TB storage capacity for each disk supported.
- Supports 8 network disks (NAS/IP SAN disk).
- Supports S.M.A.R.T. and bad sector detection.
- HDD group management.
- Supports HDD standby function.
- HDD property: redundancy, read-only, read/write (R/W).
- HDD quota management; different capacity can be assigned to different channel.
- For DS-9600NI-I8 and DS-9600NI-I16 series, RAID0, RAID1, RAID5, RAID6 and RAID 10 are supported.
- Hot-swappable RAID storage scheme, and can be enabled and disabled on your demand. And 16 arrays can be configured.
- DS-9600NI-I8, DS-8600NI-I8 and DS-9600NI-I16 series NVR support disk clone to the eSATA disk.

Recording, Capture and Playback

The capture is supported by I series NVR only.

- Holiday recording schedule configuration.
- Continuous and event video recording parameters.
- Multiple recording types: manual, continuous, alarm, motion, motion | alarm, motion & alarm VCA, and POS (for I series NVR only).
- 8 recording time periods with separated recording types.
- POS information overlay on image by I series NVR.
- Pre-record and post-record for alarm, motion detection for recording, and pre-record time for schedule and manual recording.
- Searching record files and captured pictures by events (alarm input/motion detection).
- Tag adding for record files, searching and playing back by tags.
- Locking and unlocking record files.
- Local redundant recording and capture.
- Provide new playback interface with easy and flexible operation.
- Searching and playing back record files by channel number, recording type, start time, end time, etc.
- Supports the playback by main stream or sub stream. (I series NVR)
- Smart search for the selected area in the video.
- Zooming in when playback.
- Reverse playback of multi-channel.

- Supports pause, play reverse, speed up, speed down, skip forward, and skip backward when playback, and locating by dragging the mouse.
- Supports thumbnails view and fast view during playback.
- Up to 16-ch synchronous playback at 1080p real time.
- Supports playback by transcoded stream.
- Manual capture, continuous capture of video images and playback of captured pictures.
- Supports enabling H.264+ to ensure high video quality with lowered bitrate.

Backup

- Export video data by USB, SATA or eSATA device (for DS-9600NI-I8, DS-8600NI-I8 and DS-9600NI-I16 only).
- Export video clips when playback.
- Management and maintenance of backup devices.
- Either Normal or Hot Spare working mode is configurable to constitute an N+1 hot spare system.

Alarm and Exception

- Configurable arming time of alarm input/output.
- Alarm for video loss, motion detection, tampering, abnormal signal, video input/output standard mismatch, illegal login, network disconnected, IP confliction, abnormal record/capture, HDD error, and HDD full, etc.
- POS triggered alarm supported by I series NVR.
- VCA detection alarm is supported.
- VCA search for face detection, vehicle plate, behavior analysis, people counting and heat map.
- Connectable to the thermal network camera. (I series NVR)
- Supports the advanced search for fire/ship/temperature/temperature difference detection triggered alarm and the recorded video files and pictures (I series NVR)
- Alarm triggers full screen monitoring, audio alarm, notifying surveillance center, sending email and alarm output.
- Automatic restore when system is abnormal.

Other Local Functions

- Operable by front panel, mouse, remote control, or control keyboard.
- Three-level user management; admin user is allowed to create many operating accounts and define their operating permission, which includes the limit to access any channel.
- Admin password resetting by exporting/importing the GUID file.
- Operation, alarm, exceptions and log recording and searching.
- Manually triggering and clearing alarms.
- Import and export of device configuration information.

Network Functions

- Two self-adaptive 10M/100M/1000Mbps network interfaces for DS-9600NI, DS-8600NI, DS-7700NI-I4 and DS-7700NI-K4, and the multi-address and network fault tolerance working modes are configurable.
- One self-adaptive 10M/100M/1000Mbps network interface for DS-7600NI-K2/I2 (/P), DS-7700NI-I4/P and DS-7700NI-K4/P.
- One self-adaptive 10M/100Mbps network interface for DS-7600NI-K1 (/P).
- Four independent PoE network interfaces are provided for /4P models, eight independent PoE network interfaces for the /8P models, and sixteen independent PoE network interfaces for the /16P models.
- Long distance (100-300 m) network transmission via PoE (for /P models).
- IPv6 is supported.
- TCP/IP protocol, DHCP, DNS, DDNS, NTP, SADP, SMTP, SNMP, NFS, and iSCSI are supported.
- TCP, UDP and RTP for unicast.
- Auto/Manual port mapping by UPnP[™].
- Support access by Hik-Connect.
- Remote web browser access by HTTPS ensures high security.
- The ANR (Automatic Network Replenishment) function is supported, it enables the IP camera save the recording files in the local storage when the network is disconnected, and synchronizes the files to the NVR when the network is resumed.
- Remote reverse playback via RTSP.
- Supports accessing by the platform via ONVIF.
- Remote search, playback, download, locking and unlocking of the record files, and support downloading files broken transfer resume.
- Remote parameters setup; remote import/export of device parameters.
- Remote viewing of the device status, system logs and alarm status.
- Remote keyboard operation.
- Remote HDD formatting and program upgrading.
- Remote system restart and shutdown.
- RS-232, RS-485 transparent channel transmission.
- Alarm and exception information can be sent to the remote host
- Remotely start/stop recording.
- Remotely start/stop alarm output.
- Remote PTZ control.
- Remote JPEG capture.
- Virtual host function is provided to get access and manage the IP camera directly.
- Two-way audio and voice broadcasting.

• Embedded WEB server.

Development Scalability:

- SDK for Windows system.
- Source code of application software for demo.
- Development support and training for application system.

TABLE OF CONTENTS

Chapter 1 Introduction	18
1.1 Front Panel	18
1.1.1 DS-9600NI Series	18
1.1.2 DS-8600NI-I8 Series	22
1.1.3 DS-8600NI-K8 and DS-7700NI Series	26
1.1.4 DS-7600NI Series	28
1.2 IR Remote Control Operations	28
1.3 USB Mouse Operation	34
1.4 Input Method Description	35
1.5 Rear Panel	36
1.5.1 DS-9600NI and DS-8600NI Series	36
1.5.2 DS-7600NI Series	37
1.5.3 DS-7700NI Series	40
Chapter 2 Getting Started	42
2.1 Device Startup and Activation	42
2.1.1 Starting Up and Shutting Down the NVR	42
2.1.2 Activating Your Device	43
2.1.3 Using the Unlock Pattern for Login	45
2.1.4 Login and Logout	48
2.1.5 Resetting Your Password	49
2.2 Using Wizard for Basic Configuration	50
2.3 Adding and Connecting the IP Cameras	56
2.3.1 Activating the IP Camera	56
2.3.2 Adding the Online IP Cameras	57
2.3.3 Editing the Connected IP Cameras and Configuring Customized Protocols	62
2.3.4 Editing IP Cameras Connected to the PoE Interfaces	66
2.3.5 Configuring PoE Interface	68
Chapter 3 Live View	70
3.1 Introduction of Live View	70
3.2 Operations in Live View Mode	71
3.2.1 Front Panel Operation on Live View	72
3.2.2 Using the Mouse in Live View	72

3.2.3 Using an Auxiliary Monitor	73
3.2.4 Quick Setting Toolbar in Live View Mode	74
3.2.5 Fisheye Expansion View	76
3.3 Adjusting Live View Settings	78
3.4 Channel-zero Encoding	80
Chapter 4 PTZ Controls	81
4.1 Configuring PTZ Settings	81
4.2 Setting PTZ Presets, Patrols & Patterns	83
4.2.1 Customizing Presets	83
4.2.2 Calling Presets	83
4.2.3 Customizing Patrols	84
4.2.4 Calling Patrols	85
4.2.5 Customizing Patterns	86
4.2.6 Calling Patterns	87
4.2.7 Customizing Linear Scan Limit	87
4.2.8 Calling Linear Scan	88
4.2.9 One-touch Park	89
4.3 PTZ Control Panel	91
Chapter 5 Recording and Capture Settings	93
5.1 Configuring Parameters	93
5.2 Configuring Recording and Capture Schedule	97
5.3 Configuring Motion Detection Recording and Capture	101
5.4 Configuring Alarm Triggered Recording and Capture	103
5.5 Configuring VCA Event Recording	105
5.6 Manual Recording and Continuous Capture	107
5.7 Configuring Holiday Recording and Capture	109
5.8 Configuring Redundant Recording and Capture	111
5.9 Configuring HDD Group for Recording and Capture	113
5.10 Files Protection	114
5.10.1 Locking the Recording Files	114
5.10.2 Setting HDD Property to Read-only	116
Chapter 6 Playback	118
6.1 Playing Back Record Files	118
6.1.1 Instant Playback	118
6.1.2 Playing Back by Normal Search	118

6.1.3 Playing back by Smart Search	122
6.1.4 Playing Back by Event Search	125
6.1.5 Playing Back by Tag	127
6.1.6 Playing Back by Sub-periods	129
6.1.7 Playing Back by System Logs	130
6.1.8 Playing Back External File	132
6.1.9 Playing Back Pictures	133
6.2 Auxiliary Functions of Playback	134
6.2.1 Playing Back Frame by Frame	134
6.2.2 Thumbnails View	134
6.2.3 Fast View	135
6.2.4 Digital Zoom	135
6.2.5 File Management	136
Chapter 7 Backup	
7.1 Backing up Record Files	137
7.1.1 Quick Export	137
7.1.2 Backing up by Normal Video/Picture Search	139
7.1.3 Backing up by Event Search	142
7.1.4 Backing up Video Clips or Captured Playback Pictures	143
7.2 Managing Backup Devices	144
7.3 Hot Spare Device Backup	145
7.3.2 Setting Hot Spare Device	145
7.3.3 Setting Working Device	146
7.3.4 Managing Hot Spare System	146
Chapter 8 Alarm Settings	
8.1 Setting Motion Detection Alarm	
8.2 Setting Sensor Alarms	151
8.3 Detecting Video Loss Alarm	154
8.4 Detecting Video Tampering Alarm	156
8.5 Handling Exceptions Alarm	158
8.6 Setting Alarm Response Actions	159
8.7 Triggering or Clearing Alarm Output Manually	163
Chapter 9 POS Configuration	
9.1 Configuring POS Settings	
9.2 Configuring Overlay Channel	

9.3 Configuring POS Privacy Information Filtering	170
9.4 Configuring POS Alarm	170
Chapter 10 VCA Alarm	
10.1 Face Detection	
10.2 Vehicle Detection	175
10.3 Line Crossing Detection	
10.4 Intrusion Detection	179
10.5 Region Entrance Detection	181
10.6 Region Exiting Detection	182
10.7 Unattended Baggage Detection	182
10.8 Object Removal Detection	183
10.9 Audio Exception Detection	183
10.10 Sudden Scene Change Detection	184
10.11 Defocus Detection	185
10.12 PIR Alarm	185
Chapter 11 VCA Search	
11.1 Face Search	186
11.2 Behavior Search	187
11.3 Plate Search	189
11.4 People Counting	190
11.5 Heat Map	191
11.6 Advanced Search	193
Chapter 12 Network Settings	
12.1 Configuring General Settings	195
12.2 Configuring Advanced Settings	197
12.2.1 Configuring Hik-Connect	197
12.2.2 Configuring DDNS	199
12.2.3 Configuring NTP Server	200
12.2.4 Configuring SNMP	201
12.2.5 Configuring More Settings	202
12.2.6 Configuring HTTPS Port	203
12.2.7 Configuring Email	205
12.2.8 Configuring NAT	207
12.2.9 Configuring Virtual Host	209
12.3 Checking Network Traffic	210

12.4 Configuring Network Detection	212
12.4.1 Testing Network Delay and Packet Loss	212
12.4.2 Exporting Network Packet	212
12.4.3 Checking the Network Status	213
12.4.4 Checking Network Statistics	214
Chapter 13 RAID	216
13.1 Configuring Array	216
13.1.2 Enable RAID	217
13.1.3 One-touch Configuration	218
13.1.4 Manually Creating Array	219
13.2 Rebuilding Array	222
13.2.2 Automatically Rebuilding Array	222
13.2.3 Manually Rebuilding Array	223
13.3 Deleting Array	225
13.4 Checking and Editing Firmware	226
Chapter 14 HDD Management	
14.1 Initializing HDDs	227
14.2 Managing Network HDD	229
14.3 Managing eSATA	231
14.4 Managing HDD Group	232
14.4.1 Setting HDD Groups	232
14.4.2 Setting HDD Property	233
14.5 Configuring Quota Mode	235
14.6 Configuring Disk Clone	237
14.7 Checking HDD Status	239
14.8 HDD Detection	241
14.9 Configuring HDD Error Alarms	243
Chapter 15 Camera Settings	244
15.1 Configuring OSD Settings	244
15.2 Configuring Privacy Mask	245
15.3 Configuring Video Parameters	247
Chapter 16 NVR Management and Maintenance	
16.1 Viewing System Information	
16.2 Searching & Exporting Log Files	249
16.3 Importing/Exporting IP Camera Info	251

16.4 Importing/Exporting Configuration Files	252
16.5 Upgrading System	253
16.5.1 Upgrading by Local Backup Device	253
16.5.2 Upgrading by FTP	253
16.6 Restoring Default Settings	255
Chapter 17 Others	
17.1 Configuring RS-232 Serial Port	256
17.2 Configuring General Settings	257
17.3 Configuring DST Settings	259
17.4 Configuring More Settings	
17.5 Managing User Accounts	
17.5.1 Adding a User	
17.5.2 Deleting a User	
17.5.3 Editing a User	
Chapter 18 Appendix	
18.1 Specifications	267
18.1.1 DS-9600NI-I8	267
18.1.2 DS-9600NI-I16	269
18.1.3 DS-8600NI-18	271
18.1.4 DS-7600NI-I2	273
18.1.5 DS-7600NI-I2/P	275
18.1.6 DS-7700NI-I4	277
18.1.7 DS-7700NI-I4/P	279
18.1.8 DS-8600NI-K8	
18.1.9 DS-7700NI-K4	
18.1.10 DS-7700NI-K4/P	
18.1.11 DS-7600NI-K2	
18.1.12 DS-7600NI-K2/P	
18.1.13 DS-7600NI-K1	291
18.1.14 DS-7604NI-K1/4P	293
18.2 Glossary	295
18.3 Troubleshooting	
18.4 Summary of Changes	
Version 3.4.92	
Version 3.4.91	

Version 3.4.90	304
Version 3.4.80	304
Version 3.4.70	305
Version 3.4.6	305
Version 3.4.2	305
Version 3.3.9	306
Version 3.3.7	306
Version 3.3.6	306
Version 3.3.4	307
18.5 List of Compatible IP Cameras	308
18.5.1 List of Hikvision IP Cameras	308
18.5.2 List of Third-party IP Cameras	318
18.5.3 List of IP Cameras Connected to PoE by Long Network Cable (100 - 300 m)322

Chapter 1 Introduction

1.1 Front Panel

1.1.1 DS-9600NI Series

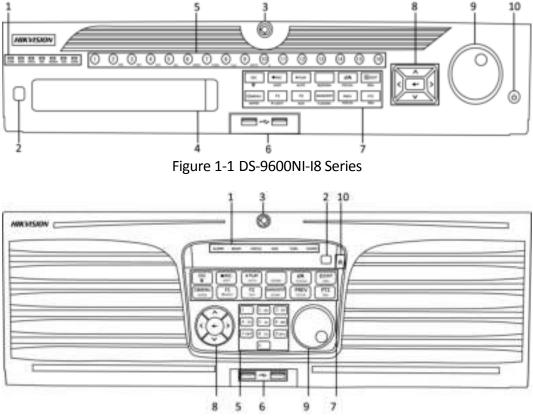


Figure 1-2 DS-9600NI-I16 Series

No.	Name		Function Description
	Status	ALARM	Turns red when a sensor alarm is detected.
		READY	Turns blue when the device is functioning properly.
			Turns blue when device is controlled by an IR remote.
		STATUS	Turns red when controlled by a keyboard and purple when IR remote and keyboard is used at the same time.
1		HDD	Flickers red when data is being read from or written to HDD.
	Indicators	MODEM	Reserved for future usage.
		Tx/Rx	Flickers blue when network connection is functioning properly.
			Turns blue when the device is in armed status; at this time, an alarm is enabled when an event is detected.
		GUARD	Turns off when the device is unarmed. The arm/disarm status can be changed by pressing and holding on the ESC button for more than 3 seconds in live view mode.
2	IR Receiver		Receiver for IR remote control.
3	Front Panel Lock		Locks or unlocks the panel by the key.
4	DVD-R/W		Slot for DVD-R/W disk.
	Alphanumeric Buttons		Switches to the corresponding channel in live view or PTZ control mode.
			Inputs numbers and characters in edit mode.
5			Switches between different channels in playback mode.
			Turns blue when the corresponding channel is recording; turns red when the channel is in network transmission status; turns pink when the channel is recording and transmitting.


Table 1-1 Panel Description

No.	Name		Function Description
6	USB Interfaces		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
		ESC	Returns to the previous menu.
			Presses for arming/disarming the device in live view mode.
		REC/SHOT	Enters the Manual Record settings menu.
			Presses this button followed by a numeric button to call a PTZ preset in PTZ control settings.
			Turns audio on/off in the playback mode.
			Enters the playback mode.
		PLAY/AUTO	Automatically scans in the PTZ control menu.
	Composite Keys	ZOOM+	Zooms in the PTZ camera in the PTZ control setting.
		•	Adjusts focus in the PTZ Control menu.
7			Switches between input methods (upper and lower case alphabet, symbols and numeric input).
		EDIT/IRIS+	Edits text fields. When editing text fields, it also deletes the character in front of the cursor.
			Checks the checkbox in the checkbox fields.
			Adjusts the iris of the camera in PTZ control mode.
			Generates video clips for backup in playback mode.
			Enters/exits the folder of USB device and eSATA HDD.
		MAIN/SPOT/Z OOM-	Switches between main and spot output.
			Zooms out the image in PTZ control mode.
		F1/ LIGHT	Selects all items on the list when used in a list field.

No.	Name		Function Description
			Turns on/off PTZ light (if applicable) in PTZ control mode.
			Switches between play and reverse play in playback mode.
			Cycles through tab pages.
		F2/ AUX	Switches between channels in synchronous playback mode.
			Returns to the Main menu (after successful login).
		MENU/WIPER	Presses and holds the button for five seconds to turn off audible key beep.
			Starts wiper (if applicable) in PTZ control mode.
			Shows/hides the control interface in playback mode.
		PREV/FOCUS- PTZ/IRIS-	Switches between single screen and multi-screen mode.
			Adjusts the focus in conjunction with the A/FOCUS+ button in PTZ control mode.
			Enters the PTZ Control mode.
			Adjusts the iris of the PTZ camera in PTZ control mode.
			Navigates between different fields and items in menus.
			In the playback mode, use the Up and Down buttons to speed up and slow down recorded video. Use the Left and Right buttons to select the next and previous video files.
8	Control Buttons		Cycles through channels in live view mode.
			Controls the movement of the PTZ camera in PTZ control mode.
			Confirms selection in any of the menu modes.
			Checks the checkbox fields.
			Plays or pauses the video playing in playback

No.	Name		Function Description
			mode.
			Advances the video by a single frame in single-frame playback mode.
			Stops/starts auto switch in auto-switch mode.
			Moves the active selection up and down in a menu.
0	JOG SHUTTLE Control		Cycles through different channels in live view mode.
9			Jumps 30s forward/backward in video files in the playback mode.
			Controls the movement of the PTZ camera in PTZ control mode.
10	POWER ON/	/OFF	Long press the button for more than 3 seconds to turn on/off the NVR.

1.1.2 DS-8600NI-I8 Series

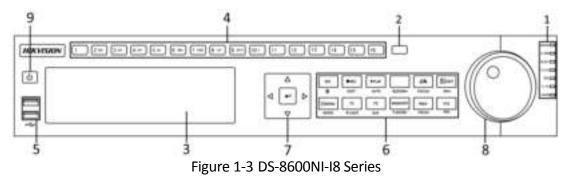

No.	Name		Function Description
		ALARM	Turns red when a sensor alarm is detected.
		READY	Turs blue when the device is functioning properly.
			Turns blue when device is controlled by an IR remote.
		STATUS	Turns red when controlled by a keyboard and purple when IR remote and keyboard is used at the same time.
1	Status	HDD	Flickers red when data is being read from or written to HDD.
	Indicators	MODEM	Reserved for future usage.
		Tx/Rx	Flickers blue when network connection is functioning properly.
			Turns blue when the device is in armed status; at this time, an alarm is enabled when an event is detected.
		GUARD	Turns off when the device is unarmed. The arm/disarm status can be changed by pressing and holding on the ESC button for more than 3 seconds in live view mode.
2	IR Receiver		Receiver for IR remote
3	DVD-R/W		Slot for DVD-R/W.
			Switches to the corresponding channel in live view or PTZ control mode.
			Inputs numbers and characters in edit mode.
4	Alphanumeric Buttons		Switches between different channels in playback mode.
			Turns blue when the corresponding channel is recording; turns red when the channel is in network transmission status; turns pink when the channel is recording and transmitting.
5	USB Interfaces		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk

Table 1-2 Description of Control Panel Buttons


No.	Name		Function Description
			Drive (HDD).
			Returns to the previous menu.
		ESC	Presses for arming/disarming the device in live view mode.
			Enters the Manual Record settings menu.
		REC/SHOT	Presses this button followed by a numeric button to call a PTZ preset in PTZ control settings.
			Turns audio on/off in the playback mode.
			Enters the playback mode.
		PLAY/AUTO	Automatically scans in the PTZ control menu.
		ZOOM+	Zooms in the PTZ camera in the PTZ control setting.
			Adjusts focus in the PTZ Control menu.
	Composite Keys	A/FOCUS+	Switches between input methods (upper and lower case alphabet, symbols and numeric input).
6		EDIT/IRIS+	Edits text fields. When editing text fields, it also deletes the character in front of the cursor.
			Checks the checkbox in the checkbox fields.
			Adjusts the iris of the camera in PTZ control mode.
			Generates video clips for backup in playback mode.
			Enters/exits the folder of USB device and eSATA HDD.
		MAIN/SPOT/ZO OM-	Switches between main and spot output.
			Zooms out the image in PTZ control mode.
		F1/ LIGHT	Selects all items on the list when used in a list field.
			Turns on/off PTZ light (if applicable) in PTZ control mode.
			Switches between play and reverse play in


No.	Name		Function Description
			playback mode.
		F2/ AUX	Cycles through tab pages.
			Switches between channels in synchronous playback mode.
			Returns to the Main menu (after successful login).
		MENU/WIPER	Presses and holds the button for five seconds to turn off audible key beep.
			Starts wiper (if applicable) in PTZ control mode.
			Shows/hides the control interface in playback mode.
		PREV/FOCUS-	Switches between single screen and multi-screen mode.
			Adjusts the focus in conjunction with the A/FOCUS+ button in PTZ control mode.
		PTZ/IRIS-	Enters the PTZ Control mode.
			Adjusts the iris of the PTZ camera in PTZ control mode.
		DIRECTION	Navigates between different fields and items in menus.
			In the playback mode, use the Up and Down buttons to speed up and slow down recorded video. Use the Left and Right buttons to select the next and previous video files.
			Cycles through channels in live view mode.
7	Control Buttons		Controls the movement of the PTZ camera in PTZ control mode.
		ENTER	Confirms selection in any of the menu modes.
			Checks the checkbox fields.
			Plays or pauses the video playing in playback mode.
			Advances the video by a single frame in single-frame playback mode.

No.	Name		Function Description
			Stops/starts auto switch in auto-switch mode.
	JOG SHUTTLE Control		Moves the active selection up and down in a menu.
0			Cycles through different channels in live view mode.
8			Jumps 30s forward/backward in video files in the playback mode.
			Controls the movement of the PTZ camera in PTZ control mode.
9	POWER ON/OFF		Power on/off switch.

1.1.3 DS-8600NI-K8 and DS-7700NI Series

 7

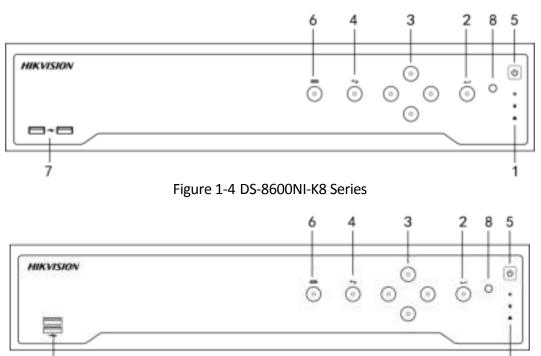

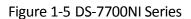

1

No.	Name		Function Description
		POWER	Turns green when NVR is powered up.
1	Status	HDD	Blinks red when HDD is reading/writing.
	Indicators	Tx/Rx	Blinks green when network connection is functioning normally.
			The Enter button is used to confirm selection in menu mode; or used to check checkbox fields and ON/OFF switch.
			In playback mode, it can be used to play or pause the video.
2	ENTER		In single-frame play mode, pressing the Enter button will play the video by a single frame.
			In auto sequence view mode, the buttons can be used to pause or resume auto sequence.
			The Enter button is used to confirm selection in menu mode; or used to check checkbox fields and ON/OFF switch.
	3 DIRECTION		In menu mode, the direction buttons are used to navigate between different fields and items and select setting parameters.
3			In playback mode, the Up and Down buttons are used to speed up and slow down record playing, and the Left and Right buttons are used to move the recording 30s forwards or backwards.
			In the image setting interface, the up and down button can adjust the level bar of the image parameters.
			In live view mode, these buttons can be used to switch channels.
4	Back		Back to the previous menu.
5	POWER ON/OFF		Power on/off switch.
6	MENU		Access the main menu interface.
7	USB Interface		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).

Table 1-3 Panel Description

1.1.4 DS-7600NI Series



Figure 1-6 DS-7600NI Series

No.	Name	Connections	
1	POWER	Turns green when NVR is powered up.	
2	HDD	Flickers red when data is being read from or written to HDD.	
3	Tx/Rx	Flickers blue when network connection is functioning properly.	
4	USB Interface	Universal Serial Bus (USB) port for additional devices such as USB mouse and USB Hard Disk Drive (HDD).	

1.2 IR Remote Control Operations

The NVR may also be controlled with the included IR remote control, shown in Figure 1-7.

Batteries (2×AAA) must be installed before operation.

The IR Remote is set at the factory to control the NVR (using default Device ID# 255) without any additional steps. Device ID# 255 is the default universal device identification number shared by the NVRs. You may also pair an IR Remote to a specific NVR by changing the Device ID#, as follows:

Pairing (Enabling) the IR Remote to a Specific NVR (optional)

You can pair an IR Remote to a specific Hikvision NVR by creating a user-defined Device ID#. This feature is useful when using multiple IR Remotes and NVRs.

On the NVR:

Step 1 Go to General > More Settings.

Step 2 Type a number (255 digits maximum) into the Device No. field.

Step 3 On the IR Remote:

Step 4 Press the DEV button.

Step 5 Use the Number buttons to enter the Device ID# that was entered into the NVR.

Step 6 Press Enter button to accept the new Device ID#.

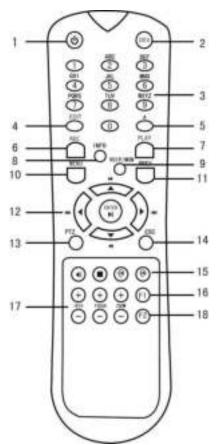


Figure 1-7 Remote Control

Unpairing (Disabling) an IR Remote from a NVR

To unpair an IR Remote from a NVR so that the unit cannot control any NVR functions, proceed as follows:

Press the DEV key on the IR Remote. Any existing Device ID# will be erased from the unit's memory and it will no longer function with the NVR.



(Re)-enabling the IR Remote requires pairing to a NVR. See "Pairing the IR Remote to a Specific NVR (optional)," above.

The keys on the remote control closely resemble the ones on the front panel. See the table 1.4.

No	Name	Table 1-5 IR Remote Functions Function Description		
1 40.	i vanic	·		
		To Turn Power On:		
		- If User Has Not Changed the Default NVR Device ID# (255):		
		1. Press Power On/Off button (1).		
		 If User Has Changed the NVR Device ID#: 		
		1. Press DEV button.		
		2. Press Number buttons to enter user-defined Device ID#.		
		3. Press Enter button.		
		4. Press Power button to start device.		
		To Turn NVR Off:		
		- If User Is Logged On:		
		1. Hold Power On/Off button (1) down for five seconds to display the "Yes/No" verification prompt.		
		2. Use Up/Down Arrow buttons (12) to highlight desired selection.		
1	POWER ON/OFF	3. Press Enter button (12) to accept selection.		
1		- If User Is <i>Not</i> Logged On:		
		 Hold Power On/Off button (1) down for five seconds to display the user name/password prompt. 		
		2. Press the Enter button (12) to display the on-screen keyboard.		
		3. Input the user name.		
		4. Press the Enter button (12) to accept input and dismiss the on-screen keyboard.		
		5. Use the Down Arrow button (12) to move to the "Password" field.		
		 Input password (use on-screen keyboard or numeric buttons (3) for numbers). 		
		7. Press the Enter button (12) to accept input and dismiss the on-screen keyboard.		
		8. Press the OK button on the screen to accept input and display the Yes/No" verification prompt (use Up/Down Arrow buttons (12) to move between fields)		
		9. Press Enter button (12) to accept selection.		

Table 1-5 IR Remote Functions

		User name/password prompt depends on NVR is configuration. See "System Configuration" section.
2	DEV	Enable IR Remote: Press DEV button, enter NVR Device ID# with number keys, press Enter to pair unit with the NVR
		Disable IR Remote: Press DEV button to clear Device ID#; unit will no longer be paired with the NVR
3	Numerals	Switch to the corresponding channel in Live View or PTZ Control mode
		Input numbers in Edit mode
4	EDIT	Delete characters before cursor
4	EDIT	Check the checkbox and select the ON/OFF switch
		Adjust focus in the PTZ Control menu
5	A	Switch on-screen keyboards (upper and lower case alphabet, symbols, and numerals)
	REC	Enter Manual Record setting menu
6		Call a PTZ preset by using the numeric buttons in PTZ control settings
		Turn audio on/off in Playback mode
7	PLAY	Go to Playback mode
/	PLAT	Auto scan in the PTZ Control menu
8	INFO	Reserved
9	VOIP	Switches between main and spot output
		Zooms out the image in PTZ control mode
		Return to Main menu (after successful login)
10	MENU	N/A
		Show/hide full screen in Playback mode
12		Navigate between fields and menu items
	DIRECTION	Use Up/Down buttons to speed up/slow down recorded video, and Left/Right buttons to advance/rewind 30 secs in Playback mode
		Cycle through channels in Live View mode

		Control PTZ camera movement in PTZ control mode
		Confirm selection in any menu mode
		Checks checkbox
	ENTER	Play or pause video in Playback mode
		Advance video a single frame in single-frame Playback mode
		Stop/start auto switch in auto-switch mode
13	PTZ	Enter PTZ Control mode
1.4	ESC	Go back to previous screen
14		N/A
15	RESERVED	Reserved
		Select all items on a list
16	F1	N/A
		Switch between play and reverse play in Playback mode
17	PTZ Control Adjust PTZ camera iris, focus, and zoom	
10	F2	Cycle through tab pages
18	F2	Switch between channels in Synchronous Playback mode

Troubleshooting Remote Control:

Make sure you have installed batteries properly in the remote control. And you have to aim the remote control at the IR receiver in the front panel.

If there is no response after you press any button on the remote, follow the procedure below to troubleshoot.

- Step 1 Go to Menu > Settings > General > More Settings by operating the front control panel or the mouse.
- Step 2 Check and remember NVR ID#. The default ID# is 255. This ID# is valid for all the IR remote controls.
- Step 3 Press the DEV button on the remote control.
- Step 4 Enter the NVR ID# you set in step 2.
- Step 5 Press the ENTER button on the remote.

If the Status indicator on the front panel turns blue, the remote control is operating properly. If the Status indicator does not turn blue and there is still no response from the remote, please check the following:

- Batteries are installed correctly and the polarities of the batteries are not reversed.
- Batteries are fresh and not out of charge.
- IR receiver is not obstructed.
- No fluorescent lamp is used nearby

If the remote still can't function properly, please change a remote and try again, or contact the device provider.

1.3 USB Mouse Operation

A regular 3-button (Left/Right/Scroll-wheel) USB mouse can also be used with this NVR. To use a USB mouse:

Step 1 Plug USB mouse into one of the USB interfaces on the front panel of the NVR.

Step 2 The mouse should automatically be detected. If in a rare case that the mouse is not detected, the possible reason may be that the two devices are not compatible, please refer to the recommended the device list from your provider.

The operation of the mouse:

Name	Action	Description		
	Single-Click	Live view: Select channel and show the quick set menu. Menu: Select and enter.		
Left-Click	Double-Click	Live view: Switch between single-screen and multi-screen.		
	Click and Drag	PTZ control: pan, tilt and zoom. Video tampering, privacy mask and motion detection: Select target area. Digital zoom-in: Drag and select target area. Live view: Drag channel/time bar.		
Right-Click	Single-Click	Live view: Show menu. Menu: Exit current menu to upper level menu.		
Scroll-Wheel	Scrolling up	Live view: Previous screen. Menu: Previous item.		
	Scrolling down	Live view: Next screen. Menu: Next item.		

Table 1-6	Description	of the	Mouse	Control
	Description	or the	mouse	001101

1.4 Input Method Description



Figure 1-8 Soft Keyboard (1)

ABC	-	K I			
0	0	#+=		(X)	
7	8	9		1	0
4	5	6		-	1
1	2	3			

Figure 1-9 Soft Keyboard (2)

Description of the buttons on the soft keyboard:

Table 1-7 Description of the Soft Keyboard Icons
Tuble 17 Description of the Soft Reyboard reofis

Icon	Description	Icon	Description
0 9	Number	A Z	English letter
÷	Lowercase/Uppercase		Backspace
¹²³ / ABC	Switch the keyboard	l	Space
*	Positioning the cursor	l	Exit
#+=	Symbols		Reserved

1.5 Rear Panel

1.5.1 DS-9600NI and DS-8600NI Series

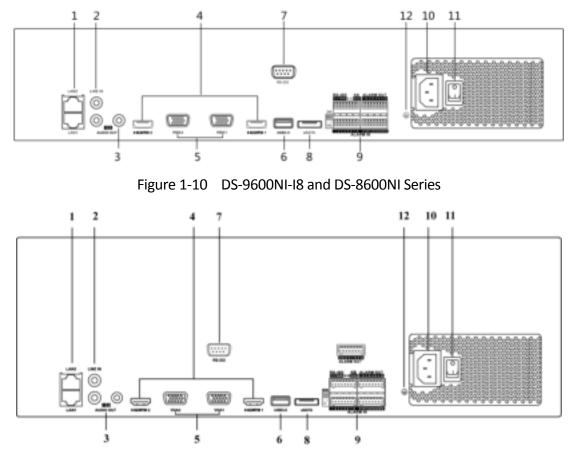


Figure 1-11 DS-9600NI-I16 Series

No.	Name	Description			
1	LAN1/LAN2 Interface	2 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interfaces provided.			
2	LINE IN	RCA connector for audio input.			
3	AUDIO OUT	2 RCA connectors for audio output.			
4	HDMI1/HDMI2	HDMI video output connector.			
5	VGA1/VGA2	DB9 connector for VGA output. Display local video output and menu.			
6	USB 3.0 interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).			
7	RS-232 Interface	Connector for RS-232 devices.			
8	eSATA	Connects external SATA HDD, CD/DVD-RM.			
9	Controller Port	D+, D- pin connects to Ta, Tb pin of controller. For cascading devices, the first NVR's D+, D- pin should be connected with the D+, D- pin of the next NVR.			
5	ALARM IN	Connector for alarm input.			
	ALARM OUT	Connector for alarm output.			
10	100 to 240 VAC	100 to 240 VAC power supply.			
11	Power Switch	Switch for turning on/off the device.			
12	GROUND	Ground (needs to be connected when NVR starts up).			

Table 1-8 Panel Description

1.5.2 DS-7600NI Series

DS-7600NI-I2 (/P) and DS-7600NI-K2 (/P)

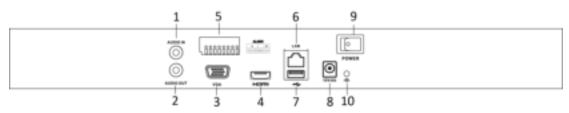 


Figure 1-12 DS-7600NI-I2 and DS-7600NI-K2 Series

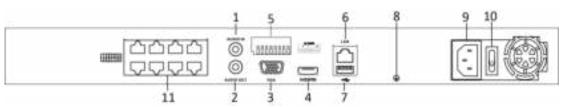 


Figure 1-13 DS-7600NI-I2/8P and DS-7600NI-K2/8P Series

The DS-7616NI-I2/16P and DS-7632NI-I2/16P provide 16 network Interfaces with PoE function. Table 1-9 Panel Description

No.	Name	Description
1	Audio In	RCA connector for audio input.
2	Audio Out	RCA connector for audio output.
3	VGA Interface	DB9 connector for VGA output. Display local video output and menu.
4	HDMI Interface	HDMI video output connector.
5	ALARM IN	Connector for alarm input.
	ALARM OUT	Connector for alarm output.
6	LAN Network Interface	1 10/100/1000 Mbps self-adaptive Ethernet interface
7	USB Interface	Universal Serial Bus (USB 3.0) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
8	Ground	Ground (needs to be connected when NVR starts up).
9	Power Supply	12 VDC power supply for DS-7600NI-I4 and DS-7600NI-K4, and 100 to 240 VAC for DS-7600NI-I4/P and DS-7600NI-K4/P.
10	Power Switch	Switch for turning on/off the device.
11	Network Interfaces with PoE function	Network interfaces for the cameras and to provide power over Ethernet.

DS-7600NI-K1 and DS-7600NI-K1/4P

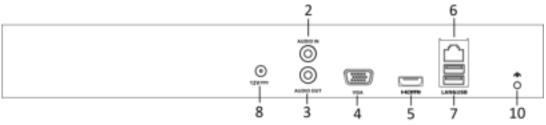


Figure 1-14 DS-7600NI-K1 Series

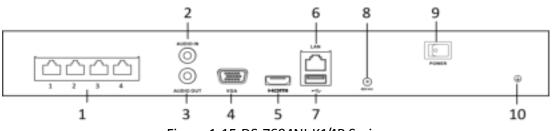


Figure 1-15 DS-7604NI-K1/4P Series

No.	Name	Description		
1	Network Interfaces with PoE function	Network interfaces for the cameras and to provide power over Ethernet.		
2	Audio In	RCA connector for audio input.		
3	Audio Out	RCA connector for audio output.		
4	VGA Interface	DB9 connector for VGA output. Display local video output and menu.		
5	HDMI Interface	HDMI video output connector.		
6	LAN Network Interface	 10/100/1000 Mbps self-adaptive Ethernet interface for DS-7600NI-K1; 100 Mbps full-duplex Ethernet interface for DS-7600NI-K1/4P. 		
7	USB Interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).		
9	Power Supply	12VDC power supply for DS-7600NI-K1 and 48 VDC power supply for DS-7600NI-K1/4P		

10	Ground	Ground (needs to be connected when NVR starts
		up).

1.5.3 DS-7700NI Series

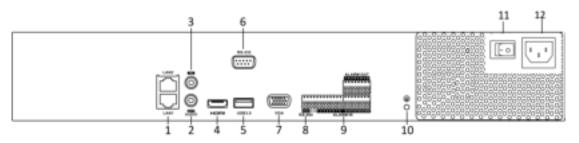


Figure 1-16 DS-7700NI-I4 and DS-7700NI-K4 Series

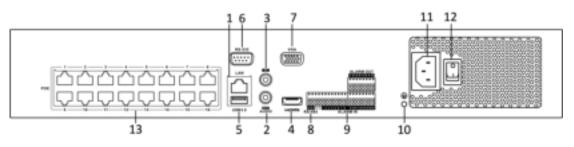


Figure 1-17 DS-7700NI-I4/16P and DS-7700NI-K4/16P Series

The DS-7708NI-I4/8P and DS-7708NI-K4/8P provides 8 network Interfaces with PoE function.

No.	Name	Description			
1	LAN Interface	1 network interface provided for DS-7700NI-I4/P and DS-7700NI-K4/P, and 2 network interfaces for DS-7700NI-I4 and DS-7700NI-K4.			
2	AUDIO OUT	RCA connector for audio output.			
3	LINE IN	RCA connector for audio input.			
4	HDMI	HDMI video output connector.			
5	USB 3.0 interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).			
6	RS-232 Interface	Connector for RS-232 devices.			

Table 1-11	Danal	Doccri	ntion
1 able 1-11	Paner	Descri	puon

7	VGA	DB9 connector for VGA output. Display local video output and menu.	
8	RS-485 Interface	Half-duplex connector for RS-485 devices.	
9	ALARM IN	Connector for alarm input.	
	ALARM OUT	Connector for alarm output.	
10	GROUND	Ground (needs to be connected when NVR start up).	
11	AC 100V ~ 240V	100V to 240VAC power supply.	
12	Power Switch	Switch for turning on/off the device.	
13	Network Interfaces with PoE function (supported by DS-7700NI-I4/P and DS-7700NI-K4/P)	Network interfaces for the cameras and to provide power over Ethernet.	

Chapter 2 Getting Started

2.1 Device Startup and Activation

2.1.1 Starting Up and Shutting Down the NVR

Purpose:

Proper startup and shutdown procedures are crucial to expanding the life of the NVR.

Before you start:

Check that the voltage of the extra power supply is the same with the NVR's requirement, and the ground connection is working properly.

Starting up the NVR:

- Step 1 Check the power supply is plugged into an electrical outlet. It is HIGHLY recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device. The Power indicator LED on the front panel should be red, indicating the device gets the power supply.
- Step 2 Press the POWER button on the front panel. The Power indicator LED should turn blue indicating that the unit begins to start up.
- Step 3 After startup, the Power indicator LED remains blue. A splash screen with the status of the HDD appears on the monitor. The row of icons at the bottom of the screen shows the HDD status. 'X' means that the HDD is not installed or cannot be detected.

Shutting down the NVR

Steps:

There are two proper ways to shut down the NVR.

• OPTION 1: Standard shutdown

Step 1 Enter the Shutdown menu.

Menu > Shutdown



Figure 2-1 Shutdown Menu

Step 2 Click the Shutdown button.

Step 3 Click the **Yes** button.

• OPTION 2: By operating the front panel

Step 1 Press and hold the POWER button on the front panel for 3 seconds.

Step 2 Enter the administrator's username and password in the dialog box for authentication.

Step 3 Click the **Yes** button.

Do not press the POWER button again when the system is shutting down.

Rebooting the NVR

In the Shutdown menu, you can also reboot the NVR.

Step 1 Enter the Shutdown menu by clicking Menu > Shutdown.

Step 2 Click the Logout button to lock the NVR or the Reboot button to reboot the NVR.

2.1.2 Activating Your Device

Purpose:

For the first-time access, you need to activate the device by setting an admin password. No operation is allowed before activation. You can also activate the device via Web Browser, SADP or Client Software.

Step 1 Input the same password in the text field of **Create New Password** and **Confirm New Password**.



Figure 2-2 Settings Admin Password

We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 2 Click **OK** to save the password and activate the device.

Step 3 When the device is activated, the system pops up the message box to remind you to remember the password. And you can click **Yes** to continue to export the GUID file for the future password resetting.



Figure 2-3 Export GUID File Remind

Step 4 Insert the U flash disk to your device, and export the GUID file to the U flash disk in the Reset Password interface. Please refer to Chapter2.1.5 Resetting Your Password for the instructions of password resetting.

	Reset P.	assword		
Device Name US	8 Flash Disk 1-1		- Re	thest -
Name	Size Type	Edit Date	Oele	e Play
e printace	Folder	09-19-2016 18:53:56		
 7.bmp 	10.55MB File	09-18-2016 17:53:08		
GUID_528996182	1298 File	05-22-2016 13:58:25		
Pres Space	7373 99548			
		New Folder Export	_	and the second

Figure 2-4 Export GUID File



Please keep your GUID file properly for future password resetting.

If Admin's password is modified, the following menu pops up. Optionally, click the Yes button to duplicate the password to IP cameras that are connected with default protocol.



2.1.3 Using the Unlock Pattern for Login

For the Admin user, you can configure the unlock pattern for device login.

Configuring the Unlock Pattern

Step 1 After the device is activated, you can enter the following interface to configure the device unlock pattern.



Figure 2-6 Set Unlock Pattern

Step 2 Use the mouse to draw a pattern among the 9 dots on the screen. Release the mouse when the pattern is done.



Figure 2-7 Draw the Pattern

Connect at least 4 dots to draw the pattern.

Each dot can be connected for once only.

Step 3 Draw the same pattern again to confirm it. When the two patterns match, the pattern is configured successfully.



Figure 2-8 Confirm the Pattern



If the two patterns are different, you must set the pattern again.

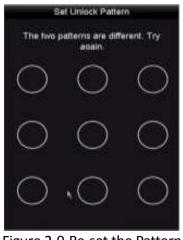


Figure 2-9 Re-set the Pattern

Logging in via Unlock Pattern

- Only the *admin* user has the permission to unlock the device.
- Please configure the pattern first before unlocking. Please refer to Configuring the Unlock Pattern
- Step 1 Right click the mouse on the screen and select the menu to enter the interface as shown in Figure 2.8.



Figure 2-10 Draw the Unlock Pattern

Step 2 Draw the pre-defined pattern to unlock to enter the menu operation.

- If you have forgotten your pattern, you can select the **Forget My Pattern** or **Switch User** option to enter the normal login dialog box.
- When the pattern you draw is different from the pattern you have configured, you should try again.
- If you have drawn the wrong pattern for more than 5 times, the system will switch to the normal login mode automatically.



Figure 2-11 Normal Login Dialog Box

2.1.4 Login and Logout

User Login

Purpose:

If NVR has logged out, you must login the device before operating the menu and other functions.

Step 1 Select the User Name in the dropdown list.



Figure 2-12 Login Interface

Step 2 Input password.

Step 3 Click **OK** to log in.



When you forget the password of the admin, you can click **Forget Password** to reset the password. Please refer to Chapter 2.1.5 Resetting Your Password for details.

In the Login dialog box, if you enter the wrong password 7 times, the current user account will be locked for 60 seconds.

User Logout

Purpose:

After logging out, the monitor turns to the live view mode and if you want to perform any operations, you need to enter user name and password log in again.

Step 1 Enter the Shutdown menu.

Menu > Shutdown



Figure 2-13 Logout

Step 2 Click Logout.

After you have logged out the system, menu operation on the screen is invalid. It is required to input a user name and password to unlock the system.

2.1.5 Resetting Your Password

When you forget the password of the admin, you can reset the password by importing the GUID file. The GUID file must be exported and saved in the local U flash disk after you have activated the device (refer to Chapter 2.1.2 Activating Your Device).

Step 1 On the user login interface, click **Forget Password** to enter the Reset Password interface.

Please insert the U flash disk stored with the GUID file to the NVR before resetting password.

		Rapet P	assword			
Device Name	USB Fiash Disk 1-1				- 86	1410
Name	Sav	туре	Edil Date		Detet	e Piny
- printeer		Folder	09-16-2016-1	8:53:55		-
7.bmp	10.55MB	File	09-18-2016 1	7:53:09		٠
Pres Space	7378.42M	0				

Figure 2-14 Reset Password

Step 2 Select the GUID file from the U flash disk and click **Import** to import the file to the device.

If you have imported the wrong GUIE file for 7 times, you will be not allowed to reset the password for 30 minutes.

- Step 3 After the GUID file is successfully imported, enter the reset password interface to set the new admin password. Refer to Chapter 2.1.2 Activating Your Device for details.
- Step 4 Click OK to set the new password. You can export the new GUID file to the U flash disk for future password resetting.

When the new password is set, the original GUID file will be invalid. The new GUID file should be exported for future password resetting. You can also enter the User>User Management interface to edit the admin user and export the GUID file.

2.2 Using Wizard for Basic Configuration

By default, the Setup Wizard starts once the NVR has loaded, as shown in Figure 2-15.



Figure 2-15 Start Wizard Interface

Operating the Setup Wizard:

- Step 1 The Setup Wizard can walk you through some important settings of the NVR. If you don't want to use the Setup Wizard at that moment, click the Cancel button. You can also choose to use the Setup Wizard next time by leaving the "Start wizard when the device starts?" checkbox checked.
- Step 2 Click **Next** button to enter the date and time settings window, as shown in Figure 2-16.

	Witzerd	
Time Jame	(GMT+00.00) Beijing, Ununigi, Singapore	e
Date Format	MM-0D-YYYY	
System Deta	05-09-2013	
Bysleen Tirre	15:22:59	•
	Previous Next	6đ

Figure 2-16 Date and Time Settings

Step 3 After the time settings, click **Next** button which takes you back to the Network Setup Wizard window, as shown in the following figure.

1	Witnesd		
Nic Type	IDM/IDDM/IDDM/ SHE	adaptive	
Enable DHCP			
Post Autorea			
Invit Dutined Mean	265.268.288.0		
PVI Default Galaviey	10 .11 .1234		
Ensee DN2 DHCP	61		
Preferred DHS Servi-	10.1.7.88		
Ademate SND Server	10.1.7.77		
	Previous	Net	Ev#

Figure 2-17 Network Settings

Two self-adaptive 10M/100M/1000M network interfaces provided for DS-9600NI, DS-8600NI, DS-7700NI-I4 and DS-7700NI-K4, and two working modes are configurable: multi-address and network fault tolerance. And one self-adaptive 10M/100M/1000M network interface for DS-7600NI, DS-7700NI-I4/P and DS-7700NI-K4/P.

Step 4 Click **Next** button after you configured the basic network parameters. Enter the **Hik-Connect** interface to configure the parameters. Please refer to Chapter 12.2.1 Configuring Hik-Connect12.2.1 for detailed instructions.

	Wasand		
Enable	8		
Access Type	Hik-Connect		
Server Address	dev.tille-conviect.com	Custom	
Enable Stream Encr			
Vertication Code			
Status	Offline(0x1003)		
	Previous	Next	Exer.

Figure 2-18 Hik-Connect Settings

Step 5 Click **Next** button after you configured the basic network parameters. Then you will enter the **Advanced Network Parameter** interface. You can enable UPnP, DDNS and set other ports according to your need.

	Million 1		
Barver Post	6000		
HITTP Past	90		
PET DP Plant	554		
Enates LIPsy?			
Ennine DDHS			
DONG Type Server Address Device Donart He	Dyrdbes		
Diatus Local History Patronomi	DONG is disabled.		
	Previous	Next	Ext

Figure 2-19 Advanced Network Parameters

Step 6 Click **Next** button after you configured the network parameters, which takes you to the RAID configuration window.

The RAID is supported by DS-9600NI-I8 and DS-9600NI-I16 series NVR only.



Figure 2-20 Array Management

Step 7 Click Next button to enter the Array Management window.



Figure 2-21 Array Management

Step 8 Click **Next** button after you configured the network parameters, which takes you to the **HDD Management** window, shown in Figure 2-22.

			iznero)		
	Capacity	Status	Property	Type	Free Space
12	465,7668	Uninitialized	RW	Local	OMB
7	931.5108	Uninitialized	RW	Local	OMB
10	931.51GB	Uninitialized	RAW	Local	ONE
					Init

Figure 2-22 HDD Management

- Step 9 To initialize the HDD, click the **Init** button. Initialization removes all the data saved in the HDD.
- Step 10 Click Next button. You enter the Adding IP Camera interface.
- Step 11 Click **Search** to search the online IP Camera and the **Security** status shows whether it is active or inactive. Before adding the camera, make sure the IP camera to be added is in active status.

If the camera is in inactive status, you can click the inactive icon of the camera to set the password to activate it. You can also select multiple cameras from the list and click the **One-touch Activate** to activate the cameras in batch.

Click the Add to add the camera.

No.	IP Address	Security	Amount of	Device M.	Protocol A
	10.6.39.6	C Active	1	DS-2DFS.	HIKVISH
N 2	10.6.38.13	 Active 	1	DS-2CD4	HKVISK
83	10.6.38.88	Active:	1	DS-2DF5.	HIKVISK
84	10.6.38.202	Active	1	CS-C2-10	HIKVISK
816	10.6.30.203	e Active	di.	DS-2CD7	HKVISK
10 2	10.6.38,204	S Active	1	DS-2CD5	HKVISK ~
		One-tou	ich A	Add	Search
		■ Enab	le H.265 (Fo	r Initial Acce	88)
		Prev		Next	Ext

Figure 2-23 Search for IP Cameras

When you check the checkbox of **Enable H.265**, the NVR can automatically switch to the H.265 stream of IP camera (which supports H.265 video format) for the initial access.

Step 12 Click Next button. Configure the recording for the added IP Cameras.



Figure 2-24 Record Settings

Step 13 Click **OK** to complete the startup Setup Wizard.

2.3 Adding and Connecting the IP Cameras

2.3.1 Activating the IP Camera

Purpose:

Before adding the camera, make sure the IP camera to be added is in active status.

Step 1 Select the Add IP Camera option from the right-click menu in live view mode or click Menu> Camera> Camera to enter the IP camera management interface.

For the IP camera detected online in the same network segment, the **Password** status shows whether it is active or inactive.

Cam	Add/De.	Status	Security	IP Can	iera A.I.	Edit	Upgra	Camera Name
101		0	Strong Pas	10,16	1.260	1		chan2
02	-	۰	Strong Pas	10.16	1102	1	*	Camera 01
03	5 - 1	-	Weak Pass	10.21	133.118	10	-	Camera 01
04	3 7 5	*	N/A	192.16	8,254.5	10	-	PCamera 04
05	0.75	-	N/A	192.16	e.254.e		-	IPCamera 05
1 06		-	N/A	192.16	0.254.7		-	IPCamera 06
07	1. -	*	Risk Pass	192.16	8.254.8	10	-	IPCamera 07
Da	1.73	*	N6A	192.16	8.254.9	10	÷	IPCamera 08
•			i .					ź
Ref	esh O	ne-touch /	Upgrad		Delete		One-tour	th A., Custom Addi
Enable	H.265 (Par	Initial Acc	4935					

Figure 2-25 IP Camera Management Interface

Step 2 Click the inactive icon of the camera to enter the following interface to activate it. You can also select multiple cameras from the list and click the **One-touch Activate** to activate the cameras in batch.

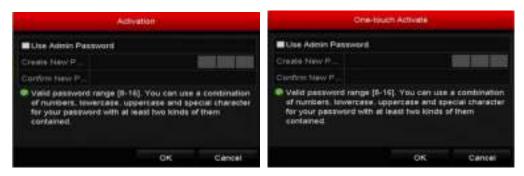


Figure 2-26 Activate the Camera

Step 3 Set the password of the camera to activate it.

Use Admin Password: when you check the checkbox, the camera (s) will be configured with the same admin password of the operating NVR.



Figure 2-27 Set New Password

Create New Password: If the admin password is not used, you must create the new password for the camera and confirm it.



<u>Strong Password recommended</u>–We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 4 Click **OK** to finish the acitavting of the IP camera. And the security status of camera will be changed to **Active**.

2.3.2 Adding the Online IP Cameras

Purpose:

The main function of the NVR is to connect the network cameras and record the video got from it. So before you can get a live view or record of the video, you should add the network cameras to the connection list of the device.

Before you start:

Ensure the network connection is valid and correct. For detailed checking and configuring of the network, please see *Chapter Checking Network Traffic* and *Chapter Configuring Network Detection*.

Adding the IP Cameras

• OPTION 1:

Step 1 Click to select an idle window in the live view mode.

Step 2 Click the sicon in the center of the windw to pop up the adding IP camera interface.



Figure 2-28 Icon of Adding IP Camera

Step 3 Select the detected IP camera and click the **Add** button to add it directly, and you can click the **Search** button to refresh the online IP camera manually.

		Add IP.	Camera		
No.	IP Address	Amount of	Device Ty	Protocol	Managen
10.	10.16.1.62	1.957	PC	HIKUTSION	8000
2	10.16.1.199	t	IP Dome	HIKVISION	8000
¢					5
IP Car	nera Address	10.16.1.62			
Protoc	tal	HIKVISION			
Maria	gement Port	0000			
Chanr	nel Port	1			
Transf	fer Protocol	Auto			
User.7	Martini	admin			
Passv	word				
		See	rch	Add	Cancel

Figure 2-29 Quick Adding IP Camera Interface

Or you can choose to custom add the IP camera by editing the parameters in the corresponding textfiled and then click the **Add** button to add it.

• OPTION 2:

Step 1 Select the **Add IP Camera** option from the right-click menu in live view mode or click Menu> Camera> Camera to enter the IP camera management interface.

Cam	Add/De	Status	Security	IP Camera A	Edit	Upgra	Camera Name
001		0	Strong Pas	10.16.1.250	1	12	chan2
D2	T	۰	Strong Pas.	10.16.1.102	10		Camera 01
D3	-	*	Weak Pass.	10.21.133.118	12	-	Camera 01
D 4	-		N/A	192.168.254.5	12	-	IPCamera 04
D5	÷	-	N/A	192.168.254.6	12	-	IPCamera 05
D6	÷	-	N/A	192.160.254,7	12	-	IPCamera 06
07		-	Risk Pass	192.168.254.8	12	-	IPCamera 07
DB	-		N/A	192,168,254.9	12	-	IPCamera 08
•			1				3
Ftefr	esh O	ne-touch	A Upgrad	le Delete	-	One-loui	ch A Custom Addi
Enable F	4.265 (For	Initial Ac	coss)	2			

Figure 2-30 Adding IP Camera Interface

- Step 2 The online cameras with same network segment will be detected and displayed in the camera list.
- Step 3 Select the IP camera from the list and click the Source button to add the camera. Or you can click the **One-touch Adding** button to add all cameras (with the same login password) from the list.



Make sure the camera to add has already been activated.

Step 4 (For the encoders with multiple channels only) check the **Channel Port** checkbox in the pop-up window, as shown in the following figure, and click **OK** to add multiple channels.



Figure 2-31 Selecting Multiple Channels

• OPTION 3:

Step 1 On the IP Camera Management interface, click the **Custom Adding** button to pop up the Add IP Camera (Custom) interface.

		Add I	P Camera (Cus	tom)	
No.	IP Address	Ar	nount of Devi	e M Protocol	Managen
4		Ĩ.			3
IP Can	nera Address	10,10,1	at l		
Protoc	ol	ONVIF			*
Manag	gement Port	80			
Transf	er Protocol	Auto			
Userb	lame	admin			
Passw	wrd	*****			
Cont	linue to Add				
	Prot	ocol	Search	Add	Back

Figure 2-32 Custom Adding IP Camera Interface

Step 2 You can edit the IP address, protocol, management port, and other information of the IP camera to be added.

If the IP camera to add has not been actiavated, you can activate it from the IP camera list on the camera management interface.

Step 3 (Optional) Check the checkbox of **Continue to Add** to add other IP cameras.

Step 4 Click Add to add the camera. The successfully added cameras are listed in the interface.

Refer to the following table for the description of the icons

Icon	Explanation	Icon	Explanation
1	Edit basic parameters of the camera	۲	Add the detected IP camera.
	The camera is disconnected; you can click the icon to get the exception information of camera.	×	Delete the IP camera
۲	Play the live video of the connected camera.	83	Advanced settings of the camera.
會	Upgrade the connected IP camera.	Security	Show the security status of the camera to be active/inactive or the password strength (strong/medium/weak/risk)

Table 2-1 Description of Icons

For the added IP cameras, the Security status shows the security level of the password of camera: strong password, weak password and risk password.

Cam	Add/De	Status	Security	IP Camera A	Edit	Upgrade	Camera Name	1
D1		۰	Weak Pass	10,11.36.38	12	*	Camera 01	
D2		4	Strong Pas	10.16.1.250	12		IPdame	
D3	()	A	N/A	192.168.254.4	12	-	IPCamera 03	

Figure 2-33 Security Level of IP Camera's Password

Enabling the Password of IP Camera Visible

For the admin login user account, you can check the checkbox of **Show Password of IP Camera** to enable the show the passwords of the successfully added IP cameras in the list.

You must enter the admin password to confirm permission.

D1	Add/D		atus	and the second	ung Pas	ID 48	to transfer to mail	12	- Charles	Etimo	era Name
4	_	_	6		Permiss				-		era 01
					· · · · · · · · · · · · · · · · · · ·	i cini				Cam	era 01
	ser Nan	18	adn	nim						IPCa	mera 04
d 12	assword	1	****	****						IPCa	mera 05
d										IPCa	mera 06
4										IPCa	mera 07
4						ж	C	nicel		IPC	mera 08
		ī.		1							
Ref	resh	One	touch	A.	Upgrad	te.	Delet	ē	One-tour	n A	Custom Add
uttie	H 265 (Flar Ind	lini Ac			2					

Figure 2-34 List of Added IP Cameras

Enabling the H.265 Stream Access

You can check the checkbox of **Enable H.265**, the NVR can automatically switch to the H.265 stream of IP camera (which supports H.265 video format) for the initial access.

2.3.3 Editing the Connected IP Cameras and Configuring Customized Protocols

After the adding of the IP cameras, the basic information of the camera lists in the page, you can configure the basic setting of the IP cameras.

Step 1 Click the 📝 icon to edit the parameters; you can edit the IP address, protocol and other parameters.

	Edit IP Camera		
IP Camera No.	D2		
Adding Method	Manual		
IP Camera Address	10.16.1.102		
Protocol	ONVIF		
Management Port	80		
Channel Port	1)		
Transfer Protocol	Auto.		
User Name	admin		
Password			
	Protocol	ок	Cancel

Figure 2-35 Edit the Parameters

Channel Port: If the connected device is an encoding device with multiple channels, you can choose the channel to connect by selecting the channel port No. in the dropdown list.

Step 2 Click **OK** to save the settings and exit the editing interface.

• To edit advanced parameters:

Step 1 Drag the horizontal scroll bar to the right side and click the 📓 icon.

Advanced Settings				
Network	Password			
IP Camera	No.	D1		
IP Camera	Address	10.16.1.250		
Managem	ent Port	8000		
		Apply	ок	Cancel

Figure 2-36 Network Configuration of the Camera

Step 2 You can edit the network information and the password of the camera.

		Advanced Setting		
Network	Password			
IP Came	ira No.	D1		
Current	Pastword	******		
New Pa	ssword.			strung
Confirm				
lower	case, upperce	ge [8-16]. You can use a ise and special characte hem contained.		
		Apply	ок	Cancel

Figure 2-37 Password Configuration of the Camera

Step 3 Click **OK** to save the settings and exit the interface.

• Configuring the customized protocols

Purpose:

To connect the network cameras which are not configured with the standard protocols, you can configure the customized protocols for them.

Step 1 Click the **Protocol** button in the custom adding IP camera interface to enter the protocol management interface.

	Protocol Management	
Custom Protocol	Custom Protocol 1	
Protocol Name	ipc1	
Stream Type	Main Stream Substream	
Enable Substream		2
Туре	RTSP -	RTSP -
Transfer Protocol	Auto -	Auto -
Port	554	954
Path		
Path Example: [Type] //]P rtsp://192.168.0.1.554		
	Apply	OK Cancel

Figure 2-38 Protocol Management Interface

There are 16 customized protocols provided in the system, you can edit the protocol name; and choose whether to enable the sub-stream.

Step 2 Choose the protocol type of transmission and choose the transfer protocols.

Before customizing the protocol for the network camera, you have to contact the manufacturer of the network camera to consult the URL (uniform resource locator) for getting main stream and sub-stream.

The format of the URL is: [Type]://[IP Address of the network camera]:[Port]/[Path].

Example: rtsp://192.168.1.55:554/ch1/main/av_stream.

- Protocol Name: Edit the name for the custom protocol.
- Enable Substream: If the network camera does not support sub-stream or the sub-stream is not needed leave the checkbox empty.
- **Type:** The network camera adopting custom protocol must support getting stream through standard RTSP.
- Transfer Protocol: Select the transfer protocol for the custom protocol.
- **Port:** Set the port No. for the custom protocol.
- Path: Set the resource path for the custom protocol. E.g., ch1/main/av_stream.

The protocol type and the transfer protocols must be supported by the connected network camera.

After adding the customized protocols, you can see the protocol name is listed in the dropdown list, please refer to Figure 2-39.



Figure 2-39 Protocol Setting

Step 3 Choose the protocols you just added to validate the connection of the network camera.

2.3.4 Editing IP Cameras Connected to the PoE Interfaces

This chapter is only applicable for the following models: DS-7600NI-I2/P, DS-7700NI-I4/P, DS-7600NI-K2/P, DS-7700NI-K4/P and DS-7600NI-K1/4P series NVR.

The PoE interfaces enables the NVR system to pass electrical power safely, along with data, on Ethernet cabling to the connected network cameras.

Up to 4 network cameras can be connected to /4P models, 8 network cameras to /8P models, and 16 network cameras to /16P models. If you disable the PoE interface, you can also connect to the online network cameras. And the PoE interface supports the Plug-and-Play function.

Example:

For DS-7608NI-I2/8P, if you want to connect 6 network cameras via PoE interfaces and 2 online cameras, you must disable 2 PoE interfaces in the Edit IP Camera menu.

• To add Cameras for NVR supporting PoE function:

Before you start:

Connect the network cameras via the PoE interfaces.

Step 1 Enter the Camera Management interface.

DI Weak Pass 10.11.36.38 D2 Strong Pas... 10.16.1.250 HIK TD3 NIS HIN SEC 4 NIM 192 168 254 5 10 IPC amera 64 HIKY 105 N/A D6 NA D7 NIA HIKY 168.254.8 nesa OT De NIA HIK Activ 10.16.1.251 ъ Refresh One-louch A. Upgrade Delete One-louch A. Custom Add

Menu> Camera> IP Camera

Figure 2-40 List of Connected Cameras

The cameras connecting to the PoE interface cannot be deleted in this menu.

Step 2 Click the 📝 button, and select the Adding Method in the drop-down list.

• **Plug-and-Play:** It means that the camera is connected to the PoE interface, so in this case, the parameters of the camera can't be edited. The IP address of the camera can only be

edited in the Network Configuration interface, see *Chapter 11.1 Configuring General* Settings for detailed information.

	Edit IP Camera		
IP Camera No.	D4		
Adding Method	Plug-and-Play		
IP Camera Address	192.168.254.5		
Protocol	HIKVISION		
Management Port	8000		
Channel Port			
Transfer Protocol	Auto		
User Name	admin		
Password			
	Protocol	ок	Cancel

Figure 2-41 Edit IP Camera Interface - Plug-and-Play

• **Manual:** You can disable the PoE interface by selecting the manual while the current channel can be used as a normal channel and the parameters can also be edited.

Input the IP address, the user name and password of administrator manually, and click **OK** to add the IP camera.

P Camera No.	D4	
Adding Method	Manual	
P Camera Address	192.168.254.5	
Protocol	ONVIF	
Management Port	80	
Channel Port	1	
Transfer Protocol	Auto	
User Name	admin	
Password		

Figure 2-42 Edit IP Camera Interface - Manual

2.3.5 Configuring PoE Interface

When it requires long-distance PoE transmission (100 to 300 m), you can configure the PoE channel to the long network cable mode.

Step 1 Enter the PoE Configuration interface.

Menu> Camera> Camera>PoE Configuration

Step 2 Click the radio button of each POE channel to switch **m** and **m**. You can click the radio button of **POE Channel** to enable or disable the long network cable mode.

ON: Long-distance (100 - 300 meters) network transmissions via POE interface.

OFF: Short-distance (< 100 meters) network transmission via POE interface.



Figure 2-43 Configure PoE Interface

- The PoE is enabled with the short network cable mode (OFF) by default.
- The bandwidth of IP camera connected to the PoE via long network cable (100 300 meters) cannot exceed 6 MP.
- The allowed max. long network cable may be less than 300 meters depending on different IP camera models and cable materials.
- When the transmission distance reaches 100 to 250 meters, you must use the CAT5E or CAT6 network cable to connect with the PoE interface.
- When the transmission distance reaches 250 to 300 meters, you must use the CAT6 network cable to connect with the PoE interface.
- Refer to the Appendix 18.5.3 List of IP Cameras Connected to PoE by Long Network Cable (100 300 m) for the list of IP cameras.

You can check the connecting status and power information of POE channel on the interface.

Step 3 Click **Back** to finish the settings.

Chapter 3 Live View

3.1 Introduction of Live View

Live view shows you the video image getting from each camera in real time. The NVR automatically enters Live View mode when powered on. It is also at the very top of the menu hierarchy, thus pressing the ESC many times (depending on which menu you're on) brings you to the Live View mode.

Live View Icons

In the live view mode, there are icons at the upper-right of the screen for each channel, showing the status of the record and alarm in the channel, so that you can know whether the channel is recorded, or whether there are alarms occur as soon as possible.

Icons	Description
	Alarm (video loss, video tampering, motion detection, VCA and sensor alarm)
	Record (manual record, schedule record, motion detection, VCA and alarm triggered record)
	Alarm and Record
	Event/Exception (motion detection, VCA, sensor alarm or exception information, appears at the lower-left corner of the screen. Please refer to <i>Chapter 8.6 Setting Alarm Response Actions</i> for details.)

Table 3-1 Description of Live View Icons

3.2 Operations in Live View Mode

In live view mode, there are many functions provided. The functions are listed below.

- Single Screen: showing only one screen on the monitor.
- Multi-screen: showing multiple screens on the monitor simultaneously.
- **Auto-switch:** the screen is auto switched to the next one. And you must set the dwell time for each screen on the configuration menu before enabling the auto-switch.

Menu>Configuration>Live View>Dwell Time.

- Start Recording: continuous record and motion detection record are supported.
- **Output Mode:** select the output mode to Standard, Bright, Gentle or Vivid.
- Add IP Camera: the shortcut to the IP camera management interface.
- Playback: playback the recorded videos for current day.
- Aux Monitor: the NVR checks the connection of the output interfaces to define the main and auxiliary output interfaces. The priority level for the main and aux output is HDMI1/VGA1> HDMI2/VGA2 (for DS-9600NI-I8, DS-8600NI-I8 and DS-9600NI-I16) and HDMI > VGA (for DS-7600NI and DS-7700NI).

DS-9600NI-I8, DS-8600NI-I8 and DS-9600NI-I16: When the HDMI1, HDMI2, VGA1 and VGA2 are all connected, the HDMI1/VGA1 is used as main output and the HDMI2/VGA2 is used as the aux output.

DS-7600NI and DS-7700NI: When both the HDMI and VGA are connected, the HDMI is used as main output and the VGA is used as the aux output.

When the aux output is enabled, the main output cannot perform any operation, and you can do some basic operation on the live view mode for the Aux output.

3.2.1 Front Panel Operation on Live View

Table 3-2 Front Panel C	neration in Live View

Functions	Front Panel Operation
Show single screen	Press the corresponding Alphanumeric button. E.g. Press 2 to display only the screen for channel 2.
Show multi-screen	Press the PREV/FOCUS- button.
Manually switch screens	Next screen: right/down direction button. Previous screen: left/up direction button.
Auto-switch	Press Enter button.
Playback	Press Play button.
Switch between main and aux output	Press Main/Aux button.

3.2.2 Using the Mouse in Live View

Name	Description
Common Menu	Quick access to the sub-menus which you frequently visit.
Menu	Enter the main menu of the system by right clicking the mouse.
Single Screen	Switch to the single full screen by choosing channel number from the dropdown list.
Multi-screen	Adjust the screen layout by choosing from the dropdown list.
Previous Screen	Switch to the previous screen.
Next Screen	Switch to the next screen.
Start/Stop Auto-switch	Enable/disable the auto-switch of the screens.
Auto-switch Start continuous recording or motion detection recording all channels.	
Add IP Camera	Enter the IP Camera Management interface, and manage the cameras.
Playback	Enter the playback interface and start playing back the video of the selected channel immediately.

Table 3-3 Mouse Operation in Live View

PTZ	Enter the PTZ control interface.
Output Mode	Four modes of output supported, including Standard, Bright, Gentle and Vivid.
Aux Monitor	Switch to the auxiliary output mode and the operation for the main output is disabled.

- The *dwell time* of the live view configuration must be set before using **Start Auto-switch**.
- If you enter Aux monitor mode and the Aux monitor is not connected, the mouse operation is disabled; you need to switch back to the Main output with the MAIN/AUX button on the front panel or remote.
- If the corresponding camera supports intelligent function, the Reboot Intelligence option is included when right-clicking mouse on this camera.

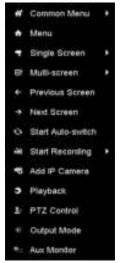


Figure 3-1 Right-click Menu

3.2.3 Using an Auxiliary Monitor

Certain features of the Live View are also available while in an Aux monitor. These features include:

- Single Screen: Switch to a full screen display of the selected camera. Camera can be selected from a dropdown list.
- Multi-screen: Switch between different display layout options. Layout options can be selected from a dropdown list.
- Next Screen: When displaying less than the maximum number of cameras in Live View, clicking this feature will switch to the next set of displays.
- Playback: Enter into Playback mode.
- PTZ Control: Enter PTZ Control mode.

• Main Monitor: Enter Main operation mode.

In the live view mode of the main output monitor, the menu operation is not available while Aux output mode is enabled.

3.2.4 Quick Setting Toolbar in Live View Mode

On the screen of each channel, there is a quick setting toolbar which shows when you single click the mouse in the corresponding screen.



The fisheye expansion view feature is supported by the DS-7600/7700/8600/9600-I (/P) series NVR only.

Icon	Description	Icon	Description	Icon	Description
0,00	Enable/Disable Manual Record		Instant Playback	🔊 _/ 🐠	Mute/Audio on
0	Capture		PTZ Control	P,	Digital Zoom
	Image Settings	2	Face Detection	Ś	Live View Strategy
©,	Information	Ŷ	Fisheye Expansion	B (3D Positioning
*#	Main/Sub-Stre am	Ņ	Close		

Table 3-4 Description of Quick Setting Toolbar Icons

Instant Playback only shows the record in last five minutes. If no record is found, it means there is no record during the last five minutes.

3D Positioning (for I series NVR) is for zooming in/out the specific area of live image.

Use the left key of mouse to click on the desired position in the video image and drag a rectangle area in the lower right direction, the camera will move the position to the center and enable the rectangle area to zoom in. Use the left key of mouse to drag a rectangle area in the upper left direction to move the position to the center and enable the rectangle area to zoom out.

Digital Zoom is for zooming in the live image. You can zoom in the image to different proportions (1 to16X) by moving the sliding bar from to to to the zoom also scroll the mouse wheel to control the zoom in/out.



Figure 3-3 Digital Zoom

Image Settings icon can be selected to enter the Image Settings menu.

You can set the image parameters like brightness, contrast, saturation and hue according to the actual demand.

	image Setti	ngs	×
Monte	Custom		
		50	
o —		50	
o —		50	
		0	ĸ

Figure 3-4 Image Settings- Customize

Live View Strategy can be selected to set strategy, including Real-time, Balanced, Fluency.



Figure 3-5 Live View Strategy

Face detection function can be used to detect the human faces in live view mode and save in HDD. When there are human faces with the specified size detected in the front of the camera, the device will capture the human face and save in HDD.

Move the mouse onto the icon to show the real-time stream information, including the frame rate, bitrate, resolution and stream type.



Figure 3-6 Information

3.2.5 Fisheye Expansion View

The device supports the fisheye expansion for the connected fisheye camera in live view or playback mode.

Click the **to** enter the fisheye expansion mode.



The fisheye expansion view feature is supported by the DS-7600/7700/8600/9600-I (/P) series NVR only.

	Tuble 9	S I ISINEYE DISplay Mode
Fisheye expansion	Button	Operation
	¢	180° panorama
	0	360° panorama
	٣	PTZ expansion
		Fisheye

Table 3-5 Fisheye Display Mode

Four different display modes are available. You can select a display mode as demand.

- **180° Panorama**: Switch the live view image to the 180° panorama view.
- **360° Panorama**: Switch the live view image to the 360° panorama view.
- **PTZ Expansion**: The PTZ Expansion is the close-up view of some defined area in the fisheye view or panorama expansion, and it supports the electronic PTZ function, which is also called e-PTZ.
- **Fisheye**: In the Fisheye mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it approximates the vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

3.3 Adjusting Live View Settings

Purpose:

Live View settings can be customized according to different needs. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

Step 1 Enter the Live View Settings interface.

Menu> Configuration> Live View

Video Output Interface	VGAHDMI	
Live View Made	414	
Dweil Title	No Switch	
Enable Auto Output		
Volume		
Event Output	VGAHDMI	
Pull Screen Monitoring D_	10s	

Figure 3-7 Live View-General

The settings available in this menu include:

- Video Output Interface: Designates the output to configure the settings for. The DS-9600NI and DS-8600NI provide VGA/HDMI and VGA2/HDMI2, and DS-7600NI and DS-7700NI provide the HDMI and VGA video outputs.
- Live View Mode: Designates the display mode to be used for Live View.
- **Dwell Time:** The time in seconds to *dwell* between switching of channels when enabling auto-switch in Live View.
- Enable Audio Output: Enables/disables audio output for the selected video output.
- Volume: Adjust the volume of live view, playback and two-way audio for the selected output interface.
- Event Output: Designates the output to show event video.
- Full Screen Monitoring Dwell Time: The time in seconds to show alarm event screen.

Step 2 Set cameras order.

General View Channe	N-Zero Encoding	
Video Output Interface	ABA	
Came Camera Name	0	2
C D1 IPdome		04 10
T D2 IPCamera 02		Notes Ch.
D3 IPCamera 03	and the second se	2
T D4 IPCamera 04	X (r)	D3 🖸
D5 IPCamera 05		1
S DG IPCamera 06		07 🗉
D7 IPCamera 07		
D8 IPCantera 08	DS 18 DT 10	
		2 12 P. 14
More Setting		
	Αρ	plý Back

Figure 3-8 Live View- Camera Order

- 1) Select a **View** mode in **Example 1**, including 1/4/6/8/16/25/32/36/64-window division modes are supported depending on different models.
- 2) Select the small window, and double-click on the channel number to display the channel on the window.
- 3) You can click button to start live view for all the channels and click to stop all the live view.
- 4) Click the **Apply** button to save the setting.

You can also click-and-drag the camera to the desired window on the live view interface to set the camera order.

Step 3 Set the stream type for live view of camera.

- 1) Click the **More Settings** to enter the more settings interface.
- 2) Select the camera to configure from the list.
- 3) Select the stream type to main stream, sub-stream or Auto.

	More Settings	
Camera	(D1) IPdome	
Stream Type	Main Stream	

Figure 3-9 Stream Type Settings

- 4) Click Apply to save the settings.
- 5) (Optional) You can click the **Copy** button to copy the stream type settings of the current camera to other camera (s).

3.4 Channel-zero Encoding

Purpose:

Sometimes you need to get a remote view of many channels in real time from web browser or CMS (Client Management System) software, in order to decrease the bandwidth requirement without affecting the image quality, channel-zero encoding is supported as an option for you.

Step 1 Enter the Live View Settings interface.

Menu > Configuration > Live View

Step 2 Select the Channel-Zero Encoding tab.

Enable Channel-Zero En	•	
Frame Rate	30fps	
Max. Bitrate Mode	General	
Max. Bitrate(Kbps)	1792	

Figure 3-10 Live View- Channel-Zero Encoding

Step 3 Check the checkbox after Enable Channel Zero Encoding.

Step 4 Configure the Frame Rate, Max. Bitrate Mode and Max. Bitrate.

After you set the Channel-Zero encoding, you can get a view in the remote client or web browser of 16 channels in one screen.

Chapter 4 PTZ Controls

4.1 Configuring PTZ Settings

Purpose:

Follow the procedure to set the parameters for PTZ. The configuring of the PTZ parameters should be done before you control the PTZ camera.

Step 1 Enter the PTZ Settings interface.

Menu >Camera> PTZ

emera		_		[D1] IPdome					
					Preset				
	-	-7	See .	Carlos -	Set	Clear	Clear All	Call	
-		13	125	No. I GREAT	Patrol	M			
7		out		-	Set	Clear	Clear All	Call	
2	ć.,	Ľ		1	Pattern	jit.			
100	1		1		Start	6	top	Clear All	
		and a second	No.		Linear Stari				
	1		* Zoon		Laff Lint	High	t Livel		
100	0	-	* Pocu	-	PTZ Parame				
54	end								
							PTZ	Bacir	

Figure 4-1 PTZ Settings

Step 2 Click the **PTZ Parameters** button to set the PTZ parameters.

	PTZ Parameter S	ettings	-
Dated Plate			
Date Dir			
1994-199			
marky	(Name)		
Flane Ctrit			
PTZ Protocol	HIKVISION		
Address			
Address range: 0-	200		
		OK	Cancel

Figure 4-2 PTZ- General

Step 3 Choose the camera for PTZ setting in the **Camera** dropdown list.

Step 4 Enter the parameters of the PTZ camera.

All the parameters should be exactly the same as the PTZ camera parameters.

Step 5 Click **Apply** button to save the settings.

4.2 Setting PTZ Presets, Patrols & Patterns

Before you start:

Please make sure that the presets, patrols and patterns should be supported by PTZ protocols.

4.2.1 Customizing Presets

Purpose:

Follow the steps to set the Preset location which you want the PTZ camera to point to when an event takes place.

Step 1 Enter the PTZ Control interface.



Menu>Camera>PTZ

Figure 4-3 PTZ Settings

- Step 2 Use the directional button to wheel the camera to the location where you want to set preset; and the zoom and focus operations can be recorded in the preset as well.
- Step 3 Enter the preset No. (1~255) in the preset text field, and click the **Set** button to link the location to the preset.

Repeat the steps2-3 to save more presets.

You can click the **Clear** button to clear the location information of the preset, or click the **Clear All** button to clear the location information of all the presets.

4.2.2 Calling Presets

Purpose:

This feature enables the camera to point to a specified position such as a window when an event takes place.

Step 1 Click the button PTZ in the lower-right corner of the PTZ setting interface;

Or press the PTZ button on the front panel or click the PTZ Control icon in the quick setting bar, or select the PTZ option in the right-click menu to show the PTZ control panel.

Step 2 Choose Camera in the dropdown list.

Step 3 Click the D button to show the general settings of the PTZ control.



Figure 4-4 PTZ Panel - General

Step 4 Click to enter the preset No. in the corresponding text field.

Step 5 Click the Call Preset button to call it.

4.2.3 Customizing Patrols

Purpose:

Patrols can be set to move the PTZ to different key points and have it stay there for a set duration before moving on to the next key point. The key points are corresponding to the presets. The presets can be set following the steps above in Customizing Presets.

Step 1 Enter the PTZ Control interface.

Menu>Camera>PTZ



Figure 4-5 PTZ Settings

Step 2 Select patrol No. in the drop-down list of patrol.

Step 3 Click the **Set** button to add key points for the patrol.

		KeyPoint	
KeyPoint: 1	f:		
Preset	1.		
Duration	0		ं ।
Speed	1		4
Add		ок	Cancel

Figure 4-6 Key point Configuration

- Step 4 Configure key point parameters, such as the key point No., duration of staying for one key point and speed of patrol. The key point is corresponding to the preset. The Key Point No. determines the order at which the PTZ will follow while cycling through the patrol. The Duration refers to the time span to stay at the corresponding key point. The Speed defines the speed at which the PTZ will move from one key point to the next.
- Step 5 Click the **Add** button to add the next key point to the patrol, or you can click the **OK** button to save the key point to the patrol.

You can delete all the key points by clicking the **Clear** button for the selected patrol, or click the **Clear All** button to delete all the key pints for all patrols.

4.2.4 Calling Patrols

Purpose:

Calling a patrol makes the PTZ to move according the predefined patrol path.

Step 1 Click the button **PTZ** in the lower-right corner of the PTZ setting interface;

Or press the PTZ button on the front panel or click the PTZ Control icon in the quick setting bar, or select the PTZ option in the right-click menu to show the PTZ control panel.

Step 2 Click the D button to show the general settings of the PTZ control.

PTZ .	
IP Camera 3	
n * • 🗉 🖾	8
General	÷
eset	
Stop Pa 1	•
top Pa 1	
	IP Camera 3 a Cameral General eset Stop Pa 1

Figure 4-7 PTZ Panel - General

Step 3 Select a patrol in the dropdown list and click the **Call Patrol** button to call it.

Step 4 You can click the **Stop Patrol** button to stop calling it.

4.2.5 Customizing Patterns

Purpose:

Patterns can be set by recording the movement of the PTZ. You can call the pattern to make the PTZ movement according to the predefined path.

Step 1 Enter the PTZ Control interface.

Menu > Camera > PTZ

```
      PTZ
      Both Masses
      P

      Connent
      [D1] Masses
      -

      Image: Connent Connent All
      Connent Connent All
      Connent All

      Image: Connent Connent All
      Connent All
      Connent All

      Image: Connent Connent Connent All
      Connent All
      Connent All

      Image: Connent Connent Connent Connent All
      Connent Connent Connent Connent All
      Connent Conn
```

Figure 4-8 PTZ Settings

Step 2 Choose pattern number in the dropdown list.

Step 3 Click the **Start** button and click corresponding buttons in the control panel to move the PTZ camera, and click the **Stop** button to stop it.

The movement of the PTZ is recorded as the pattern.

4.2.6 Calling Patterns

Purpose:

Follow the procedure to move the PTZ camera according to the predefined patterns.

Step 1 Click the button PTZ in the lower-right corner of the PTZ setting interface;

Or press the PTZ button on the front panel or click the PTZ Control icon in the quick setting bar, or select the PTZ option in the right-click menu to show the PTZ control panel.

Step 2 Click the D button to show the general settings of the PTZ control.



Figure 4-9 PTZ Panel - General

Step 3 Click the Call Pattern button to call it.

Step 4 Click the Stop Pattern button to stop calling it.

4.2.7 Customizing Linear Scan Limit

Purpose:

The Linear Scan can be enabled to trigger the scan in the horizantal direction in the predefined range.

This function is supported by some certain models.

Step 1 Enter the PTZ Control interface.

```
Menu > Camera > PTZ
```



Figure 4-10 PTZ Settings

Step 2 Use the directional button to wheel the camera to the location where you want to set the limit, and click the Left Limit or Right Limit button to link the location to the corresponding limit.

The speed dome starts linear scan from the left limit to the right limit, and you must set the left limit on the left side of the right limit, as well the angle from the left limit to the right limit should be no more than 180°.

4.2.8 Calling Linear Scan

Before operating this function, make sure the connected camera supports the linear scan and is in HIKVISION protocol.

Purpose:

Follow the procedure to call the linear scan in the predefined scan range.

Step 1 Click the button PTZ in the lower-right corner of the PTZ setting interface;

Or press the PTZ button on the front panel or click the PTZ Control icon in the quick setting bar to enter the PTZ setting menu in live view mode.

Step 2 Click the D button to show the one-touch function of the PTZ control.



Figure 4-11 PTZ Panel - One-touch

Step 3 Click Linear Scan button to start the linear scan and click the Linear Scan button again to stop it.

You can click the **Restore** button to clear the defined left limit and right limit data and the dome needs to reboot to make settings take effect.

4.2.9 One-touch Park

Before operating this function, make sure the connected camera supports the linear scan and is in HIKVISION protocol.

Purpose:

For some certain model of the speed dome, it can be configured to start a predefined park action (scan, preset, patrol and etc.) automatically after a period of inactivity (park time).

Step 1 Click the button **PTZ** in the lower-right corner of the PTZ setting interface;

Or press the PTZ button on the front panel or click the PTZ Control icon in the quick setting bar to enter the PTZ setting menu in live view mode.

Step 2 Click the D button to show the one-touch function of the PTZ control.



Figure 4-12 PTZ Panel - One-touch

Step 3 There are 3 one-touch park types selectable, click the corresponding button to activate the park action.

Park (Quick Patrol): The dome starts patrol from the predefined preset 1 to preset 32 in order after the park time. The undefined preset will be skipped.

Park (Patrol 1): The dome starts move according to the predefined patrol 1 path after the park time.

Park (Preset 1): The dome moves to the predefined preset 1 location after the park time.

The park time can only be set through the speed dome configuration interface, by default the value is 5s.

Step 4 Click the button again to inactivate it.

4.3 PTZ Control Panel

To enter the PTZ control panel, there are two ways supported.

OPTION 1:

In the PTZ settings interface, click the **PTZ** button on the lower-right corner which is next to the Back button.

OPTION 2:

In the Live View mode, you can press the PTZ Control button on the front panel or on the remote control, or choose the PTZ Control icon , or select the PTZ option in the right-click menu.

Click the **Configuration** button on the control panel, and you can enter the PTZ Settings interface.



In PTZ control mode, the PTZ panel will be displayed when a mouse is connected with the device. If no mouse is connected, the icon appears in the lower-left corner of the window, indicating that this camera is in PTZ control mode.



Figure 4-13 PTZ Panel

Icon	Description	Icon	Description	Icon	Description
* * * * 0 * * * *	Direction button and the auto-cycle button	+	Zoom+, Focus+, Iris+	I.	Zoom-, Focus-, Iris-
	The speed of the PTZ movement	٠	Light on/off	4]#	Wiper on/off
80	3D Positioning	Ħ	Image Centralization		Menu
PTZ Control	Switch to the PTZ control interface	One-touch	Switch to the one-touch control interface	General	Switch to the general settings interface
۵	Previous item		Next item	0	Start pattern / patrol
0	Stop the patrol / pattern movement	×	Exit		Minimize windows

Table 4-1 Description of the PTZ panel icons

Chapter 5 Recording and Capture Settings

The picture capture is supported by the DS-7600/7700/8600/9600-I (/P) series NVR only.

5.1 Configuring Parameters

Purpose:

By configuring the parameters you can define the parameters which affect the image quality, such as the transmission stream type, the resolution and so on.

Before you start:

1) Make sure that the HDD has already been installed. If not, please install a HDD and initialize it. (Menu>HDD>General)



2) Check the storage mode of the HDD

Click **Advanced** to check the storage mode of the HDD.

If the HDD mode is *Quota*, please set the maximum record capacity and maximum picture capacity. For detailed information, see *Chapter Configuring Quota Mode*.

If the HDD mode is **Group**, you should set the HDD group. For detailed information, see *Chapter Configuring HDD Group for Recording and Capture*.

Made	Group
Recard on HCCD Group	Quote
Concernance of the second	Group

Figure 5-2 HDD- Advanced

Step 1 Enter the Record settings interface to configure the recording parameters:

Menu > Record > Parameters

Caméra	(D1) Camera 01		
Encoding Parameters	Main Stream(Continuous)	Main Stream(Event)	
Stream Type	Video	Mari	
Resolution	1920'1000(1000P)	1920-1000(1000P)	
Ditrale Type	Constant	Constant	
video Quality	Medium	Mellum	
Trame Rate	601)19	60fps	
Max. Eltrate Mode	General	General	
Max, Othereichpe)	8192	0192	
May, Bitrate Hange Recn.,	7680~12800(Kbps)	7680~12600(Kbps)	
video Encode	H.265	11,205	
Comple H 364+1			

Network Video Recorder User Manual

Figure 5-3 Recording Parameters

Step 2 Parameters Setting for Recording

1) Select **Record** tab page to configure. You can configure the stream type, the resolution, and other parameters on your demand.

Video Encode: select the video encoding to H.265 or H.264.

Enable H.264+ Mode: check the checkbox to enable. Once enabled, the **Max. Bitrate Mode**, **Max. Bitrate(Kbps)** and **Max. Bitrate Range Recommend** are not configurable. Enabling it helps to ensure the high video quality with a lowered bitrate.



The H.265 and H.264+ should be supported by the connected IP camera.

2) Click the **More Settings** button to set the advanced parameters for recording and then click **OK** button to finish editing.

	More Setting	R.	
Pre-record	54		
Pastreamt	54		
Expland Time (April			
Record Auto			
Midney Sitteent	Main Stream		
		OK	Back

Figure 5-4 More Settings

Pre-record: The time you set to record before the scheduled time or event. For example, when an alarm triggers the recording at 10:00, and if you set the pre-record time as 5 seconds, the camera records at 9:59:55.

Post-record: The time you set to record after the event or the scheduled time. For example, when an alarm triggered recording ends at 11:00, and if you set the post-record time as 5 seconds, it records till 11:00:05.

Expired Time: The expired time is period for a recorded file to be kept in the HDD. When the deadline is reached, the file will be deleted. If you set the expired time to 0, the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.

Redundant Record/Capture: By enabling redundant record or capture you save the record and captured picture in the redundant HDD. See *Chapter Configuring Redundant Recording and Capture*.

Record Audio: Check the checkbox to enable or disable audio recording.

Video Stream: Main stream and sub-stream are selectable for recording. When you select sub-stream, you can record for a longer time with the same storage space.

3) Click **Apply** to save the settings.

You can enable the ANR (Automatic Network Replenishment) function via the web browser (Configuration > Storage > Schedule Settings > Advanced) to save the video files in the IP camera when the network is disconnected, and synchronize the files to the NVR when the network is resumed.

- The redundant record/capture is used when you want to save the record files or captured pictures in the redundant HDD. You must configure the redundant HDD in HDD settings. For detailed information, see *Chapter 14.4.2*.
- The parameters of Main Stream (Event) are read-only.

Step 3 Parameters Settings for Sub-stream

1) Enter the Sub-stream tab page.

Camera	[D1] Camera 01	
Stream Type	Video	
Resolution (max.: 720P)	7041400(4CIF)	
Ethiute Type	Variable	
Video Clinity	Medium	
Plame Rate	Fut Frame	
Max. Elbrate Mode	General	
Max. Bitrate (Roph) iman	1024	
Max, Silvate Hange Neco	1152~1926(Kbps)	
Video Encode	H.265	

Figure 5-5 Sub-stream Parameters

- 2) Configure the parameters of the camera.
- 3) Click **Apply** to save the settings.

Step 4 Parameters Settings for Capture

1) Select the Capture tab.

Record	Substream	Capture		
Centerta		(D2) PCamera D1		
Paramet	er Type	Continuous	Event	
Hendult	an	704*480(4CIF)	704*480(4CIF)	
Picture 0	buanty	Medium	Medium	
Interval		25	26	

Figure 5-6 Capture Parameters

- 2) Configure the parameters.
- 3) Click **Apply** to save the settings.

The interval is the time period between two capturing actions. You can configure all the parameters on this menu on your demand.

5.2 Configuring Recording and Capture Schedule

Purpose:

Set the record schedule, and then the camera automatically starts/stops recording according to the configured schedule.

In this chapter, we take the record schedule procedure as an example, and the same procedure can be applied to configure schedule for both recording and capture. To schedule the automatic capture, you need to choose the Capture tab in the **Schedule** interface.

Step 1 Enter the Record Schedule interface.

Menu>Record/Capture>Schedule

Step 2 Configure Record Schedule

1) Select Record/Capture Schedule.



Figure 5-7 Record Schedule

Different recording types are marked in different color icons.

Continuous: scheduled recording.

Event: recording triggered by all event triggered alarm.

Motion: recording triggered by motion detection.

Alarm: recording triggered by alarm.

M/A: recording triggered by either motion detection or alarm.

M&A: recording triggered by motion detection and alarm.

POS: recording triggered by POS and alarm. (Supported by I series NVR only)

You can delete the set schedule by clicking the **None** icon.

- 2) Choose the camera you want to configure.
- 3) Select the check box after the **Enable Schedule** item.
- 4) Click **Edit** button or click on the color icon under the edit button and draw the schedule line on the panel.

Edit the schedule:

The all-day continuous recording is configured for the device by factory default.

I. In the message box, you can choose the day to which you want to set schedule.

-		ER			
Weekday	14	éfi :			
All Day			Type	Continuous	
StatEnd Time	00:00-24:00		Type .	Continuous	
SlarbEnd Time	00.00-00.00		Type	Continuous	
Start/End Time	00.00-00.00		Type	Continuous	
Standtind Time	00:00-00:00	1	Туре	Continuous	
Start/End Time	00.00-00.00		Type.	Continuous	
Statignet Time	00:00-00:00		Туре	Continuous	
Start/Erid Time	00:00-00:00		Туре	Continuous	
Sladified Term	00.00-00.00		Type	Continuous	
	Copy	Apply	ок	Cancel	

Figure 5-8 Recording Schedule Interface

You can click the 🛄 button to set the accurate time of the schedule.

II. To schedule an all-day recording, check the checkbox after the **All Day** item.

Ali Day	L. Annual State	Type	Continuous	
Glari/Entil Time	00.00-00.00	Туре	Continuous	
Elast/Ensi Time Elast/End Time		Type	Continuous	
	Figure F. O. Falit Cal			

Figure 5-9 Edit Schedule

III. To arrange other schedule, set the Start/End time for each period.

Up to 8 periods can be configured for each day. And the time periods can't be overlapped each other.

IV. Select the record type in the dropdown list.

- To enable Motion, Alarm, M | A (motion or alarm), M & A (motion and alarm) and VCA (Video Content Analysis) triggered recording and capture, you must configure the motion detection settings, alarm input settings or VCA settings as well. For detailed information, refer to *Chapter 8.1* and *Chapter 9*.
- The VCA settings are only available to the smart IP cameras.

Repeat the above edit schedule steps to schedule recording or capture for other days in the week. If the schedule can also be applied to other days, click **Copy**.



Figure 1. 1 Copy Schedule to Other Days

- V. Click **OK** to save setting and back to upper level menu.
- VI. Click Apply in the Record Schedule interface to save the settings.

Draw the schedule:

I. Click on the color icons, you can choose the schedule type as continuous or event.



Figure 5-10 Draw the Schedule

- II. Click the **Apply** button to validate the settings.
- Step 3 (Optional) If the settings can also be used to other channels, click **Copy**, and then choose the channel to which you want to copy.

Step 4 Click **Apply** to save the settings.



Figure 5-11 Copy Schedule to Other Channels

5.3 Configuring Motion Detection Recording and Capture

Purpose:

Follow the steps to set the motion detection parameters. In the live view mode, once a motion detection event takes place, the NVR can analyze it and do many actions to handle it. Enabling motion detection function can trigger certain channels to start recording, or trigger full screen monitoring, audio warning, notify the surveillance center and so on. In this chapter, you can follow the steps to schedule a record which triggered by the detected motion.

Step 1 Enter the Motion Detection interface.

Menu>Camera>Motion

Camera	(D1) IPdom	é.		
Initile Motion Detection.				
superior or state		Sattings		
	61 -	Sensitivity		20
A Ch	A	Full Scree	in .	
A REAL PROPERTY.		Clear		

Figure 5-12 Motion Detection

Step 2 Configure Motion Detection:

- 1) Choose camera you want to configure.
- 2) Check the checkbox after **Enable Motion Detection**.
- 3) Drag and draw the area for motion detection by mouse. If you want to set the motion detection for all the area shot by the camera, click **Full Screen**. To clear the motion detection area, click **Clear**.
- 4) Click **Settings**, and the message box for channel information pops up.

Trigger Channel	Arming Sche	Settin Idule 1		Action	
IP Camera	E Dt	D 3	■ D4		
		Арр	Q.	ок	Cancel

Figure 5-13 Motion Detection Handling

- 1) Select the channels which you want the motion detection event to trigger recording.
- 2) Click Apply to save the settings.
- 3) Click **OK** to back to the upper level menu.
- 4) Exit the Motion Detection menu.
- Step 3 Edit the Motion Detection Record Schedule. For the detailed information of schedule configuration, see *Chapter Configuring Recording and Capture* Schedule.

5.4 Configuring Alarm Triggered Recording and Capture

Purpose:

Follow the procedure to configure alarm triggered recording or capture.

Step 1 Enter the Alarm settings interface.

Menu> Configuration> Alarm

Alarte Vipad Lind				
Alarm liquit No.	Alartis Nation	Alarts Type		
Locars-F		NO-		
Loce-C		NO		
Leost+-1		NO		
Leosi-4		NO.		
Local+-0		NO		
Loogene		NO		
Feine T		80		
Alarm Culput List				
Alare Output No	Alater: Name	Dvet Tree		
Loomat		Manually Clear		
Local>2		Manually Clear		
Leoni-1		Manually Clear		
Local-n4		Menually Clear	Menually Clear	
172.6.23 100.0000-1		and the second		

Figure 5-14 Alarm Settings

Step 2 Click Alarm Input.

Alarm Status Alarm Ingut	Alarm Output	
Alerringul No.	Local=-1	
Alerri tiarna		
2yp#	NG	
Outlin		
Gellings-		

Figure 5-15 Alarm Settings- Alarm Input

- 1) Select Alarm Input number and configure alarm parameters.
- 2) Choose N.O (normally open) or N.C (normally closed) for alarm type.
- 3) Check the checkbox for Setting 🗹.
- 4) Click Settings.

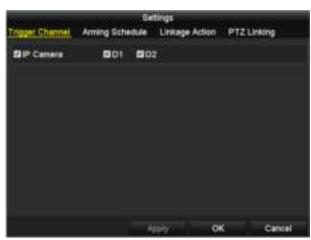


Figure 5-16 Alarm Settings

- 5) Choose the alarm triggered recording channel.
- 6) Check the checkbox \blacksquare to select channel.
- 7) Click **Apply** to save settings.
- 8) Click **OK** to back to the upper level menu.

Repeat the above steps to configure other alarm input parameters.

If the settings can also be applied to other alarm inputs, click **Copy** and choose the alarm input number.

	Copy Alarm Input	6	
Alarm input No.	Alarm Nat	ne	÷
litacet - 1			
Local4-2			
Local-3			
ELOCAPI-4			
Local4-5			
Local-6			
Locai-T			
Local-8			
Local-9			
ELocal- 10			
Local+11			19 19
		OK	Cancel

Figure 5-17 Copy Alarm Input

Step 3 Edit the Alarm triggered record in the Record/Capture Schedule setting interface. For the detailed information of schedule configuration, see *Chapter Configuring Recording and Capture* Schedule.

5.5 Configuring VCA Event Recording

Purpose:

The event triggered recording can be configured through the menu. Then events include the motion detection, alarm and VCA events (face detection/face capture, line crossing detection, intrusion detection, region entrance detection, region exiting detection, loitering detection, people gathering detection, fast moving detection, parking detection, unattended baggage detection, object removal detection, audio loss exception detection, sudden change of sound intensity detection, and defocus detection).

Step 1 Enter the VCA settings interface and select a camera for the VCA settings.



Menu > Camera > VCA

Figure 5-18 VCA Settings

- Step 2 Configure the detection rules for VCA events. For details, please refer to Chapter 10 VCA Alarm.
- Step 3 Click the icon 📓 to configure the alarm linkage actions for the VCA events.
- Step 4 Select **Trigger Channel** tab and select one or more channels which will start to record when VCA alarm is triggered.
- Step 5 Click Apply to save the settings

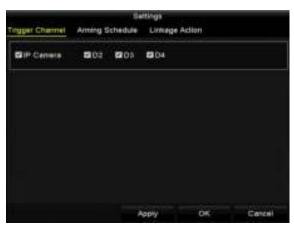


Figure 5-19 Set Trigger Camera of VCA Alarm

The PTZ Linking function is only available for the VCA settings of IP cameras.

Step 6 Enter Record Schedule settings interface (Menu > Record > Schedule > Record Schedule), and then set VCA as the record type. For details, see step 2 in *Chapter 5.2 Configuring Recording and* Capture Schedule.

5.6 Manual Recording and Continuous Capture

Purpose:

Follow the steps to set parameters for the manual recording and continuous capture. Using manual recording and continuous capture, you need to manually cancel the record and capture. The manual recording and manual continuous capture is prior to the scheduled recording and capture.

Step 1 Enter the Manual settings interface.

Menu> Manual

Or press the **REC/SHOT** button on the front panel.



Figure 5-20 Manual Record

Step 2 Enable the Manual Recording.

- 1) Select **Record** on the left bar.
- Click the status button before camera number to change
 to

Step 3 Disable manual record.



I NOTE

Green icon 🛄 means that the channel is configured the record schedule. After rebooting, all the manual records enabled will be canceled.

Step 4 Enabling and disabling the continuous capture

1) Select Continuous Capture on the left bar.

	Continuous Capture
	P Cemera R Dt D2 D1
	Capturing by schedule Capturing by manual operation
	Figure 5-21 Continuous Capture
2)	Click the status button before camera number to change 🔳 to 📟.
3)	Disable continuous capture.

Click the status button to change I to

Green icon means that the channel is configured the capture schedule. After rebooting, all the continuous capture will be canceled.

5.7 Configuring Holiday Recording and Capture

Purpose:

Follow the steps to configure the record or capture schedule on holiday for that year. You may want to have different plan for recording and capture on holiday.

Step 1 Enter the Record setting interface.

Menu > Record > Holiday

loliday	Settings			
No.	Holiday Name	Status Start Date		Edit 🗖
1	Holiday1	Enabled 1.Jan	1.Jan	
2	Holiday2	Enabled 1st Tue Jan	last Wed.Jan	×
3	Holiday3	Disabled 1.Jan	1.Jan	
4	Holiday4	Disabled 1.Jan	1.Jan	
	Holiday5	Disabled 1.Jan	1.Jan	
6	Holiday6	Disabled 1.Jan	1.Jan	
	Holiday7	Disabled 1.Jan	1.Jan	
8	Holiday8	Disabled 1.Jan	1.Jan	
9	Holiday9	Disabled 1.Jan	1.Jan	
10	Holiday10	Disabled 1.Jan	1.Jan	
11	Holiday11	Disabled 1.Jan	1.Jan	
12	Holiday12	Disabled 1.Jan	1.Jan	
				Back

Figure 5-22 Holiday Settings

Step 2 Enable Edit Holiday schedule.

1) Click 🚺 to enter the Edit interface.



Figure 5-23 Edit Holiday Settings

- 2) Check the checkbox after Enable Holiday.
- 3) Select Mode from the dropdown list.
- 4) There are three different modes for the date format to configure holiday schedule.
- 5) Set the start and end date.
- 6) Click Apply to save settings.
- 7) Click **OK** to exit the Edit interface.

Step 3 Enter Record/Capture Schedule settings interface to edit the holiday recording schedule. See *Chapter 6.2 Configuring Recording and Capture* Schedule.

5.8 Configuring Redundant Recording and Capture

Purpose:

Enabling redundant recording and capture, which means saving the record files and captured pictures not only in the R/W HDD but also in the redundant HDD, will effectively enhance the data safety and reliability.

Step 1 Enter HDD Information interface.

Menu> HDD



Figure 5-24 HDD General

Step 2 Select the **HDD** and click **I** to enter the Local HDD Settings interface.

1) Set the HDD property to Redundancy.



Figure 5-25 HDD General-Editing

- 2) Click Apply to save the settings.
- 3) Click **OK** to back to the upper level menu.

You must set the Storage mode in the HDD advanced settings to Group before you set the HDD property to Redundant. For detailed information, please refer to *Chapter 11.4.1 Setting HDD Property*. There should be at least another HDD which is in Read/Write status.

Step 3 Enter the Record setting interface.

Menu> Record> Parameters

1) Select Record tab.

2) Click More Settings to enter the following interface.

	Mure Setting	i	
Pre-record	64		
Post-record.	94		
Express Time (day)	9		
Redunders Record.			
Recent Auto			
Visio Sliventi	Main Stream		
Visio Silvadi	Man Sream		
		OK	flick

Figure 5-26 Record Parameters

- 3) Select Camera you want to configure in the drop-down list.
- 4) Check the checkbox of **Redundant Record/Capture**.
- 5) Click **OK** to save settings and back to the upper level menu.

Repeat the above steps for configuring other channels.

5.9 Configuring HDD Group for Recording and Capture

Purpose:

You can group the HDDs and save the record files and captured pictures in certain HDD group.

Step 1 Enter HDD setting interface.

Menu>HDD



Figure 5-27 HDD General

Step 2 Select Advanced on the left side menu.

#IP Camera CiD1 CID2 CID3 CID4 CID5 CID6 CID7 CID8	Record an HDD Gi			6 103	SID4	61 05	-	5 107	
--	------------------	--	--	--------------	------	--------------	---	--------------	--



Check whether the storage mode of the HDD is Group. If not, set it to Group. For detailed information, please refer to *Chapter 14.4 Managing HDD Group*.

Step 3 Select General in the left side menu

Step 4 Click 🔟 to enter editing interface.

- Step 5 Configuring HDD group.
 - 1) Choose a group number for the HDD group.
 - 2) Click Apply and then in the pop-up message box, click Yes to save your settings.
 - 3) Click **OK** to back to the upper level menu.
 - 4) Repeat the above steps to configure more HDD groups.
- Step 6 Choose the Channels which you want to save the record files and captured pictures in the HDD group.
 - 1) Select Advanced on the left bar.
 - 2) Choose Group number in the dropdown list of Record on HDD Group
 - 3) Check the channels you want to save in this group.
 - 4) Click Apply to save settings.



After having configured the HDD groups, you can configure the Recording and Capture settings following the procedure provided in *Chapter 5.2-5.7*.

5.10 Files Protection

Purpose:

You can lock the recording files or set the HDD property to Read-only to protect the record files from being overwritten.

5.10.1 Locking the Recording Files

• Lock File when Playback

Step 1 Enter Playback interface.

Menu> Playback

Step 2 Check the checkbox of channel(s) in the channel list and then double-click to select a date on the calendar.



Figure 5-29 Normal/Smart Playback

Step 3 During playback, click the 🔤 button to lock the current recording file.

In the multi-channel playback mde, clicking the in button will lock all the record files related to the playback channels.

Step 4 You can click the souther to pop up the file management interface. Click the Locked File tab to check and export the locked files.

Video Citys	Paybeck Capture	umen	Tag			
103 104 107 107	Gart Bird, Tree 22 (7) (201), 17 48 (5) - 23 (7) (201), 17 48 (5) - 23 (7) (201), 17 48 (5) - 20 (20 (201), 17 (2) 48 - 10 (20 (201), 14 (2) 24 - 10 (20 (201), 14 (2) 24 -	10 (34, 13) 10 (34, 12) 17 (32, 23)	109 0 100 02042 120 02042 120 04043 45 42142 042 14043			
Tree 5 P	10		444		Entres.	13 17 49 21 13 30 24 12
Total size:	OME		Cant	AF.	Capito	Cattel

Figure 5-30 Locked File Management

In the File Management interface, you can also click 🔳 to change it to 📑 to unlock the file and the file is not protected.

• Lock File when Export

Step 1 Enter Export setting interface.

Menu> Export

Normal								
DIP Camera	⊠D1 ⊠D9	D2 D10	D3	204 2012	20 20	5 🖬 D6 13 🖬 D14	D15	D8
Start/End time of record	rd 06	27-2013	08:53:3	6 06-27	7-201	3 16:41:08		
Record Type	Al							
File Type	All							
Start Time	06-	27-2013			-	00:00:00		٠
End Time	06	27-2013			- 2	3:59:59		•

Figure 5-31 Export

Step 2 Select the channels you want to search by checking the checkbox to 🗹.

Step 3 Configure the record type, file type start/end time.

Step 4 Click **Search** to show the results.



Figure 5-32 Export- Search Result

Step 5 Protect the record files.

1) Find the record files you want to protect, and then click the 📑 icon which will turn to I, indicating that the file is locked.

The record files of which the recording is still not completed cannot be locked.

2) Click 📓 to change it to 🖺 to unlock the file and the file is not protected.



Figure 5-33 Unlocking Attention

5.10.2 Setting HDD Property to Read-only

Step 1 Enter HDD setting interface.

Menu> HDD



Figure 5-34 HDD General

Step 2 Click 🖬 to edit the HDD you want to protect.



Figure 5-35 HDD General- Editing

To edit HDD property, you need to set the storage mode of the HDD to Group. See *Chapter Managing HDD Group*.

Step 3 Set the HDD property to Read-only.

Step 4 Click **OK** to save settings and back to the upper level menu.

- You cannot save any files in a Read-only HDD. If you want to save files in the HDD, change the property to R/W.
- If there is only one HDD and is set to Read-only, the NVR can't record any files. Only live view mode is available.
- If you set the HDD to Read-only when the NVR is saving files in it, then the file will be saved in next R/W HDD. If there is only one HDD, the recording will be stopped.

Chapter 6 Playback

6.1 Playing Back Record Files

6.1.1 Instant Playback

Purpose

Play back the recorded video files of a specific channel in the live view mode. Channel switch is supported.

Instant playback by channel

Choose a channel in live view mode and click the 📓 button in the quick setting toolbar.

In the instant playback mode, only record files recorded during the last five minutes on this channel will be played back.



Figure 6-1 Instant Playback Interface

6.1.2 Playing Back by Normal Search

Playback by Channel

Enter the Playback interface.

Right click a channel in live view mode and select Playback from the menu, as shown in Figure 6-2.

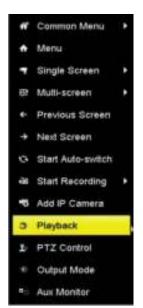


Figure 6-2 Right-click Menu under Live View

Pressing numerical buttons will switch playback to the corresponding channels during playback process.

Playback by Time

Purpose

Play back video files recorded in specified time duration. Multi-channel simultaneous playback and channel switch are supported.

Step 1 Enter playback interface.

Menu>Playback

- Step 2 Select the Normal/Smart in the drop-down list on the top-left side.
- Step 3 Select the stream to Main Stream or Sub Stream. (for I series NVR only)

Step 4 Select a camera in the camera list.



The main stream or sub stream for recording is configurable in Menu>Record>Parameters.

Step 5 Select a date in the calendar and click the 🕒 button on the left toolbar to play the video file.



Figure 6-3 Playback Calendar

If there are record files for that camera in that day, in the calendar, the icon for that day is displayed in different colors for different recording types: blue for continuous recording and red for event recording.

Step 6 Click the **Example** radio button to start playing the continuous recorded files.

Playback Interface

You can use the toolbar in the bottom part of Playback interface to control playing progress, as shown in Figure 6-4.



Figure 6-4 Playback Interface



Figure 6-5 Toolbar of Playback

You can click the channel(s) to execute simultaneous playback of multiple channels.

- The **Example 2000 Control of the start/end time of the recorded video files**.
- Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate specific frames.

Item	Button	Operation	Button	Operation
	D	Draw quadrilateral for the motion detection	ď	Search the matched video
Smart Search	₩.4 2.4	Set full screen for motion detection	1	Draw line for the line crossing detection
	¢	Draw quadrilateral for the intrusion detection	۲	Filter video files by setting the target characters
	*	Audio on/Mute		Start/Stop clipping
	ø	Capture Picture	ά <u>μ</u>	Lock File
Operations	19	Add default tag	M	Add customized tag
Operations	\$	File management for video clips, captured pictures, locked files and tags	a	Digital Zoom
	Ш/►	Pause/Play	◀/Ⅲ	Reverse play/ Pause
	••	Slow forward		Stop
Playing Control	► 305	30s forward	₹ 305	30s reverse
	>	Next day	**	Fast forward
	٢	Previous day		
		Previous/Next period	30mins	Play the time bar in 30 minutes (default)
Time Bar Scaling	● 1h	Play the time bar in 1 hour	2h	Play the time bar in 2 hours
	🔵 Sh	Play the time bar in 6 hours	24 h	Play the time bar in 24 hours
Fisheye	\sim	180° panorama	0	360° panorama

Table 6-1 Detailed Explanation of Playback Toolbar

Item	Button	Operation	Button	Operation
Expansion	٠	PTZ expansion	٠	Fisheye
POS	Т	Enable/Disable POS information overlay (Supported by I series NVR only)		

- The fisheye expansion view feature is supported by the DS-7600/7700/8600/9600-I (/P) series NVR only.
- Please refer to the *Chapter 3.2.5 Fisheye Expansion* for the description and operation of the fisheye expansion.

- The playing speed of 256X is supported.
- When the playing speed is higher than 2X, the POS information cannot be overlain on the video.

6.1.3 Playing back by Smart Search

Purpose

The smart playback function provides an easy way to get through the less effective information. When you select the smart playback mode, the system will analyze the video containing the motion, line or intrusion detection information, mark it with green color and play it in the normal speed while the video without motion will be played in the 16-time speed. The smart playback rules and areas are configurable.

Step 1 Enter Playback interface.

Menu>Playback

Step 2 Select the Normal/Smart in the drop-down list on the top-left side.

Step 3 Select the stream to Main Stream or Sub Stream. (for I series NVR only)

The main stream or sub stream for recording is configurable in Menu>Record>Parameters.

Step 4 Select a camera in the camera list.

Step 5 Select a date in the calendar and click the 🕒 button on the left toolbar to play the video file.



Figure 6-6 Playback by Smart Search

Step 6 Click the state radio button to switch to the playback by smart search.

Step 7 Set the rules and areas for smart search of line crossing detection, intrusion detection or motion detection event triggered recording.

• Line Crossing Detection

Select the button, and click on the image to specify the start point and end point of the line.

Intrusion Detection

Click the button, and specify 4 points to set a quadrilateral region for intrusion detection. Only one region can be set.

Motion Detection

Click the button, and then hold the mouse on the image to draw the detection area manually. You can also click the button to set the full screen as the detection area.

Step 8 (Optional) You can click filter the searched video files by setting the target characters, including the gender and age of the human and whether he/she wears glasses.

	Result Filter	
Enable		
Gender	All	
Ages	All	
Glasses	All	
	OK	Cancel

Figure 6-7 Set Result Filter

Step 9 (Optional) Click for enter the Smart Settings to configure the related parameters.

Skip the Non-Related Video: check the checkbox to enable the device to skip non-related video files.

Play Non-Related Video: set the playing speed to 8X/4X/2X/1X when playing the non-related video files.

Play Related Video: set the playing speed to 4X/2X/1X when playing the non-related video files.



Figure 6-8 Smart Settings

6.1.4 Playing Back by Event Search

Purpose

Play back record files on one or several channels searched out by event type (e.g., alarm input, motion detection and VCA).

Step 1 Enter the Playback interface.

Menu>Playback

- Step 2 Select the **Event** in the drop-down list on the top-left side.
- Step 3 Select the stream to Main Stream or Sub Stream. (for I series NVR only)

Step 4 Select the major type to Alarm Input, Motion, POS or VCA as the event type.



We take playback by VCA as the example in the following instructions.

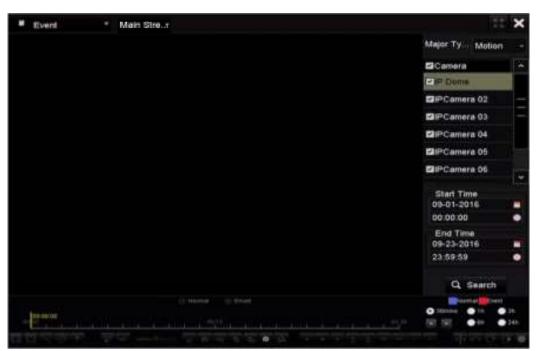


Figure 6-9 Event Search Interface

Step 5 Select the minor type of VCA from the drop-down list. (Please refer to *Chapter 9 VCA Alarm* for the details of VCA detection types).

For configuring the VCA recording, please refer to Chapter 5.4 Configuring VCA Event Recording and Capture; and for details of VCA detection types, please refer to Chapter 9 VCA Alarm.

Step 6 Select the camera (s) for searching, and set the Start time and End time.

Step 7 Click **Search** button to get the search result information. You may refer to the right-side bar for the result.

For the POS event type (supported by I series NVR), you can enter the Keyword and enable the Case Sensitivity (upper case and lower case) to search the video files with the keyword contained POS information.

Step 8 Select a result item and click 📓 button to play back the file.



Pre-play and post-play can be configured.

Step 9 (Optional) Enter the Synch Playback interface to select the camera (s) for synchronous playback.



Figure 6-10 Synch Playback Interface

Step 10 Enter the playback interface.

The toolbar in the bottom part of playback interface can be used to control playing process.



Figure 6-11 Interface of Playback by Event

You can click \blacksquare or \blacksquare button to select the previous or next event. Please refer to Table 6.1 for the description of buttons on the toolbar.

6.1.5 Playing Back by Tag

Purpose:

Video tag allows you to record related information like people and location of a certain time point during playback. You can use video tag(s) to search for record files and position time point.

Before playing back by tag:

Step 1 Enter Playback interface.

Menu>Playback

Step 2 Search and play back the record file(s). Refer to *Chapter 6.1.1* for the detailed information about searching and playback of the record files.



Figure 6-12 Interface of Playback by Time

Click 📕 button to add default tag.

Click 📕 button to add customized tag and input tag name.

Max. 64 tags can be added to a single video file.

Step 3 Tag management.

Click button to enter the File Management interface and click **Tag** to manage the tags. You can check, edit, and delete tag(s).

			File Ma	nagement		
ideo (Clips Pla	yback Capture	Locked File	Teg		
Cam.	Tag Nam		Tim	•	Edit	Delete
D1	TAG		69-	20-2016 09:35:30		
D1	TAG		09-	20-2016 09:35:30	12	
D1	A.		09-	20-2016 09:35:31		
D1	8		09-	20-2016 09-35-33		
Total	4 P; 1/1					
						Cancel

Figure 6-13 Tag Management Interface

Playing back by Tag

- Step 1 Select the **Tag** from the drop-down list in the Playback interface.
- Step 2 Select the stream to Main Stream or Sub Stream.
- Step 3 Choose channels, edit start time and end time, and then click Search to enter Search Result interface.

I NOTE

You can enter keyword in the textbox Keyward to search the tag on your command.

Step 4 Click 📓 button to play back the selected tag file.



Figure 6-14 Interface of Playback by Tag

III NOTE

Pre-play and post-play can be configured.

You can click 🗹 or 🎴 button to select the previous or next tag. Please refer to Table 6.1 for the description of buttons on the toolbar.

6.1.6 Playing Back by Sub-periods

Purpose:

The video files can be played in multiple sub-periods simultaneously on the screens.

Step 1 Enter Playback interface.

Step 2 Menu>Playback

- Step 3 Select **Sub-periods** from the drop-down list in the upper-left corner of the page to enter the Sub-periods Playback interface.
- Step 4 Select the stream to Main Stream or Sub Stream.
- Step 5 Select a date and start playing the video file.
- Step 6 Select the Split-screen Number from the dropdown list. Up to 16 screens are configurable.



Figure 6-15 Interface of Sub-periods Playback

According to the defined number of split-screens, the video files on the selected date can be divided into average segments for playback. E.g., if there are video files existing between 16:00 and 22:00, and the 6-screen display mode is selected, then it can play the video files for 1 hour on each screen simultaneously.

6.1.7 Playing Back by System Logs

Purpose:

Play back record file(s) associated with channels after searching system logs.

Step 1 Enter Log Information interface.

Menu>Maintenance>Log Information

- Step 2 Click Log Search tab to enter Playback by System Logs.
- Step 3 Set search time and type and click **Search** button.

eg taerch				
Statt Tares	27-01-0918	0 100	00:00	•
	29-01-2010	- 15	19.59	•
Мари Тури	<u>#</u>			
Minur Type	115.2			14
Ta Alastat Bagadi				
BAlarin Output				
Motion Detection Sta	field			
SMotion Detection Sta	elect.			
Sivites Tampering Del	ector Started			
Shrideo Tempering Del	ection Stepped			
Silling Crossing Detect	on Alam Slatted			
St.ive Crossing Detect	wn Alatta Stopped			
Sintuation Detection Al	arm Started			14
		Export AP	Search	Gate

Figure 6-16 System Log Search Interface

Step 4 Choose a log with record file and click 📓 button to enter Playback interface.

If there is no record file at the time point of the log, the message box "No result found" will pop up.

		Searc	h Result				
No	Major Type	Time	Minor Type	Parameter	Play	Details	•
1	Exception	27-01-2015 10:02:58	HDCI Error	MA			=
2	A Exception	27-01-2015 10:02:58	HDD Error	NIA	-	٠	
a .	A Exception	27-01-2015 10:02:58	HDD Error	NA	-		
4	T Operation	27-01-2015 10:03:00	Abnormal Shuld	NIA	-	۰	
5	T Operation	27-01-2015 10:03:01	Power On	NIA	-	٠	
6	Exception	27-01-2015 10:03:13	Record/Capture	NIA	٠	•	
τ.	Exception	27-01-2015 10:03:13	Record/Capture	NA		۰	
	Exception	27-01-2015 10:03-13	Record/Capture	NA		٠	
9	T Operation	27-01-2015 11:06:34	Local Operation	NA	-	۰	
10	Exception	27-01-2015 11:07:36	HDO Error	NIA	-	•	
Total	417 P. 1/5						
				Export		Back	

Figure 6-17 Result of System Log Search

Step 5 Playback interface.

The toolbar in the bottom part of Playback interface can be used to control playing process.



Figure 6-18 Interface of Playback by Log

6.1.8 Playing Back External File

Purpose:

Perform the following steps to look up and play back files in the external devices.

Step 1 Enter Tag Search interface.

Menu>Playback

Step 2 Select the External File in the drop-down list on the top-left side.

The files are listed in the right-side list.

You can click the **Williams** button to refresh the file list.

Step 3 Select and click the button to play back it. And you can adjust the playback speed by clicking and .



Figure 6-19 Interface of External File Playback

6.1.9 Playing Back Pictures

The playback by picture is supported by the DS-9600/8600/7700/7600NI-I (/P) series NVR only.

Purpose:

The captured pictures stored in the HDDs of the device can be searched and viewed.

Step 1 Enter Playback interface.

Menu>Playback

- Step 2 Select **Picture** from the drop-down list in the upper-left corner of the page to enter the Picture Playback interface.
- Step 3 Check 🖃 checkbox to select the channel(s) and specify the start time and end time for search.
- Step 4 Click **Search** to enter Search Result interface.

Up to 4000 pictures can be displayed each time.

Step 5 Choose a picture you want to view and click 📓 button.

You can click **Back** to return to the search interface.



Figure 6-20 Result of Picture Playback

Step 6 The toolbar in the bottom part of Playback interface can be used to control playing process.

Figure 6-21 Picture Playback Toolbar

F							
Button	Function	Button	Function	Button	Function	Button	Function
٠	Play reverse	×	Play	۲.	Previous picture	>	Next picture

Table 6-2 Detailed Explanation of Picture-playback Toolbar

6.2 Auxiliary Functions of Playback

6.2.1 Playing Back Frame by Frame

Purpose:

Play video files frame by frame, in case of checking image details of the video when abnormal events happen.

• Using a Mouse:

Go to Playback interface.

If you choose playback of the record file: click button **until** the speed changes to Single frame and one click on the playback screen represents playback of one frame.

If you choose reverse playback of the record file: click button until the speed changes to Single frame and one click on the playback screen represents reverse playback of one frame. It is also feasible to use button in toolbar.

• Using the Front Panel:

Click the **s** button to set the speed to Single frame. One click on **u** button, one click on the playback screen or Enter button on the front panel represents playback or reverse playback of one frame.

6.2.2 Thumbnails View

With the thumbnails view on the playback interface, you can conveniently locate the required video files on the time bar.

Step 1 Enter the playback interface and start to play the video files.

Step 2 Move the mouse to the time bar to get the preview thumbnails of the video files. Select and double click on a required thumbnail to enter the full-screen playback.



Figure 6-22 Thumbnails View

The thumbnail view is supported only in the 1X single-camera playback mode.

6.2.3 Fast View

You can hold the mouse to drag on the time bar to get the fast view of the video files.

Step 1 Enter the playback interface and start to play the video files.

Step 2 Use the mouse to hold and drag through the playing time bar to fast view the video files.

Step 3 Release the mouse to the required time point to enter the full-screen playback.

The fast view is supported only in the 1X single-camera playback mode.

6.2.4 Digital Zoom

Step 1 Click the 🚨 button on the playback control bar to enter Digital Zoom interface.

Step 2 You can zoom in the image to different proportions (1 to16X) by moving the sliding bar from to . You can also scroll the mouse wheel to control the zoom in/out.



Figure 6-23 Draw Area for Digital Zoom

Step 3 Right-click the image to exit the digital zoom interface.

6.2.5 File Management

You can manage the video clips, captured pictures in playback, locked files and tags you have added in the playback mode.

Step 1 Enter the playback interface.

Step 2 Click 🚇 on the toolbar to enter the file management interface.

		File Mar	agement		
Video Clips	Playback Capture	Locked File	Tag		
Camera No	Start/End Time		Size	to so over the	
DI	12-08-2014 15 4	6.00-15:46:17	4081.16828	1	
D1	12-08-2014 15:4	6:19-15:46:21	909.89K8		
ED1	12-08-2014 15:4	6:22-15:46:24	897.31KB		
				Start time: 12-08-201	clip recording: 1 4 15:46:00
				End time: 12-08-201	4 15:46:17
Total: 3 P: 1/	1			Selected clip	s: 0
Total size: 08			Export All	Export	Cancel

Figure 6-24 File Management

- Step 3 You can view the saved video clips, captured playback pictures, lock/unlock the files and edit the tags which you added in the playback mode.
- Step 4 If required, select the items and click **Export All** or **Export** to export the clips/pictures/files/tags to local storage device.

Chapter 7 Backup

7.1 Backing up Record Files

7.1.1 Quick Export

Purpose:

Export record files to backup device(s) quickly.

Step 1 Enter Video Export interface.

Menu>Export>Normal

Choose the channel(s) you want to back up and click **Quick Export** button.

The time duration of record files on a specified channel cannot exceed one day. Otherwise, the message box "Max. 24 hours are allowed for quick export." will pop up.

BIP Camera	201	202	E D3	EI D4	ED3	13 D6	207	D B	
Start/End time of record		05-06-2016 16:33:42 07-08-2016 11:55:23							
Record Mode		Main Stream -							
Record Type		All							
File Type		Ali							
Start Time	04-08-2016				00:00:00				
End Time		07-08-2016				23:59:69		1	

Figure 7-1 Quick Export Interface

Step 2 Select the format of the log files to be exported. Up to 15 formats are selectable.

Step 3 Click the **Export** to start exporting.

Here we use USB Flash Drive and please refer to the next section Normal Backup for more backup devices supported by the NVR.



Figure 7-2 Quick Export using USB1-1

Stay in the Exporting interface until all record files are exported.



Figure 7-3 Export Finished

Step 4 Check backup result.

Choose the record file in Export interface and click button 📓 to check it.



The Player player.exe will be exported automatically during record file export.

		Exp	ha				
Device Name USB F		ash Disk 1-1	+ *.mp4		- Rie	Refresh	
Name		Size Type	Edit Date		Delet	e Play	
en01_201412	21009	430.15MB File	12-25-2014	14:33:16			
a ch09_201410	2916	485.88MB File	10-29-2014	19:10:56			
a cn13_2014091909		2707.10K0 File	09-19-2014	15:42:20			
Free Space		901.05MB					
		New Polder	Format	Export	1.000	moel	

Figure 7-4 Checkup of Quick Export Result Using USB1-1

7.1.2 Backing up by Normal Video/Picture Search

Purpose:

The record files can be backup to various devices, such as USB devices (USB flash drives, USB HDDs, USB writer), SATA writer and e-SATA HDD.

The eSATA HDD is supported by DS-9600NI-I8 and DS-9600NI-I16 series NVR only.

Backup using USB flash drives and USB HDDs

Step 1 Enter Export interface.

Menu>Export>Normal/Picture

Step 2 Select the cameras to search.

Step 3 Set search condition and click **Search** button to enter the search result interface. The matched video files or pictures are displayed in Chart or List display mode.

E IP Camera	CID1	2 D2	D 3	204	205	B De	207	23 D0		
Start/End time of record		05-06-2016 16:33:42 07-08-2016 11:55:23								
Record Mode		Main S	Main Stream							
Record Type		AL								
File Type		All								
Start Time		04-08-2016				00:00:00			•	
End Time		07-08-2016			-	23:59:69			•	

Figure 7-5 Normal Video Search for Backup

Step 4 Select video files or pictures from the Chart or List to export.

Click 🔟 to play the record file if you want to check it.

Check the checkbox before the record files you want to back up.

The size of the currently selected files is displayed in the lower-left corner of the window.



Figure 7-6 Result of Normal Video Search for Backup

Step 5 Export the video files or picture files.

Click **Export All** button to export all the files.

Or you can select recording files you want to back up, and click **Export** button to enter Export interface.

If the inserted USB device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drives or USB HDDs via the device.

		Exp	ort			
Device Name	USB F	iash Disk 1-1		mp4		Refresh
Name		Size Type	Edit Dete		D	elete Play
en01_201412	1009	#30.15MB File	12-25-2014	14:33:16		-
Ch09_201410	2916	400.00MD File	10-29-2014	13:10:56		- 1
ch13_201409	1909	2707.10KB File	09-19-2014	15:42:20		
a01_sd_ch01_141		25.90MB File	12-25-2014	17:34:58	11	
Free Space		955 34MB				
		New Falder	Format	Export		Cancel

Figure 7-7 Export by Normal Video Search using USB Flash Drive

Stay in the Exporting interface until all record files are exported with pop-up message box "Export finished".



Figure 7-8 Export Finished

The backup of video files using USB writer or SATA writer has the same operating instructions. Please refer to steps described above.

7.1.3 Backing up by Event Search

Purpose:

Back up event-related record files using USB devices (USB flash drives, USB HDDs, USB writer), SATA writer or eSATA HDD. Quick Backup and Normal Backup are supported.

Step 1 Enter Export interface.

Menu>Export>Event

Step 2 Select the cameras to search.

Step 3 Select the event type to alarm input, motion, VCA or POS.

Event									
Major Type		Mation							
Plecons Mode Start Time End Time Pre-pley		Main Stream							
		07-08-2916				00.00.00			
		07-08-2016				23:59:59			•
		306							
Post-play		301							
BP Camera DD1		B D2	61 00	52 04	205	52 06	10 07	2 D8	

Figure 7-9 Event Search for Backup



The POS event type is supported by the DS-7600/7700/8600/9600-I (/P) series NVR only.

- Step 4 Set the search conditions and click **Search** button to enter the search result interface. For the POS event type, you can also set the Keyword and enable the Case Sensitivity (upper case and lower case) to search the video files with the key word contained POS information.
- Step 5 The matched video files are displayed in Chart or List display mode. Select video files from the Chart or List interface to export.



Figure 7-10 Result of Event Search

Step 6 Export the video files. Please refer to step5 of *Chapter 7.1.2 Backing up by Normal Video Search* for details.

7.1.4 Backing up Video Clips or Captured Playback Pictures

Purpose:

You may also select video clips or captured pictures in playback mode to export directly during Playback, using USB devices (USB flash drives, USB HDDs, USB writer), SATA writer or eSATA HDD.

Step 1 Enter Playback interface.

Please refer to Chapter 6.1 Playing Back Record Files.

- Step 2 During playback, use buttons and or in the playback toolbar to start or stop clipping record file (s); or use the button is to capture pitcures.
- Step 3 Click the 🔤 to enter the file management interface.



Figure 7-11 Video Clips or Captured Pictures Export Interface

Step 4 Export the video clips or captured pictures in playback. Please refer to step5 of *Chapter 7.1.2* Backing up by Normal Video Search for details.

7.2 Managing Backup Devices

Management of USB flash drives, USB HDDs and eSATA HDDs

Step 1 Enter the Export interface.

		Eq	ho			
Device Name	USB F	lash Disk 1-1		np4	Re	freen.
Name		Size Type	Edit Date		Dele	e Play
en01_20141	21009	430.15MB File	12-26-2014 1	4:33:18		-
a ch09_20141	02916	466.00MB File	10-29-2014 1	9:10:56	1	-
en13_20140	91909.	2707.10KB File	09-19-2014 1	5:42:20		-
001_sd_ch0	1_141_	25.90MB File	12-25-2014 1	7:34:58		-
Free Space		965.94MB				
		New Folder	Format	Export		incel

Figure 7-12 Storage Device Management

Step 2 Backup device management.

Click **New Folder** button if you want to create a new folder in the backup device.

Select a record file or folder in the backup device and click 📕 button if you want to delete

it.

Click Erase button if you want to erase the files from a re-writable CD/DVD.

Click Format button to format the backup device.

If the inserted storage device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

7.3 Hot Spare Device Backup

Purpose:

The device can form an N+1 hot spare system. The system consists of several working devices and a hot spare device; when the working device fails, the hot spare device switches into operation, thus increasing the reliability of the system.

Please contact dealer for details of models which support the hot spare function.

Before you start:

At least 2 devices are online.

A bidirectional connection shown in the figure below is required to be built between the hot spare device and each working device.



Figure 7-13 Building Hot Spare System

7.3.2 Setting Hot Spare Device

- The camera connection will be disabled when the device works in the hot spare mode.
- It's highly recommended to restore the defaults of the device after switching the working mode of the hot spare device to normal mode to ensure the normal operation afterwards.

Step 1 Enter the Hot Spare settings interface.

Menu > Configuration > Hot Spare

Step 2 Set the Work Mode as Hot Spare Mode and click the Apply button to confirm the settings.

Step 3 Reboot the device to make the change take effect.



Figure 7-14 Reboot Attention

Step 4 Click the **Yes** button in the pop-up attention box.

7.3.3 Setting Working Device

Step 1 Enter the Hot Spare settings interface.

Step 2 Menu > Configuration > Hot Spare

Step 3 Set the Work Mode as Normal Mode (default).

Step 4 Check the checkbox of Enable to enable the hot spare function.

Step 5 Enter the IP address and admin password of hot spare device.

Work Mode	
O Normal Mode	Hot Spare Mode
	2
IPv4 address of the hot s	172.6 .23 .187
Password of the hot spar	
Working Status	Connected

Figure 7-15 Setting Working Mode for Working device

Step 6 Click the **Apply** button to save the settings.

7.3.4 Managing Hot Spare System

Step 1 Enter the Hot Spare Settings interface of the hot spare device.

Menu > Configuration > Hot Spare

The connected working device is displayed on the device list.

Step 2 Check the checkbox to select the working device from the device list, and click the **Add** button to link the working device to the hot spare device.



A hot spare device can connect up to 32 working devices.

Wo	ek Mode Normal Mode		O Hot Spare M	ode	
Devi	ce List				
	0.	IP Address			
		172.6.23.1	63		
Wark	ing Device Status				Add
Np	P Address		Connection Status	Working Status	Delta

Figure 7-16 Add Working Device

Step 3 You can view the working status of the hot spare device on the Working Status list.

When the working device works properly, the working status of the hot spare device is displayed as *No record*.

	T ADDRESS	Connection Talue	Working Status	Colline of Collins
1	112.6.23 183	Oxiew	No recard	
	CORDER-11	and the second s	and the second	

Figure 7-17 No Recording

When the working device gets offline, the hot spare device will record the video of the IP Camera connected to the working device for backup, and the working status of the hot spare device is displayed as *Backing up*.



The record backing up can be functioned for 1 working device at a time.

Ala I	PAddress	Connection Status	Working Status	Det.
	and the second se	Comments of the second s	the state of the s	11
	172.6.23.163	COTION	Backing up	

Figure 7-18 Backing up

When the working device comes online, the lost video files will be restored by the record synchronization function, and the working status of the hot spare device is displayed as *Synchronizing*.

The record synchronization function can be enabled for 1 working device at a time.

No.	IP Address	Connection Status	Working Status	Del
1	172,8 25 163	Online	Synchronizing (99%)	0

Figure 7-19 Synchronizing

Chapter 8 Alarm Settings

8.1 Setting Motion Detection Alarm

Step 1 Enter Motion Detection interface of Camera Management and choose a camera you want to set up motion detection.

Menu> Camera> Motion

Motion Detection		
Camera	IP Camera 1	
Enable Molion Detection		
	Settings 🔹	
	Benstlydy	
The state of the state of the	Full Screen	
	Clear	
10		
Con 16		
100 / CAL		

Figure 8-1 Motion Detection Setup Interface

Step 2 Set up detection area and sensitivity.

Tick "Enable Motion Detection", use the mouse to draw detection area(s) and drag the sensitivity bar to set sensitivity.

Click button and set alarm response actions.

Step 3 Click **Trigger Channel** tab and select one or more channels which will start to record/capture or become full-screen monitoring when motion alarm is triggered, and click **Apply** to save the settings.



Figure 8-2 Set Trigger Camera of Motion Detection

Step 4 Set up arming schedule of the channel.

- 1) Select Arming Schedule tab to set the arming schedule of handling actions for the motion detection.
- 2) Choose one day of a week and up to eight time periods can be set within each day.
- 3) Click **Apply** to save the settings

Time periods shall not be repeated or overlapped.

	56	tings	
Trigger Channel	Arming Schedule	Linkage Action	
Weet.	Man		
	00:00-24:00		
	00:00-00:00		
	00:00-00:00		
	00:00:00:00		
	00:00-00:00		
	00.00-00.00		
	00:00-00:00		
	00:00-00:00		
	Copy A	UDY OK	Cancel

Figure 8-3 Set Arming Schedule of Motion Detection

- Step 5 Click **Handling** tab to set up alarm response actions of motion alarm (please refer to *Chapter Setting Alarm Response Actions*).
- Step 6 If you want to set motion detection for another channel, repeat the above steps or just click **Copy** in the Motion Detection interface to copy the above settings to it.

8.2 Setting Sensor Alarms

Purpose:

Set the handling action of an external sensor alarm.

Step 1 Enter Alarm Settings of System Configuration and select an alarm input.

Menu> Configuration> Alarm

Select Alarm Input tab to enter Alarm Input Settings interface.

Name Vigod Lind			
Alertic liquid No.	Alarts Native	Alarm Type	
Locals-1		NO-	
Loce+-0		NO	
Leost-4		NO	
Local-4		NO.	
Leosi+d		NO	
Loogene		NO	
Fried-DT		80	
Nam Culput List			
Alare Output No	Alarm Name	Dvet Tree	
Loom-H		Marsally Clear	
Look>2		Markely Clear	
Loosiel		Manually Clear	
Localina		Menually Clear	
172 8 23 101 8000 >1		and the second	

Figure 8-4 Alarm Status Interface of System Configuration

Step 2 Set up the handling action of the selected alarm input.

Check the **Enable** checkbox and click **Settings** button to set up its alarm response actions.

Alarm Status Alarm Input	Alam Output	
Aleren implut Hill	Lecel-1	
Allarm Marrie		
Tre	NO	
Enable		
Epathle One-Key Disarring		
Dettings	-	

Figure 8-5 Alarm Input Setup Interface

Step 3 (Optional) Enable the one-key disarming for local alarm input 1 (Local<-1).

- 1) Check the checkbox of Enable One-Key Disarming.
- 2) Click the **Settings** button to enter the linkage action settings interface.
- 3) Select the alarm linkage action (s) you want to disarm for the local alarm input1. The selected linkage actions include the Full Screen Monitoring, Audible Warning, Notify Surveillance Center, Send Email and Trigger Alarm Output.

When the alarm input 1 (Local<-1) is enabled with one-key disarming, the other alarm input settings are not configurable.

Step 4 Select Trigger Channel tab and select one or more channels which will start to record/capture or become full-screen monitoring when an external alarm is input, and click **Apply** to save the settings.

Step 5 Select **Arming Schedule** tab to set the arming schedule of handling actions.

1		tings		
Trigger Channel	Arning Schedule	Linkage Action	PTZ Linking	
direct.	Mon			
	00.00-24.00			
	00:00-00:00			•
	00:00-00:00			•
4	00:00-00:00			•
	00:00-00:00			••••
	00:00-00:00			
1	00:00-00:00			۰
	00 00-00 00			•
	Copy A	PP(y O	Can	cel.

Figure 8-6 Set Arming Schedule of Alarm Input

Choose one day of a week and Max. eight time periods can be set within each day, and click **Apply** to save the settings.

Time periods shall not be repeated or overlapped.

Repeat the above steps to set up arming schedule of other days of a week. You can also use **Copy** button to copy an arming schedule to other days.

Step 6 Select **Linkage Action** tab to set up alarm response actions of the alarm input (please refer to *Chapter Setting Alarm Response Actions*).

Step 7 If necessary, select PTZ Linking tab and set PTZ linkage of the alarm input.

Set PTZ linking parameters and click **OK** to complete the settings of the alarm input.



Make sure the PTZ or speed dome connected supports PTZ linkage.

	50	tings		
Trigger Channel	Arming Schedule	Linkage Action	PTZ Linking	
#t2 Lining	IP Camera 4			
Call Presel	•			
Frent				
Call Patrol	•			
Patent				
Call Pattern	•			
Pater:				
	- 6	erry Of	Canto	16

Figure 8-7 Set PTZ Linking of Alarm Input

Step 8 If you want to set handling action of another alarm input, repeat the above steps.

Or you can click the **Copy** button on the Alarm Input Setup interface and check the checkbox of alarm inputs to copy the settings to them.

	Copy Alarm Input to	
Alarm input No.	Alarm Name	÷
III.com		
Local+2		
Local-3		
Local-4		
Local-5		
Local+6		
Locai-7		
Local-0		
Local9		
Local= 10		
Local+11		
	QK.	Cancel

Figure 8-8 Copy Settings of Alarm Input

8.3 Detecting Video Loss Alarm

Purpose:

Detect video loss of a channel and take alarm response action(s).

Step 1 Enter Video Loss interface of Camera Management and select a channel you want to detect.

Menu> Camera> Video Loss



Figure 8-9 Video Loss Setup Interface

Step 2 Set up handling action of video loss.

Check the checkbox of "Enable Video Loss Alarm", and click <a>[button to set up handling action of video loss.

- Step 3 Set up arming schedule of the handling actions.
 - 1) Select Arming Schedule tab to set the channel's arming schedule.
 - 2) Choose one day of a week and up to eight time periods can be set within each day.
 - 3) Click **Apply** button to save the settings.



Time periods shall not be repeated or overlapped.

Mon Mon 1 00:00-24:00 2 00:00-00:00 3 00:00-00:00 4 00:00-00:00 5 00:00-00:00 0 00:00-00:00 5 00:00-00:00 0 00:00-00:00 0 00:00-00:00	00:00-24:00 00:00-00:00	
2 00 00-00 00 1 00 00-00 00 4 00 00-00 00 5 00 00-00 00 6 00 00-00 00 6 00 00-00 00	00 00-00 00	
00:00-00:00 4 00:00-00:00 5 00:00-00:00 6 00:00-00:00 0 00:00-00:00		
4 00:00-00:00 5 00:00-00:00 5 00:00-00:00	00:00-00:00	
5 00:00-00:00 5 00:00-00:00		
6 00:00-00:00	00:00-00:00	
	00:00-00:00	
00.00-00:00	00:00-00:00	
	00:00-00:00	
00:00-00:00	00:00-00:00	

Figure 8-10 Set Arming Schedule of Video Loss

- Step 4 Select **Linkage Action** tab to set up alarm response action of video loss (please refer to *Chapter Setting Alarm Response Actions*).
- Step 5 Click the **OK** button to complete the video loss settings of the channel.

8.4 Detecting Video Tampering Alarm

Purpose:

Trigger alarm when the lens is covered and take alarm response action(s).

Step 1 Enter Video Tampering interface of Camera Management and select a channel you want to detect video tampering.

Menu> Camera> Video Tampering

Video Tampering Detection S	ettings			
Camera	IP Camera 1			
Enable Video Tampering	2			
		Settings	۲	
		Sensitivity		
		Clear		
		Clear		

Figure 8-11 Video Tampering Setting Interface

Step 2 Set the video tampering handling action of the channel.

- 1) Check the checkbox of "Enable Video Tampering Detection".
- 2) Drag the sensitivity bar to set a proper sensitivity level. Use the mouse to draw an area you want to detect video tampering.
- 3) Click 🔳 button to set up handling action of video tampering.

Step 3 Set arming schedule and alarm response actions of the channel.

- 1) Click Arming Schedule tab to set the arming schedule of handling actions.
- 2) Choose one day of a week and Max. eight time periods can be set within each day.
- 3) Click Apply button to save the settings.



Time periods shall not be repeated or overlapped.

West	Mon		
	00:00-	24:00	
	00:00-	00.00	
	00:00-	00:00	
4.	00:00-	00:00	
	00:00-	00 00	
	00:00-	00:00	
	00:00-	00:00	
	00:00-	00:00	

Figure 8-12 Set Arming Schedule of Video Tampering

- Step 4 Select **Linkage Action** tab to set up alarm response actions of video tampering alarm (please refer to *Chapter Setting Alarm Response Actions*).
- Step 5 Click the **OK** button to complete the video tampering settings of the channel.

8.5 Handling Exceptions Alarm

Purpose:

Exception settings refer to the handling action of various exceptions, e.g.

- HDD Full: The HDD is full.
- HDD Error: Writing HDD error or unformatted HDD.
- **Network Disconnected:** Disconnected network cable.
- IP Conflicted: Duplicated IP address.
- Illegal Login: Incorrect user ID or password.
- **Record/Capture Exception:** No space for saving recorded files or captured images.
- Hot Spare Exception: Disconnected with the working device.

Steps:

Enter Exception interface of System Configuration and handle various exceptions.

Menu> Configuration> Exceptions

Please refer to Chapter Setting Alarm Response Actions for detailed alarm response actions.

Exception		
Enable Event Hint	2	
Event Hint Settings	1. Contraction (1997)	
Exception Type	HDD Full	
Audible Warning	Õ.	
Notify Surveillance Center	0	
Send Email		
Trigger Alarm Output		

Figure 8-13 Exceptions Setup Interface

8.6 Setting Alarm Response Actions

Purpose:

Alarm response actions will be activated when an alarm or exception occurs, including Event Hint Display, Full Screen Monitoring, Audible Warning (buzzer), Notify Surveillance Center, Trigger Alarm Output and Send Email.

Event Hint Display

When an event or exception happens, a hint can be displayed on the lower-left corner of live view image. And you can click the hint icon to check the details. Besides, the event to be displayed is configurable.

Step 1 Enter the Exception settings interface.

Menu > Configuration > Exceptions

Step 2 Check the checkbox of **Enable Event Hint**.

- '	
Event Hint Settings	0
Enable Event Hint	

Figure 8-14 Event Hint Settings Interface

Step 3 Click the 🔎 to set the type of event to be displayed on the image.

Event Hint Set	tings		
EAI		- LUP	
CHOD Full			
CHOO Engr			
DNetwork Disconnected			
DP Confided			
Ellegai Login			
ElVideo Signel Loss			
SAlarm Input Triggered			
Elvideo Tamper Delected			
EMotion Delection			
BRecord/Capture Exception			
BIP Camera Conflicted			
			1
	CK.	Cancel	

Figure 8-15 Event Hint Settings Interface

Step 4 Click the **OK** button to finish settings.

Full Screen Monitoring

When an alarm is triggered, the local monitor (VGA, HDMI or BNC monitor) display in full screen the video image from the alarming channel configured for full screen monitoring.

If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time). A different dwell time can be set by going to Menu >Configuration>Live View > Full Screen Monitoring Dwell Time.

Auto-switch will terminate once the alarm stops and you will be taken back to the Live View interface.

You must select during "Trigger Channel" settings the channel(s) you want to make full screen monitoring.

Audible Warning

Trigger an audible *beep* when an alarm is detected.

Notify Surveillance Center

Sends an exception or alarm signal to remote alarm host when an event occurs. The alarm host refers to the PC installed with Remote Client.

The alarm signal will be transmitted automatically at detection mode when remote alarm host is configured. Please refer to *Chapter 11.2.6 Configuring More Settings* for details of alarm host configuration.

Email Linkage

Send an email with alarm information to a user or users when an alarm is detected.

Please refer to Chapter 11.2.8 Configuring Email for details of Email configuration.

Trigger Alarm Output

Trigger an alarm output when an alarm is triggered.

Step 1 Enter Alarm Output interface.

Menu> Configuration> Alarm> Alarm Output

Step 2 Select an alarm output and set alarm name and dwell time. Click **Schedule** button to set the arming schedule of alarm output.

If "Manually Clear" is selected in the dropdown list of Dwell Time, you can clear it only by going to Menu> Manual> Alarm.

Alarm Status	Alarm Input	Alarm Output	
Alarm Output	No.	Local->1	
Alarm Name			
Dwell Time		5s	
Settings		•	

Figure 8-16 Alarm Output Setup Interface

Step 3 Set up arming schedule of the alarm output.

Choose one day of a week and up to 8 time periods can be set within each day.



Time periods shall not be repeated or overlapped.

Arming Schedul		Settings		
Week.	Mon			2
	00:00-2	4:00		
	90:00-8	0:00		
	00:00-0	0:00		
4	90.00-0	0.00		
6	00:00-0	0:00		
	00,00-0	0.00		
	00:00-0	0:00		
	00:00-5	0.00		
	Copy	ANN	ок	Cancel

Figure 8-17 Set Arming Schedule of Alarm Output

Step 4 Repeat the above steps to set up arming schedule of other days of a week. You can also use **Copy** button to copy an arming schedule to other days.

Click the **OK** button to complete the video tampering settings of the alarm output No..

Step 5 You can also copy the above settings to another channel.

Cr	py Alarn Output to		
Alarm Output No.	Aam Name		
(CLASSIE)			
Local->2			
∎Locai⇒s			
Local>4			
172.6.25.105.8000->1			
		2.	Electro
		OK	Cancel

Figure 8-18 Copy Settings of Alarm Output

8.7 Triggering or Clearing Alarm Output Manually

Purpose:

Sensor alarm can be triggered or cleared manually. If "Manually Clear" is selected in the dropdown list of dwell time of an alarm output, the alarm can be cleared only by clicking **Clear** button in the following interface.

Step 1 Select the alarm output you want to trigger or clear and make related operations.

Menu> Manual> Alarm

Step 2 Click **Trigger/Clear** button if you want to trigger or clear an alarm output.

Click Trigger All button if you want to trigger all alarm outputs.

Click Clear All button if you want to clear all alarm output.

Alarm Output No. Alarm Name	Trigger
Local->1	No
Local->2	No
Local->3	No
Local->4	No
172.6.23.105:8000->1	No

Figure 8-19 Clear or Trigger Alarm Output Manually

Chapter 9 POS Configuration

The POS feature is supported by DS-9600/8600/7700/7600-I (/P) series NVR only.

9.1 Configuring POS Settings

Step 1 Enter the POS settings interface.

Menu > Configuration > POS> POS Settings

Step 2 Select the POS from the drop-down list.

The amount of POS devices supported for each device is the half of its channel amount, e.g., 8 POS devices are supported for the DS-9616NI-I8 model.

Step 3 Check the checkbox to enable the POS feature.



Figure 9-1 POS Settings

Step 4 Select the POS protocol to Universal Protocol, EPSON, AVE or NUCLEUS.

When the new protocol is selected, you should reboot the device to activate the new settings.

Universal Protocol

Click the Advanced button to expand more settings when selecting the universal protocol. You can set the start line tag, line break tag and end line tag for the POS overlay characters, and the case-sensitive property of the characters.

POS Protocol	Universal Protocol	×	Gen	eral
Connection	TCP Connection	g	Setti	ings
Start Line T			Hex	
Line Break	0D0A		Hex	2
End Line Tag			Hex	
Gase-sensit	2		No	

Figure 9-2 Universal Protocol Settings

• EPSON

The fixed start and end line tag are used for EPSON protocol.

• AVE

The fixed start and end line tag are used for AVE protocol. And the serial port and virtual serial port connection types are supported.

- 1) Click the **Set** to configure the AVE settings.
- 2) Se the rule to VSI-ADD or VNET.
- 3) Set the address bit of the POS message to send.
- 4) Click **OK** to save the settings.

	AVE Settings	
Rule	VSI-ADD	
Address	30	

Figure 9-3 AVE Settings

• NUCLEUS

- 1) Click the **Set** to configure the NUCLEUS settings.
- 2) Enter the employee No. shift No. and the terminal No. in the field. The matching message sent from the POS device will be used as the valid POS data.

e <employee#></employee#>	0052	
s-ishifter-	12	
t-terminal#>	11	

Figure 9-4 NUCLEUS Settings

The NUCLEUS protocol must be used in the RS-232 connection communication.

Step 5 Select the connection mode to TCP, UDP, Multicast, RS-232, USB->RS-232 or Sniff, and click **Set** to configure the parameters for each connection mode.

- TCP Connection
- 1) When using TCP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.
- 2) Set the Allowed Remote IP Address of the device sending the POS message.

	TCP (Conn	ection Self	ings	
Port	10010				
Allowed Flemate IP	192.0	0	.64		

Figure 9-5 TCP Connection Settings

- UDP Connection
- 3) When using UDP connection, the port must be set from 1 to 65535, and the port for each POS machine must be unique.
- 4) Set the Allowed Remote IP Address of the device sending the POS message.

3				
00	.64			
		0 .0 .64	0.64	0 .64

Figure 9-6 UDP Connection Settings

USB->RS-232 Connection

Configure the port parameters of USB-to-RS-232 convertor, including the serial number of port, baud rate, data bit, stop bit, parity and flow ctrl.

Serial Number	1	14
Baud Rate	4800	
Data Bit	6	
Stop Bit	1	
Plenty	None	
Flow Ctri	None	

Figure 9-7 USB-to-RS-232 Settings

RS-232 Connection

Connect the NVR and the POS machine via RS-232. The RS-232 settings can be configured in Menu>Configuration>RS-232. The Usage must be set to Transparent Channel.

Baud Rate	115200	
Data Bit	0	
tilop Bil	4	
Parity	None	
Flow Ctrl	None	
Usage	Transparent Channel	

Figure 9-8 RS-232 Settings

Multicast Connection

When connecting the NVR and the POS machine via Multicast protocol, set the multicast address and port.

	Multicast Settings
Address	224,0 .0 .1
Port	10400

Figure 9-9 Multicast Settings

• Sniff Connection

Connect the NVR and the POS machine via Sniff. Configure the source address and destination address settings.

	Sniff	Settings		
Enable Source Port	62			
Source Address	192.168.1	.4		
Source Port	10200			
Enable Destination	2			
Enable Destination _	2			
Destination Address	192.168.0	11		
Destination Port	10300			
			OK	Cancel

Figure 9-10 Sniff Settings

Step 6 Set other parameters of characters overly.

- 1) Select the character encoding format from the drop-down list.
- 2) Select the overlay mode of the characters to display in scrolling or page mode.

- 3) Select the font size to small, medium or large.
- 4) Set the overlay time of the characters. The value ranges 5 -3600 sec.
- 5) Set the delay time of POS event. The value ranges 5 -3600 sec. When the device has not received the POS message over the defined delay time, the transaction is finished.
- 6) (optional) Check the checkbox to enable the **POS Overlay in Live View**. When this feature is enabled, the POS information can be overlain on the live view image.
- 7) Select the font color for the characters.

Character Encod.	Latin-1(iso-8859-1)	
Overlay Mode	Page	
Font Size:	Small	-
Overlay Time (s)	6	
Delay Time(s)	5	
POS Overlay In	2	
Font Color		

Figure 9-11 Overlay Character Settings

You can adjust the size and position of textbox on the preview screen of POS settings interface by dragging the frame.

Step 7 Click **Apply** to activate the settings.

Step 8 (Optional) You can click the **Copy** button to copy the current settings to other POS (s).



Figure 9-12 Copy POS Settings

9.2 Configuring Overlay Channel

Purpose:

You can assign the POS machine to corresponding channel on which you want to overlay.

Step 1 Enter the POS settings interface.

Menu > Configuration > POS> Overlay Channel

Step 2 Click to select the IP camera from the camera list on the right, and then click a POS item from the POS device list you want to overlay the POS information on the selected camera.

Click do or do to the previous or next page of cameras.

Each POS device can be selected for one camera only.

POS Settings Overlay	Channel			
POS	P1	92	00	194
e Post	E 16000	POST		X H
POS2		1		
to POS3	ajc.	PF	07	P 0
D POS4	X	<u>a)</u> x xa		X D
te Poss	ine -	010	PHI	-
D POSE	RISO	a) 📰 🔞		A 0
D POST				
to POSE	51E)	0.14	ein:	DH6
	X) 🗴 🔍	
	1. Carlos			
3C 111	3		19216	P 20
			Approv	Deck

Figure 9-13 Overlay Channel Settings

Step 3 You can also click 🔤 to overlay all POS items to the first 8 channels in order. And the 🛄 is used to clear all POS overlay settings.

Step 4 Click the **Apply** button to save the settings.

9.3 Configuring POS Privacy Information Filtering

Purpose:

You can set the POS privacy information to not display on the image.

Step 1 Enter the POS settings interface.

Menu > Configuration > POS> POS Settings

Step 2 Click the source of the **Privacy Settings** to enter the POS privacy information filtering settings interface.

	POS Privacy informat	ion Fillering	
Privacy Information 1	username		
Privacy Information2	card		
Privacy information3	amount		
		OK	Cancel

Figure 9-14 POS Privacy information filtering settings

- Step 3 Edit three information text (1 to 32 characters) types in the field.
- Step 4 Click OK to save the settings. The defined privacy information will be displayed in ***on the image instead.

9.4 Configuring POS Alarm

Purpose:

Set the POS alarm parameters to trigger certain channels to start recording, or trigger full screen monitoring, audio warning, notifying the surveillance center, sending email and so on.

Step 1 Enter the POS settings interface.

Menu > Configuration > POS> POS Settings

Step 2 Follow the steps in Chapter 9.1-9.2 to configure the POS settings.

Step 3 Click 🔲 to enter the alarm settings interface.

		Setting				
rigger Channel	Arming Sched	ule Hi	indling	PTZ Lir	king	
DIP Camera	5001 5007	202 2009	B D3	61 04	1 05	CI D6
		Apply		ок		ancel

Figure 9-15 Set Trigger Cameras of POS

- Step 4 Click **Trigger Channel** tab and select one or more channels to record or become full-screen monitoring when POS alarm is triggered.
- Step 5 Set arming schedule of the channel.

Select **Arming Schedule** tab to set the channel's arming schedule.

Choose one day of a week and up to eight time periods can be set within each day. Or you can click the **Copy** button to copy the time period settings to other day(s).

Time periods shall not be repeated or overlapped.

		Settings		
Trigger Channel	Arming Schedul	e Handling	PTZ Linking	
Week	Mon			
t	00:00-10:0	0		
2	00:00-00:0	0		•
3	00.00-00.0	0		•
4	00.00-00.0	ió.		
6.	00.00-00 0	0		•
6	00.00-00 0	0		•
7	00.00-00.0	0		
8	00:00-00:0	0		
	W2RW/I			
	Copy	Apply	ок	Cancel

Figure 9-16 Set Arming Schedule

Step 6 Click the **Handling** tab to set up alarm response actions of POS alarm.

Repeat the above steps to set up arming schedule of other days of a week.

Click the **OK** button to complete the POS settings of the channel.

Step 7 Select **PTZ Linking** tab and set PTZ linkage of the POS alarm.

Set PTZ linking parameters and click the **OK** button to complete the settings of the alarm input.



Please check whether the PTZ or speed dome supports PTZ linkage.

	Se	ttings		
Trigger Channel	Arming Schedule	Handling	PTZ Linking	
PTZ Linking	[D2] Camera	01		
Call Preset	•			
Presol	1			-
Call Patrol	•			
Patrol				
Call Pattern	•			
Pattern	1			
	A	ppły:	ок	Cancel

Figure 9-17 Set PTZ Linking

Step 8 Click **OK** to save the settings.

Chapter 10 VCA Alarm

The NVR supports the VCA detection alarm (face detection, vehicle detection, line crossing detection and intrusion detection, region entrance detection, region exiting detection, unattended baggage detection, object removal detection, audio loss exception detection, sudden change of sound intensity detection, and defocus detection) sent by IP camera. The VCA detection must be enabled and configured on the IP camera settings interface first.

- All VCA detection must be supported by the connected IP camera.
- Please refer to the User Manual of Network Camera for the detailed instructions for the all VCA detection types.

10.1 Face Detection

Purpose:

Face detection function detects the face appears in the surveillance scene, and some certain actions can be taken when the alarm is triggered.

Step 1 Enter the VCA settings interface.

Menu> Camera> VCA

Step 2 Select the camera to configure the VCA.

You can click the checkbox of **Save VCA Picture** to save the captured pictures of VCA detection.

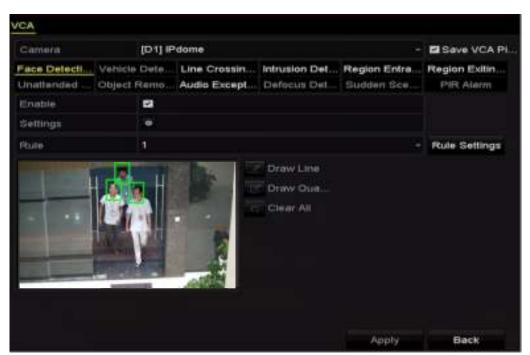


Figure 10-1 Face Detection

Step 3 Select the VCA detection type to Face Detection.

Step 4 Check the **Enable** checkbox to enable this function.

- Step 5 Click to enter the face detection settings interface. Configure the trigger channel, arming schedule and linkage action for the face detection alarm. Please refer to step3~step5 of *Chapter 8.1 Setting Motion Detection Alarm* for detailed instructions.
- Step 6 Click the **Rule Settings** button to set the face detection rules. You can click-and-drag the slider to set the detection sensitivity.

Sensitivity: Range [1-5]. The higher the value is, the more easily the face can be detected.



Figure 10-2 Set Face Detection Sensitivity

Step 7 Click **Apply** to activate the settings.

10.2 Vehicle Detection

Purpose:

Vehicle Detection is available for the road traffic monitoring. In Vehicle Detection, the passed vehicle can be detected and the picture of its license plate can be captured. You can send alarm signal to notify the surveillance center and upload the captured picture to FTP server.

Step 1 Enter the VCA settings interface.

Menu> Camera> VCA

- Step 2 Select the camera to configure the VCA.
- Step 3 You can click the checkbox of **Save VCA Picture** to save the captured pictures of VCA detection.
- Step 4 Select the VCA detection type to Vehicle Detection.
- Step 5 Check the **Enable** checkbox to enable this function.

VCA				
Camera	[D1] chan2		-	Save VCA PL.
	bject Remo Audio I		et Region Entra el Sudden Sce	Region Exitin PIR Alarm
Enable	2			
Settings	Blacklist	 Whitelist 	Others	
Rule	1		-	Rule Settings
11	1	Draw Line	Blacklist & Whit	Import/Export
:	1	Clear All	No. Plate No.	Туре
· +	1	7		

Figure 10-3 Set Vehicle Detection

Step 6 Click to configure the trigger channel, arming schedule and linkage actions for the Blacklist, Whitelist and Others.



Up to 2, 048 backlists or whitelists are supported for import and export.

Step 7 Click the **Rule Settings** to enter the rule settings interface. Configure the lane, upload picture and overlay content settings. Up to 4 lanes are selectable.

and the second second second second	Rule Settings		
Manic Picture Overi	ey Coment		
NK			
Seena No.	Vehicle Delect	on blank 1	
Grane Name			
Lane Rumper	1		
	Appry	OK	Cancel

Figure 10-4 Rule Settings

Step 8 Click Save to save the settings.

Please refer to the User Manual of Network Camera for the detailed instructions for the vehicle detection.

10.3 Line Crossing Detection

Purpose:

This function can be used for detecting people, vehicles and objects cross a set virtual line. The line crossing direction can be set as bidirectional, from left to right or from right to left. And you can set the duration for the alarm response actions, such as full screen monitoring, audible warning, etc.

Step 1 Enter the VCA settings interface.

Menu> Camera> VCA

Step 2 Select the camera to configure the VCA.

You can click the checkbox of **Save VCA Picture** to save the captured pictures of VCA detection.

Step 3 Select the VCA detection type to Line Crossing Detection.

Step 4 Check the **Enable** checkbox to enable this function.

Step 5 Click to configure the trigger channel, arming schedule and linkage actions for the line crossing detection alarm.

Step 6 Click the **Rule Settings** button to set the line crossing detection rules.

1) Select the direction to A<->B, A->B or A<-B.

A<->B: Only the arrow on the B side shows; when an object going across the configured line with both direction can be detected and alarms are triggered.

A->B: Only the object crossing the configured line from the A side to the B side can be detected.

B->A: Only the object crossing the configured line from the B side to the A side can be detected.

2) Click-and-drag the slider to set the detection sensitivity.

Sensitivity: Range [1-100]. The higher the value is, the more easily the detection alarm can be triggered.

3) Click-**OK** to save the rule settings and back to the line crossing detection settings interface.

50	=
	50

Figure 10-5 Set Line Crossing Detection Rules

Step 7 Click and set two points in the preview window to draw a virtual line.

You can use the **I** to clear the existing virtual line and re-draw it.

II NOTE

Up to 4 rules can be configured.

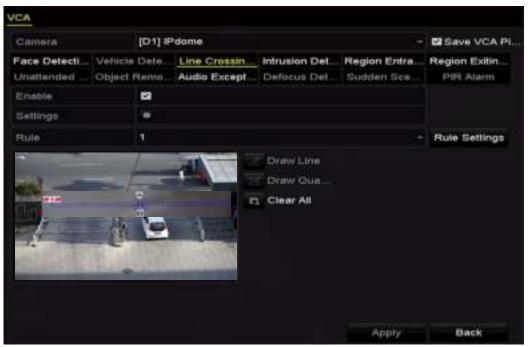


Figure 10-6 Draw Line for Line Crossing Detection

Step 8 Click **Apply** to activate the settings.

10.4 Intrusion Detection

Purpose:

Intrusion detection function detects people, vehicle or other objects which enter and loiter in a pre-defined virtual region, and some certain actions can be taken when the alarm is triggered.

Step 1 Enter the VCA settings interface.

Menu> Camera> VCA

Step 2 Select the camera to configure the VCA.

You can click the checkbox of **Save VCA Picture** to save the captured pictures of VCA detection.

- Step 3 Select the VCA detection type to Intrusion Detection.
- Step 4 Check the **Enable** checkbox to enable this function.
- Step 5 Click to configure the trigger channel, arming schedule and linkage actions for the line crossing detection alarm.
- Step 6 Click the **Rule Settings** button to set the intrusion detection rules. Set the following parameters.
 - 1) **Threshold:** Range [1s-10s], the threshold for the time of the object loitering in the region. When the duration of the object in the defined detection area is longer than the set time, the alarm will be triggered.
 - 2) Click-and-drag the slider to set the detection sensitivity.
 - 3) **Sensitivity:** Range [1-100]. The value of the sensitivity defines the size of the object which can trigger the alarm. The higher the value is, the more easily the detection alarm can be triggered.
 - 4) **Percentage:** Range [1-100]. Percentage defines the ratio of the in-region part of the object which can trigger the alarm. For example, if the percentage is set as 50%, when the object enters the region and occupies half of the whole region, the alarm is triggered.

No.	n Geronika (n. 1996). Series (n. 1996).		
<u>1997</u>	•		
Time Threshold (s)		5	
Sensitivity		50	÷
Percentage		0	0

Figure 10-7 Set Intrusion Crossing Detection Rules

5) Click-**OK** to save the rule settings and back to the line crossing detection settings interface.

Step 7 Click and draw a quadrilateral in the preview window by specifying four vertexes of the detection region, and right click to complete drawing. Only one region can be configured.

You can use the I to clear the existing virtual line and re-draw it.



Up to 4 rules can be configured.



Figure 10-8 Draw Area for Intrusion Detection

Step 8 Click Apply to save the settings.

10.5 Region Entrance Detection

Purpose:

Region entrance detection function detects people, vehicle or other objects which enter a pre-defined virtual region from the outside place, and some certain actions can be taken when the alarm is triggered.

Step 1 Enter the VCA settings interface.

Menu> Camera> VCA

Step 2 Select the camera to configure the VCA.

You can click the checkbox of **Save VCA Picture** to save the captured pictures of VCA detection.

Step 3 Select the VCA detection type to Region Entrance Detection.

- Step 4 Check the **Enable** checkbox to enable this function.
- Step 5 Click to configure the trigger channel, arming schedule and linkage actions for the line crossing detection alarm.

Step 6 Click the **Rule Settings** button to set the sensitivity of the region entrance detection.

Sensitivity: Range [0-100]. The higher the value is, the more easily the detection alarm can be triggered.

Step 7 Click and draw a quadrilateral in the preview window by specifying four vertexes of the detection region, and right click to complete drawing. Only one region can be configured.

You can use the **I** to clear the existing virtual line and re-draw it.

Camera	[D1] ch	an2			Save VCA PI.
Face Detecti	Vehicle Dete	Line Crossin	Intrusion Det	Region Entra	Region Exitin
Unattended	Object Remo	Audio Except	Defocus Del	Sudden Sce	PIR Alarm
Enable	23				
Settings					
Rule	1				Rule Settings
			Draw Qua Clear All		

Figure 10-9 Set Region Entrance Detection



Up to 4 rules can be configured.

Step 8 Click Apply to save the settings.

10.6 Region Exiting Detection

Purpose:

Region exiting detection function detects people, vehicle or other objects which exit from a pre-defined virtual region, and some certain actions can be taken when the alarm is triggered.



- Please refer to the *Chapter 9.5 Region Entrance Detection* for operating steps to configure the region exiting detection.
- Up to 4 rules can be configured.

10.7 Unattended Baggage Detection

Purpose:

Unattended baggage detection function detects the objects left over in the pre-defined region such as the baggage, purse, dangerous materials, etc., and a series of actions can be taken when the alarm is triggered.

- Please refer to the *Chapter 9.4 Intrusion Detection* for operating steps to configure the unattended baggage detection.
- The **Threshold**[5s-20s] in the Rule Settings defines the time of the objects left over in the region. If you set the value as 10, alarm is triggered after the object is left and stay in the region for 10s. And the **Sensitivity** defines the similarity degree of the background image. Usually, when the sensitivity is high, a very small object left in the region can trigger the alarm.
- Up to 4 rules can be configured.

10.8 Object Removal Detection

Purpose:

Object removal detection function detects the objects removed from the pre-defined region, such as the exhibits on display, and a series of actions can be taken when the alarm is triggered.

- Please refer to the *Chapter 9.4 Intrusion Detection* for operating steps to configure the object removal detection.
- The **Threshold** [5s-20s] in the Rule Settings defines the time of the objects removed from the region. If you set the value as 10, alarm is triggered after the object disappears from the region for 10s. And the **Sensitivity** defines the similarity degree of the background image. Usually, when the sensitivity is high, a very small object taken from the region can trigger the alarm.
- Up to 4 rules can be configured.

10.9 Audio Exception Detection

Purpose:

Audio exception detection function detects the abnormal sounds in the surveillance scene, such as the sudden increase / decrease of the sound intensity, and some certain actions can be taken when the alarm is triggered.

Step 1 Enter the VCA settings interface.

Menu> Camera> VCA

Step 2 Select the camera to configure the VCA.

You can click the checkbox of **Save VCA Picture** to save the captured pictures of VCA detection.

Step 3 Select the VCA detection type to Audio Exception Detection.

- Step 4 Click detection alarm.
- Step 5 Click the **Rule Settings** button to set the audio exception rules.



Figure 10-10 Set Audio Exception Detection Rules

- 1) Check the checkbox of Audio Input Exception to enable the audio loss detection function.
- 2) Check the checkbox of **Sudden Increase of Sound Intensity Detection** to detect the sound steep rise in the surveillance scene. You can set the detection sensitivity and threshold for sound steep rise.

Sensitivity: Range [1-100], the smaller the value is, the more severe the change should be to trigger the detection.

Sound Intensity Threshold: Range [1-100], it can filter the sound in the environment, the louder the environment sound, the higher the value should be. You can adjust it according to the real environment.

3) Check the checkbox of **Sudden Decrease of Sound Intensity Detection** to detect the sound steep drop in the surveillance scene. You can set the detection sensitivity[1-100] for sound steep drop.

Step 6 Click **Apply** to activate the settings.

10.10 Sudden Scene Change Detection

Purpose:

Scene change detection function detects the change of surveillance environment affected by the external factors; such as the intentional rotation of the camera, and some certain actions can be taken when the alarm is triggered.

- Please refer to the *Chapter 9.2 Face Detection* for operating steps to configure the scene change detection.
- The **Sensitivity** in the Rule Settings ranges from 1 to 100, and the higher the value is, the more easily the change of scene can trigger the alarm.

10.11 Defocus Detection

Purpose:

The image blur caused by defocus of the lens can be detected, and some certain actions can be taken when the alarm is triggered.

- Please refer to the *Chapter 9.2 Face Detection* for operating steps to configure the defocus detection.
- The **Sensitivity** in the Rule Settings ranges from 1 to 100, and the higher the value is, the more easily the defocus image can trigger the alarm.

10.12 PIR Alarm

Purpose:

A PIR (Passive Infrared) alarm is triggered when an intruder moves within the detector's field of view. The heat energy dissipated by a person, or any other warm blooded creature such as dogs, cats, etc., can be detected.

Step 1 Enter the VCA settings interface.

Menu> Camera> VCA

Step 2 Select the camera to configure the VCA.

You can click the checkbox of **Save VCA Picture** to save the captured pictures of VCA detection.

- Step 3 Select the VCA detection type to **PIR Alarm**.
- Step 4 Click store to configure the trigger channel, arming schedule and linkage action for the PIR alarm.
- Step 5 Click the **Rule Settings** button to set the rules. Please refer to the *Chapter 9.2 Face Detection* for instructions.

Step 6 Click **Apply** to activate the settings.

Chapter 11 VCA Search

With the configured VCA detection, the NVR supports the VCA search for the behavior analysis, face capture, people counting and heat map results.

11.1 Face Search

Purpose:

When there are detected face picture captured and saved in HDD, you can enter the Face Search interface to search the picture and play the picture related video file according to the specified conditions.

Before you start:

Please refer to *Chapter 10.1* Face Detection for configuring the face detection.

Step 1 Enter the Face Search interface.

Menu >VCA Search > Face Search

Step 2 Select the camera (s) for the face search.

P Camera	ED1	202	ED3	13 04	BDS	2 D6	207	2 06	
Start Time		11-12-3	2014		-	00:00:00			
End Time		02-12-3	2015			23:59:59			

Figure 11-1 Face Search

Step 3 Specify the start time and end time for search the captured face pictures or video files.

Step 4 Click **Search** to start searching. The search results of face detection pictures are displayed in list or in chart.



Figure 11-2 Face Search Interface

Step 5 Play the face picture related video file.

You can double click on a face picture to play its related video file in the view window on the top right, or select a picture item and click et to play it.

You can also click 🔲 to stop the playing, or click 💷 / 🔤 to play the previous/next file.

Step 6 If you want to export the captured face pictures to local storage device, connect the storage device to the device and click **Export All** to enter the Export interface.

Click **Export** to export all face pictures to the storage device.

Please refer to *Chapter7 Backup* for the operation of exporting files.

	Ex	port			
Device Neme USB	Flesh Disk 1+1	- 1.00P4		i Bi	trest
Name	Size Type	Erift Date		Delet	e Play
a ch09_2014102916	406.00MD File	10-29-2014 10:10:56			
E ch13_2014001909	2707,10KB File	09-19-2014 15:42:20			
Pies Space	5412.00MB				
	New Folder	Format Export	1	C	Incel

Figure 11-3 Export Files

11.2 Behavior Search

Purpose:

The behavior analysis detects a series of suspicious behavior based on VCA detection, and certain linkage methods will be enabled if the alarm is triggered.

Step 1 Enter the **Behavior Search** interface.

Menu>VCA Search> Behavior Search

Step 2 Select the camera (s) for the behavior search.

Step 3 Specify the start time and end time for searching the matched pictures.

P Camera	2 01	B D2	2 D3	E 04	206	2 D6	207	D B	
Start Time		11-12-3	2014			00.00.00			
End Tixle		02-12-3	2015			23:59:59			•
Тури		All							

Figure 11-4 Behavior Search Interface

Step 4 Select the VCA detection type from the dropdown list, including the line crossing detection, intrusion detection, unattended baggage detection, object removal detection, region entrance detection, region exiting detection, parking detection, loitering detection, people gathering detection and fast moving detection.

Step 5 Click **Search** to start searching. The search results of pictures are displayed in list or in chart.

Cam	Start Time	Behavior Type	Play	The cost of the
DI	12-12-2014 12:32.34	Region Exiling Detection	ů.	And the Party of t
103	12-12-2014 15:10:44	Region Exting Detection		
103	12-12-2014 15:11:21	intrusion Detection.	۰	State of the local division of the local div
103	12-12-2014 16:55:30	Region Exting Detection		
103	12-12-2014 16:69-18	Region Exting Detection	۰	
103	12-12-2014 17:05:05	Region Exting Detection	۰	Real and a second se
103	12-12-2014 17:09:54	Region Exting Detection	۲	
103	12-12-2014 17:14:40	Region Exting Detection	۲	
Tidad 6	5 14			
Total: 8	Pt:1/1			
Pictur	e Record		Export All	Export Beck

Figure 11-5 Behavior Search Results

Step 6 Play the behavior analysis picture related video file.

You can double click on a picture from the list to play its related video file in the view window on the top right, or select a picture item and click is to play it.

You can also click 🛄 to stop the playing, or click 🔤 / 🔤 to play the previous/next file.

Step 7 If you want to export the captured pictures to local storage device, connect the storage device to the device and click **Export All** to enter the Export interface.

Click **Export** to export all pictures to the storage device.

11.3 Plate Search

Purpose:

You can search and view the matched captured vehicle plate picture and related information according to the plate searching conditions including the start time/end time, country and plate No..

Step 1 Enter the **Plate Search** interface.

Menu>VCA Search> Plate Search

Step 2 Select the camera (s) for the plate search.

Step 3 Specify the start time and end time for searching the matched plate pictures.

IP Camera	⊠D1	⊠ D2	∎D3	⊠D4	2 D5	₽ D6	D 7	⊠ D8
Start Time		03-27-2	2015		-	00:00:00		
End Time		03-27-2	2015		-	23:59:59		
Country		Ali						
Plate No.								
						Sea	rch	Back

Figure 11-6 Plate Search

Step 4 Select the country from the drop-down list for searching the location of the vehicle plate.

Step 5 Input the plate No. in the field for search.

Step 6 Click **Search** to start searching. The search results of detected vehicle plate pictures are displayed in list or in chart.

Please refer to the Step7-Step8 of Section 10.1 Face Search for the operation of the search results.

11.4 People Counting

Purpose:

The Counting is used to calculate the number of people entered or left a certain configured area and form in daily/weekly/monthly/annual reports for analysis.

Step 1 Enter the Counting interface.

- Step 2 Menu>VCA Search>Counting
- Step 3 Select the camera for the people counting.
- Step 4 Select the report type to Daily Report, Weekly Report, Monthly Report or Annual Report.
- Step 5 Set the statistics time.
- Step 6 Click the **Counting** button to start people counting statistics.

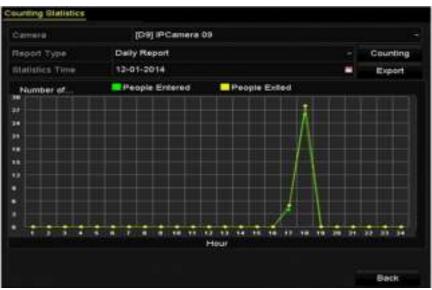


Figure 11-7 People Counting Interface

Step 7 You can click the **Export** button to export the statistics report in excel format.

11.5 Heat Map

Purpose:

Heat map is a graphical representation of data represented by colors. The heat map function is usually used to analyze the visit times and dwell time of customers in a configured area.

The heat map function must be supported by the connected IP camera and the corresponding configuration must be set.

Step 1 Enter the Heat Map interface.

Menu > VCA Search > Heat Map

- Step 2 Select the camera for the heat map processing.
- Step 3 Select the report type to Daily Report, Weekly Report, Monthly Report or Annual Report.

Step 4 Set the statistics time.

Heat Map		
Camera	[D3] IPCamera 03	
Report Type	Daily Report	Counting
Statistics Time	12-17-2014	 Export
		Back

Figure 11-8 Heat Map Interface

Step 5 Click the **Counting** button to export the report data and start heat map statistics, and the results are displayed in graphics marked in different colors.

As shown in the figure above, red color block (255, 0, 0) indicates the most welcome area, and blue color block (0, 0, 255) indicates the less-popular area.

Step 6 You can click the **Export** button to export the statistics report in excel format.

11.6 Advanced Search

The DS-7600/7700/8600/9600-I (/P) series NVR supports the advanced search for fire/ship/temperature/temperature difference detection triggered alarm and the recorded video files and pictures.

Before you start

To get the smart search result, the corresponding fire/ship temperature/temperature difference type must be enabled and configured on the connected thermal network camera (Configuration > Advanced Configuration > Smart Event). Please refer to the user manual of the thermal network camera for details.

Step 1 Enter the Advanced Search interface.

Menu > VCA Search > Advanced Search

Step 2 Select the camera (s) for the advanced search.

Start Time End Time Type Record Mode	06-20-3 06-24-3 Fire De Main S	2016 Hection	3	00 00 00 23 59 59		
Турн	Fire De	tection		23.59.59		100 C
Record Mode	Main S	tream				

Figure 11-9 Advanced Search

Step 3 Specify the start time and end time for searching the thermal imaging detection results.

- Step 4 Select the type to fire detection, ship detection, temperature detection and temperature difference detection.
- Step 5 Click Search to start searching. The search results are displayed in list or in chart.

Network Video Recorder User Manual

thank 1		Advanced Ser	lich		
Bean!	Start Time	Thermal Imaging Type	Piery		Chargest water
e o e	06-24-2010 01:49:35	Fire Delection			
an)	06-24-2016 01:49:41	Fire Detection			100 C 100 C
2 03	06-24-2016 01:42:49	Pire Detection			
B BS	06-24-2016 02:03:19	Fire Detection			
D DO	06-24-2010 05:04:53	Fire Detection			
s ina	06-24-2016 06:04:52	Fire Detection			10.01.0.00
203	06-24-2010 05:04:54	Fire Detection			
201	06-24-2016 05:04:54	Fee Detection			
000	06-24-2016 05:04:54	Fire Detection			
1 03	06-24-2018-05:04:56	Fire Detection			
en:	05-24-2016 00:04:56	Fire Detection	0		
803	06-24-2016 05:04:59	Fire Detection			
203	86-24-2016 05:04:59	Fire Detection		-	
Total 21	P: 1/1				
Pictor	e BRecord		Esper	(AL)	Expert Back

Figure 11-10 Search Results

Step 6 You can click the **Export** button to export the statistics report in excel format.

Chapter 12 Network Settings

12.1 Configuring General Settings

Purpose:

Network settings must be properly configured before you operate NVR over network.

Step 1 Enter the Network Settings interface.

Menu >Configuration>Network

Step 2 Select the General tab.

General Platform Acces	DDNS N	TP Email	SNMP NAT	More Settings	•
NIC Type	1004/1000//1000	M Self-edaptiv	•		
Enable DHCP	2				
IPv4 Addre_ 10 16 .1	-26	IPv6 Addre.	fe00:269.6c	ff:fe2a:fb50/64	
IPv4 Subn. 255 255 255	.0	IPv6 Addre.			
IPv4 Defa., 10 .16 .1	254	IPv6 Defa			
MAC Address	00:69 6c:2a fb:0	10			
MTU(Bytes)	1500				
Enable DNS DHCP	-				
Preferred DNS Server	10.1.7.68				
Alternate DNS Server	10.1.7.77				
			Apply	Back	

Figure 12-1 Network Settings Interface

Step 3 In the **General Settings** interface, you can configure the following settings: Working Mode, NIC Type, IPv4 Address, IPv4 Gateway, MTU, DNS DHCP and DNS Server.

The valid value range of MTU is 500 - 9676.

If the DHCP server is available, you can click the checkbox of **DHCP** to automatically obtain an IP address and other network settings from that server.

- Two self-adaptive 10M/100M/1000M network interfaces for DS-9600NI-I8, DS-9600NI-I16, DS-8600NI-K8, DS-7700NI-I4 and DS-7700NI-K4, and the multi-address and network fault tolerance working modes are configurable.
- One self-adaptive 10M/100M/1000M network interface for DS-7600NI-K2/I2(/P), DS-7700NI-I4/P and DS-7700NI-K4/P.
- One self-adaptive 10M/100M network interface for DS-7600NI-K1 (/P).
- For the DS-7600NI-I(K)/P and DS-7700NI-I(I)/P series NVR, you need to configure the internal NIC address, so that IP addresses are assigned to the cameras connected to the PoE interfaces.

Step 4 After having configured the general settings, click **Apply** button to save the settings.

Working Mode

Two 10M/100M/1000M NIC cards are provided and it allows the device to work in the Multi-address and Net-fault Tolerance modes.

Multi-address Mode: The parameters of the two NIC cards can be configured independently. You can select LAN1 or LAN2 in the NIC type field for parameter settings.

You can select one NIC card as default route. And then the system is connecting with the extranet the data will be forwarded through the default route.

Net-fault Tolerance Mode: The two NIC cards use the same IP address, and you can select the Main NIC to LAN1 or LAN2. By this way, in case of one NIC card failure, the device will automatically enable the other standby NIC card so as to ensure the normal running of the whole system.

12.2 Configuring Advanced Settings

12.2.1 Configuring Hik-Connect

Purpose

Hik-Connect enables the mobile phone application and the service platform page (www.hik-connect.com) to access and manage your connected NVR, providing a convenient remote access to the surveillance system.

The Hik-Connect can be enabled via operation on SADP software, GUI and Web browser. We introduce the operation steps on GUI in this section.

Step 1 Enter the Network Settings interface.

Menu > Configuration > Network

Step 2 Select the **Platform Access** tab to enter the Hik-Connect Settings interface.

Enable	8		
Access Type	Hik-Connect		
Server Address		Custom	
Enable Steam Encryption			
Weithoutine Chile			
Slietus	Offline(0x1003)		
		Arety	Deck

Figure 12-2 Hik-Connect Settings

Step 3 Check the **Enable** checkbox to activate the function. The **Service Terms** interface pops up as below.



Figure 12-3 Service Terms

- 1) Create the verification code and enter the code in the **Verification Code** text field.
- 2) Check the checkbox of The Hik-Connect service will require internet access. Please read Service Terms and Privacy Statement before enabling the service.
- 3) Scan the QR code on the interface to read the Service Terms and the Privacy Statement.
- 4) Click **OK** to save the settings and return to the Hik-Connect interface.

- Hik-Connect is disabled by default.
- The verification code is empty when the device leaves factory.
- The verification code must contain 6 to 12 letters or numbers and is case sensitive.
- Every time you enable Hik-Connect, the Service Terms interface pops up and you should check the checkbox before enabling it.

Step 4 (Optional) Check the checkbox of Custom and input the Server Address.

Step 5 (Optional) Check the checkbox of **Enable Stream Encryption**. After this feature is enabled, the verification code is required for remote access and live view.

You can use the scanning tool of your phone to quickly get the code by scanning the QR code below.

Enable	٥	
Access Type	Hilo-Connect	
Server Address		Custom
Enable Stream Encryption	٥	
Verification Code	asdigh	
Status	Offine	

Figure 12-4 Hik-Connect Settings Interface

Step 6 Click the **Apply** button to save the settings.

After configuration, you can access and manage the NVR by your mobile phone on which the Hik-Connect application is installed or by the website (www.hik-connect.com).

Please refer to the help file on the official website (www.hik-connect.com) and the *Hik-Connect Mobile Client User Manual* for adding the device to Hik-Connect and more operation instructions.

12.2.2 Configuring DDNS

Purpose:

You can set the Dynamic DNS (DDNS) for network access.

Prior registration with your ISP is required before configuring the system to use DDNS.

Step 1 Enter the Network Settings interface.

Menu > Configuration > Network

Step 2 Select the **DDNS** tab to enter the DDNS Settings interface.

Step 3 Check the **DDNS** checkbox to enable this feature.

Step 4 Select **DDNS Type**. Three DDNS types are selectable: DynDNS, PeanutHull, and NO-IP.

•DynDNS:

- 1) Enter Server Address for DynDNS (i.e. members.dyndns.org).
- 2) In the **Device Domain Name** text field, enter the domain obtained from the DynDNS website.
- 3) Enter the User Name and Password registered in the DynDNS website.

Enable DONE	8	
DONS Type	DynDNS	
Area/Country	Custon	
Senior Address	members.dyndns.org	
Device Domain Name	123.dyndria.com	
Status	DDNS is disabled.	
User Name	test	
Password		

Figure 12-5 DynDNS Settings Interface

•PeanutHull: Enter the User Name and Password obtained from the PeanutHull website.

Enable DDNS	8	
DDNS Type	Peanuthul	
Area/Country	Clustern	
Server Address		
Device Domain Name		
status	DDNS is disabled.	
Liset Nome	123.gcip.net	
Password	annes (

Figure 12-6 PeanutHull Settings Interface

•NO-IP:

Enter the account information in the corresponding fields. Refer to the DynDNS settings.

- 5) Enter Server Address for NO-IP.
- In the Device Domain Name text field, enter the domain obtained from the NO-IP website (www.no-ip.com).
- 7) Enter the User Name and Password registered in the NO-IP website.

Enoble DONI	2	
DDNS Type	NO-IP	
Area/Country	Custom	
Berver Aildress	no-lp.org	
Device Domain Name	123.no-ip.org	
tiliadus.	ODNS is disabled.	
Liner Name	test	
Pastword	******	

Figure 12-7 NO-IP Settings Interface

Step 5 Click the Apply button to save and exit the interface.

12.2.3 Configuring NTP Server

Purpose:

A Network Time Protocol (NTP) Server can be configured on your NVR to ensure the accuracy of system date/time.

Step 1 Enter the Network Settings interface.

Menu >Configuration> Network

Step 2 Select the NTP tab to enter the NTP Settings interface, as shown in Figure 12-8.

Emploie W101	0	
Smorest Dailo		
ALT P. Service		
NETP Parts	129	

Figure 12-8 NTP Settings Interface

Step 3 Check the **Enable NTP** checkbox to enable this feature.

Step 4 Configure the following NTP settings:

Interval: Time interval between the two synchronizing actions with NTP server. The unit is minute.

NTP Server: IP address of NTP server.

NTP Port: Port of NTP server.

Step 5 Click the Apply button to save and exit the interface.

The time synchronization interval can be set from1 to 10080min, and the default value is 60min. If the NVR is connected to a public network, you should use a NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44). If the NVR is setup in a more customized network, NTP software can be used to establish a NTP server used for time synchronization.

12.2.4 Configuring SNMP

Purpose:

You can use SNMP protocol to get device status and parameters related information.

Step 1 Enter the Network Settings interface.

Menu >Configuration> Network

Step 2 Select the **SNMP** tab to enter the SNMP Settings interface, as shown in Figure 12-9.



Figure 12-9 SNMP Settings Interface

- Step 3 Check the **SNMP** checkbox to enable this feature.
- Step 4 The enabling of SNMP may cause security problems. Click **Yes** to continue or **No** to cancel the operation.



Figure 12-10 SNMP Settings Interface

Step 5 When you choose the Yes option in step4, configure the following SNMP settings:

Trap Address: IP Address of SNMP host.

Trap Port: Port of SNMP host.

Step 6 Click the **Apply** button to save and exit the interface.

Before setting the SNMP, please download the SNMP software and manage to receive the device information via SNMP port. By setting the Trap Address, the NVR is allowed to send the alarm event and exception message to the surveillance center.

12.2.5 Configuring More Settings

Step 1 Enter the Network Settings interface.

Menu > Configuration > Network

Step 2 Select the More Settings tab to enter the More Settings interface.

Allers Heat P		
Alarm Host Port	0	
Server Part	6000	
HETPPot	80	
MuthcestiP		
RTSP Put	654	

Figure 12-11 More Settings Interface

Step 3 Configure the remote alarm host, server port, HTTP port, multicast, RTSP port.

• Alarm Host IP/Port: With a remote alarm host configured, the device will send the alarm event or exception message to the host when an alarm is triggered. The remote alarm host must have the CMS (Client Management System) software installed.

The **Alarm Host IP** refers to the IP address of the remote PC on which the CMS (Client Management System) software (e.g., iVMS-4200) is installed, and the **Alarm Host Port** must be the same as the alarm monitoring port configured in the software (default port is 7200).

 Multicast IP: The multicast can be configured to realize live view for more than the maximum number of cameras through network. A multicast address spans the Class-D IP range of 224.0.0.0 to 239.255.255.255. It is recommended to use the IP address ranging from 239.252.0.0 to 239.255.255.255.

When adding a device to the CMS (Client Management System) software, the multicast address must be the same as the device's multicast IP.

 RTSP Port: The RTSP (Real Time Streaming Protocol) is a network control protocol designed for use in entertainment and communications systems to control streaming media servers.

Enter the RTSP port in the text field of **RTSP Port**. The default RTSP port is 554, and you can change it according to different requirements.

• Server Port and HTTP Port: Enter the Server Port and HTTP Port in the text fields. The default Server Port is 8000 and the HTTP Port is 80, and you can change them according to different requirements.

The Server Port should be set to the range of 2000-65535 and it is used for remote client software access. The HTTP port is used for remote IE access.

Alarm Hast IR.	192,0.0.10
Aam Heat Fort	7200
Server Pari	8000
HITTP For	60
Mutteast @	239.252.2.50
RTOP For	554

Figure 12-12 Configure More Settings

Step 4 Click the **Apply** button to save and exit the interface.

12.2.6 Configuring HTTPS Port

Purpose:

HTTPS provides authentication of the web site and associated web server that one is communicating with, which protects against Man-in-the-middle attacks. Perform the following steps to set the port number of https.

Example:

If you set the port number as 443 and the IP address is 192.0.0.64, you may access the device by inputting *https://192.0.0.64:443* via the web browser.

The HTTPS port can be only configured through the web browser.

- Step 1 Open web browser, input the IP address of device, and the web server will select the language automatically according to the system language and maximize the web browser.
- Step 2 Input the correct user name and password, and click Login button to log in the device.
- Step 3 Enter the HTTPS settings interface.
- Step 4 Configuration > Remote Configuration > Network Settings > HTTPS

Step 5 Create the self-signed certificate or authorized certificate.

Create	Create Self-signed Certificate	
Crede	Create Certificate Request	
hilds.burid	Centrals	
Certificate Patt		
Cleated Raque		Land Lands
THERE AND	Lana -	

Figure 12-13 HTTPS Settings

OPTION 1: Create the self-signed certificate

1) Click the **Create** button to create the following dialog box.

Country	ON .	* example	chi
HostanelP	172.0.23.07		
Validity	200	Ciar" rang	# 1-6008i
Password			
Blate of province			
Locally			
Organization			
Organicational Unit			
Email			
		08	Catoli

Figure 12-14 Create Self-signed Certificate

2) Enter the country, host name/IP, validity and other information.

3) Click **OK** to save the settings.

OPTION 2: Create the authorized certificate

- 1) Click the **Create** button to create the certificate request.
- 2) Download the certificate request and submit it to the trusted certificate authority for signature.
- 3) After receiving the signed valid certificate, import the certificate to the device.
- Step 6 There will be the certificate information after you successfully create and install the certificate.

Installed Certificate		
Installed Certificate	C=CN, HIP=172.6.23.110	Delete
Property	Subject C=CN, H/IP=172.6.23.110 Issuer: C=CN, H/IP=172.6.23.110 Validity: 2013-06-28 10:42:40 - 2013-05-30 10:42:40	

Figure 12-15 Installed Certificate Property

Step 7 Check the checkbox to enable the HTTPS function.

Step 8 Click the **Save** button to save the settings.

12.2.7 Configuring Email

Purpose:

The system can be configured to send an Email notification to all designated users if an alarm event is detected, etc., an alarm or motion event is detected or the administrator password is changed.

Before configuring the Email settings, the NVR must be connected to a local area network (LAN) that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notification.

Step 1 Enter the Network Settings interface.

Menu >Configuration> Network

Step 2 Set the IPv4 Address, IPv4 Subnet Mask, IPv4 Gateway and the Preferred DNS Server in the Network Settings menu, as shown in Figure 12-16.

NIC Type				10M/100M/1	1000M Self-adaptive	
Enable CHC	Þ			52		
Pv4 Addie				,26	IPvG Addre.	fe00::269:5cff fe2e fb08/64
IPvil subn	255	266	255		IPvG Addre.	
IPset Defa		.10		294	IPvc Defa	
MAC Address				00:69.6c.2e	16 90	
MTU(Dyles)				1500		
Enable DNS	DHC	P.		62		
Preferred QI	NIE IER	rver.		10.1.7.85		
Atemate Dr.	m ser	Sole:		10.1.7.77		

Figure 12-16 Network Settings Interface

Step 3 Click **Apply** to save the settings.

Step 4 Select the Email tab to enter the Email Settings interface.

Enable Se 📮		SMTP Ser.		
Liter Name		SMTP Port	25	
Pannowit		Enable SS.,	<u> </u>	
Tender				
Sender's Address				
Select Receivers	Receiver 1			
Receiver				
Receiver's Address				
Enable Atlasmed Picture				
Inderval				

Figure 12-17 Email Settings Interface

Step 5 Configure the following Email settings:

Enable Server Authentication (optional): Check the checkbox to enable the server authentication feature.

User Name: The user name of sender's account registered on the SMTP server.

Password: The password of sender's account registered on the SMTP server.

SMTP Server: The SMTP Server IP address or host name (e.g., smtp.263xmail.com).

SMTP Port: The SMTP port. The default TCP/IP port used for SMTP is 25.

Enable SSL/TLS (optional): Click the checkbox to enable SSL/TLS if required by the SMTP server.

Sender: The name of sender.

Sender's Address: The Email address of sender.

Select Receivers: Select the receiver. Up to 3 receivers can be configured.

Receiver: The name of user to be notified.

Receiver's Address: The Email address of user to be notified.

Enable Attached Picture: Check the checkbox of **Enable Attached Picture** if you want to send email with attached alarm images. The interval is the time of two adjacent alarm images. You can also set SMTP port and enable SSL here.

Interval: The interval refers to the time between two actions of sending attached pictures.

Step 6 Click **Apply** button to save the Email settings.

Step 7 You can click **Test** button to test whether your Email settings work.

12.2.8 Configuring NAT

Purpose:

Two ways are provided for port mapping to realize the remote access via the cross-segment network, UPnP[™] and manual mapping.

● UPnP[™]

Universal Plug and Play (UPnP[™]) can permit the device seamlessly discover the presence of other network devices on the network and establish functional network services for data sharing, communications, etc. You can use the UPnP[™] function to enable the fast connection of the device to the WAN via a router without port mapping.

Before you start:

If you want to enable the UPnP[™] function of the device, you must enable the UPnP[™] function of the router to which your device is connected. When the network working mode of the device is set as multi-address, the Default Route of the device should be in the same network segment as that of the LAN IP address of the router.

Step 1 Enter the Network Settings interface.

Menu > Configuration > Network

Step 2 Select the **NAT** tab to enter the port mapping interface.

Enable UPnP		-				
Port Type	Edit	External Port	Mapping IP Address	Port	Status	
Server Pert						
HTTP Port						
RTSP Port						
HTTPS Port		443		-443		
						Refresh

Figure 12-18 UPnP[™] Settings Interface

Step 3 Check 🖃 checkbox to enable UPnP™.

Step 4 Select the Mapping Type as Manual or Auto in the drop-down list.

OPTION 1: Auto

If you select Auto, the Port Mapping items are read-only, and the external ports are set by the router automatically.

- 1) Select **Auto** in the drop-down list of Mapping Type.
- 2) Click **Apply** button to save the settings.
- 3) You can click **Refresh** button to get the latest status of the port mapping.

Enable UPsP		•				
Mapping Type		Auto				
Port Type	Edit	External Port	Mapping IP Address	Port	Status	
						Refresh

Figure 12-19 UPnP[™] Settings Finished-Auto

OPTION 2: Manual

If you select Manual as the mapping type, you can edit the external port on your demand by clicking 🚺 to activate the External Port Settings dialog box.

Steps:

- 1) Select Manual in the drop-down list of Mapping Type.
- 2) Click dialog box. Configure the external port No. for server port, http port, RTSP port and https port respectively.

- You can use the default port No., or change it according to actual requirements.
- External Port indicates the port No. for port mapping in the router.
- The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of the other ports should be between 1 and 65535 and the value must be different from each other. If multiple devices are configured for the UPnP[™] settings under the same router, the value of the port No. for each device should be unique.

	Edernal Port	Settings	
Prort Type	Server Port		
External Port	8001		

Figure 12-20 External Port Settings Dialog Box

- 3) Click **Apply** button to save the settings.
- 4) You can click **Refresh** button to get the latest status of the port mapping.

Interprine Taxin		Moniant				
Port Type	Edit	External Port	Mapping P Address	Pot	Status	
Service Plat	17	90022	172.8.21.31	0000	Actives	
HTTP Port		00	172.0.21.31	00	Active	
MISP Plut		554	172.6.21.31	554	Active	
HTTPS Part		443	172.6.21.31	443	Active	

Figure 12-21 UPnP[™] Settings Finished-Manual

Step 5 Enter the virtual server setting page of router; fill in the blank of Internal Source Port with the internal port value, the blank of External Source Port with the external port value, and other required contents.

Each item should be corresponding with the device port, including server port, http port, RTSP port and https port.

Delete	External Source Port		ol	Internal Source IP	Internal Source Port	Applica	tion
	81	TCP	¥.	192.168.251.101	80	HTTP	4

Figure 12-22 Setting Virtual Server Item

The above virtual server setting interface is for reference only, it may be different due to different router manufactures. Please contact the manufacture of router if you have any problems with setting virtual server.

12.2.9 Configuring Virtual Host

Purpose:

You can directly get access to the IP camera management interface after enabling this function.

The Virtual host function can be only configured through the web browser.

Step 1 Enter the Advanced settings interface, as shown in the Figure 12-23.

Configuration > Network > Advanced Settings > Other

Advanced	
Alarm Host IP	
Alarm Host Port	0
Multicast Address	
Enable Virtual Host	
Save	

Figure 12-23 Advanced Settings Interface

Step 2 Check the checkbox of the Enable Virtual Host.

Step 3 Click the **Save** button to save the setting.

Step 4 Enter the IP camera management interface of NVR. The Connect column appears on the right-most side of the camera list, as shown in the Figure 12-24.

Configuration > Remote Configuration > Camera Management > IP Camera

ARE			est Add Seators Pr			
Chevrat Ma	# Cartesis Address	Chaneerter	ManagemeenPark	(MAIN)	Pattern	Convert
Diday	1721022.94	+	11	Online	GNVE	100-1172 6 22 84 83
1043	1128.23.121		8000	URightest Alexand	10035200	Heb.(1172,5.23,123,03
Cides.	4732-0.102.10		6010	(100 e	1480/058(284	100.0172.0.10.13.02
1094	1724,012	+	8800	Orma	HEN/15XON	102122322

Figure 12-24 Connect to IP Camera

Step 5 Click the link and the page of IP camera management appears.

12.3 Checking Network Traffic

Purpose:

You can check the network traffic to obtain real-time information of NVR such as linking status, MTU, sending/receiving rate, etc.

Step 1 Enter the Network Traffic interface.

```
Menu > Maintenance > Net Detect
```



Figure 12-25 Network Traffic Interface

Step 2 You can view the sending rate and receiving rate information on the interface. The traffic data is refreshed every 1 second.

12.4 Configuring Network Detection

Purpose:

You can obtain network connecting status of NVR through the network detection function, including network delay, packet loss, etc.

12.4.1 Testing Network Delay and Packet Loss

Step 1 Enter the Network Traffic interface.

Menu >Maintenance>Net Detect

Step 2 Click the **Network Detection** tab to enter the Network Detection menu, as shown in Figure 12-26.

active Loss Time			
LANS			
tin 1726.288			Test
Export			
			Ratesh
172.6.21.64	2,78980ps		Export
	non 1726.23.6 Capurt	LAN1 1726-258 Capuel	LAN1 + 1726.23.0 Capuel -

Figure 12-26 Network Detection Interface

Step 3 Enter the destination address in the text field of **Destination Address**.

Step 4 Click **Test** button to start testing network delay and packet loss. The testing result pops up on the window. If the testing is failed, the error message box will pop up as well. Refer to Figure 12-27.

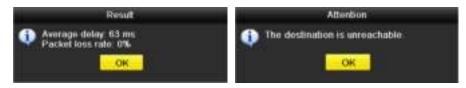 


Figure 12-27 Testing Result of Network Delay and Packet Loss

12.4.2 Exporting Network Packet

Purpose:

By connecting the NVR to network, the captured network data packet can be exported to USB-flash disk, SATA/eSATA, DVD-R/W and other local backup devices.

Step 1 Enter the Network Traffic interface.

Menu >Maintenance>Net Detect

Step 2 Click the Network Detection tab to enter the Network Detection interface.

Step 3 Select the backup device from the dropdown list of Device Name, as shown in Figure 12-28.

Click **Refresh** button if the connected local backup device cannot be displayed. When it fails to detect the backup device, please check whether it is compatible with the NVR. You can format the backup device if the format is incorrect.

Same VMC	LANI		
Destination 44	1120210		Test
Network Fischert	Expet		
Consta lagar	00011-0		Sector 1
LANI	133.6.21.64	2,780834pe	Expert

Figure 12-28 Export Network Packet

Step 4 Click **Export** button to start exporting.

Step 5 After the exporting is complete, click **OK** to finish the packet export, as shown in Figure 12-29.

Attention
Packet export succeeded, OK
OK Cancel

Figure 12-29 Packet Export Attention

Up to 1M data can be exported each time.

12.4.3 Checking the Network Status

Purpose:

You can also check the network status and quick set the network parameters in this interface.

Steps:

Click the **Status** button on the lower- right corner of the page.

termork Owing Pr	Colocitant Network Link advantigent Feel		
deermont	(and		
Destination Add			Test
Nitwork Packet 2			
Denna tagter			Participation of the second second
ANT	1728.22.100	attributes.	
	-tora in the	an and a second s	Expert

Figure 12-30 Network Status Checking

If the network is normal the following message box pops out.



Figure 12-31 Network Status Checking Result

If the message box pops out with other information instead of this one, you can click **Network** button to show the quick setting interface of the network parameters.

12.4.4 Checking Network Statistics

Purpose:

You can check the network status to obtain the real-time information of NVR.

Step 1 Enter the Network Detection interface.

Menu>Maintenance>Net Detect

Step 2 Choose the Network Stat. tab.

Туре	Bandwidth
IP Camera	9,216Kbps
Remote Live View	Iters
Remain Playback	Illen
Net Receive Idle	31Mbps
Net Send Idle	240Mbps
	Refresh
	toms

Figure 12-32 Network Stat. Interface

- Step 3 Check the bandwidth of IP Camera, bandwidth of Remote Live View, bandwidth of Remote Playback, bandwidth of Net Receive Idle and bandwidth of Net Send Idle.
- Step 4 You can click **Refresh** to get the newest status.

Chapter 13 RAID

This chapter is applicable for DS-9600NI-I8 and DS-9600NI-I16 series NVR.

13.1 Configuring Array

Purpose:

RAID (redundant array of independent disks) is a storage technology that combines multiple disk drive components into a logical unit. A RAID setup stores data over multiple hard disk drives to provide enough redundancy so that data can be recovered if one disk fails. Data is distributed across the drives in one of several ways called "RAID levels", depending on what level of redundancy and performance is required.

The NVR supports the disk array that is realized by software. You can enable the RAID function on your demand.

The DS-9600NI-I8 and DS-9600NI-I16 series NVR support the RAID0, RAID1, RAID5, RAID6 and RAID 10 array types.

Before you start:

Please install the HDD(s) properly and it is recommended to use the same enterprise-level HDDs (including model and capacity) for array creation and configuration so as to maintain reliable and stable running of the disks.

Introduction:

The NVR can store the data (such as record, picture, log information) in the HDD only after you have created the array or you have configured network HDD (refer to Chapter14.2 Managing Network HDD). Our device provides two ways for creating array, including one-touch configuration and manual configuration. The following flow chart shows the process of creating array.

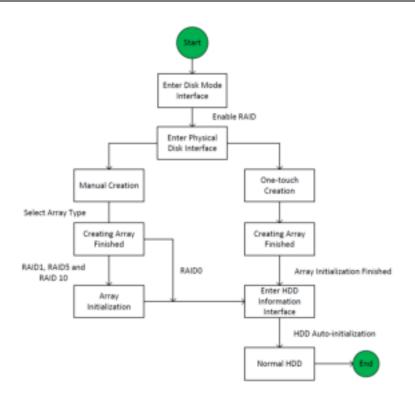


Figure 13-1 RAID Working Flow

13.1.2 Enable RAID

Purpose:

Perform the following steps to enable the RAID function, or the disk array cannot be created.

Use the enterprise-level HDDs to create the array.

• OPTION 1:

Enable the RAID function in the Wizard when the device startup, please refer to step 7 of Chapter 2.2.

• OPTION 2:

Enable the RAID function in the HDD Management Interface.

Step 1 Enter the disk mode configuration interface.

```
Menu > HDD > Advanced
```



Figure 13-2 Enable RAID Interface

Step 2 Check the checkbox of Enable RAID.

Step 3 Click the **Apply** button to save the settings.

13.1.3 One-touch Configuration


Purpose:

Through one-touch configuration, you can quickly create the disk array. By default, the array type to be created is RAID 5.

Before you start:

- The RAID function should be enabled, please refer to the Chapter 13.1.1 for details.
- As the default array type is RAID 5, please install at least 3 HDDs in you device.
- If more than 10 HDDs are installed, 2 arrays can be configured.

Step 1 Enter the RAID configuration interface.

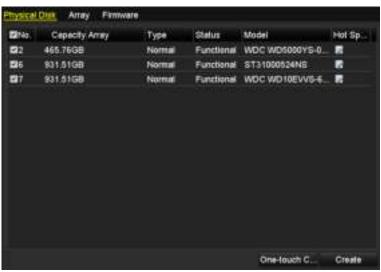

Menu > HDD > RAID

Figure 13-3 Physical Disk Interface

Step 2 Check the checkbox of corresponding HDD No. to select it.

Step 3 Click the **One-touch Create** button to enter the One-touch Array Configuration interface.



Figure 13-4 One-touch Array Configuration

Step 4 Edit the array name in the **Array Name** text filed and click **OK** button to start configuring array.

If you install 4 HDDs or above for one-touch configuration, a hot spare disk will be set by default. It is recommended to set hot spare disk for automatically rebuilding the array when the array is abnormal.

Step 5 When the array configuration is completed, click **OK** button in the pop-up message box to finish the settings.

Step 6 You can click **Array** tab to view the information of the successfully created array.

By default, one-touch configuration creates an array and a virtual disk.

Phys	ical Disk	Array Firmy	vare					
No	Name	Free Space	Physic Hot	Status	Level	Re	Dei	Task
1	array1_1	931/931G	267	Functi	RAID 5			Initialize (Fast)(R

Figure 13-5 Array Settings Interface

Step 7 A created array displays as an HDD in the HDD information interface.

	Capacity	Status	Property	Type	Free Space	Gr	Edit	D
						-	C.a.	.
= 1	931.52GB	Initializing 82%	RW	Агтау	OMB		-	-

Figure 13-6 HDD Information Interface

13.1.4 Manually Creating Array

Purpose:

You can manually create the array of RAID 0, RAID 1, RAID 5, RAID6 and RAID 10.

In this section, we take RAID 5 as an example to describe the manual configuration of array and virtual disk.

Step 1 Enter the Physical Disk Settings interface.

Menu > HDD > RAID > Physical Disk

hyseal	Dint Array Firmw	are			
No.	Capacity Array	Туре	Status	Model	Hot Sp
2 2	465.76GB	Normal	Functional	WDC WDS000YS-0_	
26	831.51GB	Normal	Functional	ST31000524NE	
817	931.51GB	Normal	Functional	WOC WD IGEVVS-6	
				One-louch C	Create

Figure 13-7 Physical Disk Settings Interface

Step 2 Click Creat button to enter the Create Array interface.



Table 13-1 Create Array Interface

Step 3 Edit the Array Name; set the RAID Level to RAID 0, RAID 1, RAID 5, RAID6 or RAID 10; select the Physical Disk that you want to configure array.

- If you choose RAID 0, at least 2 HDDs must be installed.
- If you choose RAID 1, 2 HDDs need to be configured for RAID 1.
- If you choose RAID 5, at least 3 HDDs must be installed.
- If you choose RAID 6, at least 4 HDDs must be installed.
- If you choose RAID 10, the number of HDDs installed should be even in the range of 4 to 16.

Step 4 Click OK button to create array.

If the number of HDDs you select is not compatible with the requirement of the RAID level, the error message box will pop up.



Figure 13-8 Error Message Box

Step 5 You can click Array tab to view the successfully created array.

No.	Name	Free Space	Physic Hot	Status	Level	Re.	Del	Task
1	array1_1	931/931G	267	Functi	RAID 5			Initialize (Fast)(R

Figure 13-9 Array Settings Interface

13.2 Rebuilding Array

Purpose:

The working status of array includes Functional, Degraded and Offline. By viewing the array status, you can take immediate and proper maintenance for the disks so as to ensure the high security and reliability of the data stored in the disk array.

When there is no disk loss in the array, the working status of array will change to Functional; when the number of lost disks has exceeded the limit, the working status of array will change to Offline; in other conditions, the working status is Degraded.

When the virtual disk is in Degraded status, you can restore it to Functional by array rebuilding.

Before you start:

Please make sure the hot spare disk is configured.

Step 1 Enter the Physical Disk Settings interface to configure the hot spare disk.

No.	Capacity Amay	Туре	Status	Model	Hot Sp.
1	931.510B	Normal	Functional	ST31000340NS	
3					-
5					-
7					-
				One-louch C	Create

Figure 13-10 Physical Disk Settings Interface

Step 2 Select a disk and click 💹 to set it as the hot spare disk.



Only global hot spare mode is supported.

13.2.2 Automatically Rebuilding Array

Purpose:

When the virtual disk is in Degraded status, the device can start rebuilding the array automatically with the hot spare disk to ensure the high security and reliability of the data.

Enter the Array Settings interface(Menu > HDD > RAID > Array). The status of the array is Degraded. Since the hot spare disk is configured, the system will automatically start rebuilding using it.



Figure 1. 2 Array Settings Interface

If there is no hot spare disk after rebuilding, it is recommended to install a HDD into the device and set is as a hot spare disk to ensure the high security and reliability of the array.

13.2.3 Manually Rebuilding Array

Purpose:

If the hot spare disk has not been configured, you can rebuild the array manually to restore the array when the virtual disk is in Degraded status.

Step 1 Enter the Array Settings interface. The disk 3 is lost.

Menu > HDD > RAID > Array

No. Nam	e Free	Space Pt	hysic. Hot	Status	Level	Re	Del	Task
1 array	1_1 931/1	931G 2	6	Degraded	RAID 5			None

Figure 13-11 Array Settings Interface

Step 2 Click Array tab to back to the Array Settings interface and click 📓 to configure the array rebuild.



At least one available physical disk should exist for rebuilding the array.

8	Rebuild An	Ψ(
Array Norm RAID Level Array Disk	anay1_1 RAID 5 2 6		
Physical Disk	•7		
		ок	Cancel

Figure 13-12 Rebuild Array Interface

- Step 3 Select the available physical disk and click OK button to confirm to rebuild the array.
- Step 4 The "Do not unplug the physical disk when it is under rebuilding" message box pops up. Click OK button to start rebuilding.
- Step 5 You can enter the Array Settings interface to view the rebuilding status.
- Step 6 After rebuilding successfully, the array and virtual disk will restore to Functional.

13.3 Deleting Array

Deleting array will cause to delete all the data saved in the disk.

Step 1 Enter the Array Settings interface.

Menu>HDD>RAID>Array

Physi	cal Disk	Array	Firmw	vare						
No	Name	Free	Space	Physic.	. Hot	Status	Level	Re	Del	Task
1	array_1	931/5	d1G	2 7 10		Functi	RAID 5			None

Figure 13-13 Array Settings Interface

Step 2 Select an array and click 🔲 to delete the array.



Figure 13-14 Confirm Array Deletion

Step 3 In the pop-up message box, click Yes button to confirm the array deletion.



Deleting array will cause to delete all the data in the array.

13.4 Checking and Editing Firmware

Purpose:

You can view the information of the firmware and set the background task speed on the Firmware interface.

Step 1 Enter the Firmware interface to check the information of the firmware, including the version, maximum physical disk quantity, maximum array quantity, auto-rebuild status, etc.

Physical Disk Array Fim	nware_
Version	1.1.0.0002
Physical Disk Count	16
Array Count	16
Virtual Disk Count	0
RAID Level	0 1 5 10
Hot Spare Type	Global Hot Spare
Support Rebuild	Yes
Background Task Speed	Medium Speed ~

Figure 13-15 Firmware Interface

Step 2 You can set the Background Task Speed in the drop-down list.

Step 3 Click the Apply button to save the settings.

Chapter 14 HDD Management

14.1 Initializing HDDs

Purpose:

A newly installed hard disk drive (HDD) must be initialized before it can be used with your NVR.

A message box pops up when the NVR starts up if there exits any uninitialized HDD.



Figure 14-1 Message Box of Uninitialized HDD

Click **Yes** button to initialize it immediately or you can perform the following steps to initialize the HDD.

Step 2 Enter the HDD Information interface.

Menu > HDD> General

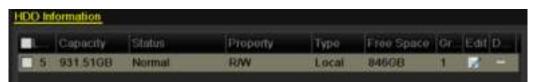 


Figure 14-2 HDD Information Interface

Step 3 Select HDD to be initialized.

Step 4 Click the Init button.



Figure 14-3 Confirm Initialization

Step 5 Select the **OK** button to start initialization.

HDD IN	formation							
-L	Capacity	Status	Property	Туре	Free Space	Gr E	dit	D
64	931,51GB	Initializing 44%	RW	Local	0MB		-	-

Figure 14-4 Status changes to Initializing

Step 6 After the HDD has been initialized, the status of the HDD will change from *Uninitialized* to *Normal*.



Figure 14-5 HDD Status Changes to Normal



Initializing the HDD will erase all data on it.

14.2 Managing Network HDD

Purpose:

You can add the allocated NAS or disk of IP SAN to NVR, and use it as network HDD. Up to 8 network disks can be added.

Step 1 Enter the HDD Information interface.

Menu > HDD>General

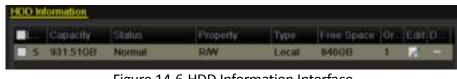 


Figure 14-6 HDD Information Interface

Step 2 Click the Add button to enter the Add NetHDD interface, as shown in Figure 14-7.

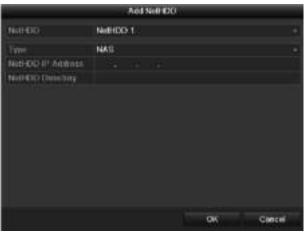


Figure 14-7 HDD Information Interface

Step 3 Add the allocated NetHDD.

Step 4 Select the type to NAS or IP SAN.

Step 5 Configure the NAS or IP SAN settings.

- Add NAS disk:
- 1) Enter the NetHDD IP address in the text field.
- 2) Click the Search button to search the available NAS disks.
- 3) Select the NAS disk from the list shown below.
- 4) Or you can just manually enter the directory in the text field of NetHDD Directory.
- 5) Click the **OK** button to add the configured NAS disk.

		Add NotHDD	š.	
Nette	00	NoteDD 1		
	DD IP Addmis DD Dissbory	NAS 172-5 24 201 /dwitter_3		
100	Directory			4
1	Annane_3			
2	Totride_1			1
3	Presidence August	indenthischup -		1
1	/dvi/dvr_8			
5	Identitie_0			
8	hter/der_2			.*
		Search	OK.	Cancel

Figure 14-8 Add NAS Disk

- Add IP SAN:
- 1) Enter the NetHDD IP address in the text field.
- 2) Click the Search button to search the available IP SAN disks.
- 3) Select the IP SAN disk from the list shown below.
- 4) Click the **OK** button to add the selected IP SAN disk.

Up to 1 IP SAN disk can be added.



Figure 14-9 Add IP SAN Disk

Step 6 After having successfully added the NAS or IP SAN disk, return to the HDD Information menu. The added NetHDD will be displayed in the list.



If the added NetHDD is uninitialized, please select it and click the **Init** button for initialization.

Label	Capacity	Slates	Property	Type	Free Space	Gttt	Edit	Civil
	801.5108	Normal	ii/W	Local	89000	1		-
	831 5108	Normal	RIW	Local	86768	- it - i		
17.	TH, SEEME	Normal	II/W	NAS	Y9,873ME	1		

Figure 14-10 Initialize Added NetHDD

14.3 Managing eSATA

Purpose:

When there is an external eSATA device connected to NVR, you can configure eSATA for the use of Record/Capture or Export, and you can manage the eSATA in the NVR.

Step 1 Enter the Advanced Record Settings interface.

Menu >Record>Advanced

Step 2 Select the eSATA type to Export or Record/Capture from the dropdown list of eSATA.

Export: use the eSATA for backup. Refer to *Backup using eSATA HDDs* in *Chapter Backing up by Normal Video/Picture* Search for operating instructions.

Record/Capture: use the eSATA for record/capture. Refer to the following steps for operating instructions.

Ovinatile		
elsata .	#SATA1	
Uninge	Record/Captern	

Figure 14-11 Set eSATA Mode

Step 3 When the eSATA type is selected to Record/Capture, enter the HDD Information interface.

Menu > HDD>General

Step 4 Edit the property of the selected eSATA, or initialize it is required.



Two storage modes can be configured for the eSATA when it is used for Record/Capture. Please refer to *Chapter Managing HDD Group* and *Chapter Configuring Quota Mode* for details.

. abet	Capacity	Status	Property	Type	Free Space	Qm	Edt	Ded
	931.5108	Normal	RW	Local	92108			
1 11	10,048ME	Uninitiatized	RIW	NAS.	ONE	-14		
25	031.5100	Normal	RINV	#SATA	#9408	1	2	0

Figure 14-12 Initialize Added eSATA

14.4 Managing HDD Group

14.4.1 Setting HDD Groups

Purpose:

Multiple HDDs can be managed in groups. Video from specified channels can be recorded onto a particular HDD group through HDD settings.

Step 1 Enter the Storage Mode interface.

Menu > HDD > Advanced > Storage Mode

Step 2 Set the Mode to Group, as shown in Figure 14-13.



Figure 14-13 Storage Mode Interface

Step 3 Click the **Apply** button and the following Attention box will pop up.



Figure 14-14 Attention for Reboot

Step 4 Click the **Yes** button to reboot the device to activate the changes.

Step 5 After reboot of device, enter the HDD Information interface.

Menu > HDD> General

Step 6 Select HDD from the list and click 🔝 icon to enter the Local HDD Settings interface, as shown in Figure 14-15.



Figure 14-15 Local HDD Settings Interface

Step 7 Select the Group number for the current HDD.

The default group No. for each HDD is 1.

Step 8 Click the **OK** button to confirm the settings.

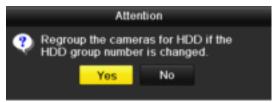 


Figure 14-16 Confirm HDD Group Settings

Step 9 In the pop-up Attention box, click the **Yes** button to finish the settings.

14.4.2 Setting HDD Property

Purpose:

The HDD property can be set to redundancy, read-only or read/write (R/W). Before setting the HDD property, please set the storage mode to Group (refer to step1-4 of Chapter Setting HDD Groups).

A HDD can be set to read-only to prevent important recorded files from being overwritten when the HDD becomes full in overwrite recording mode.

When the HDD property is set to redundancy, the video can be recorded both onto the redundancy HDD and the R/W HDD simultaneously so as to ensure high security and reliability of video data.

Step 1 Enter the HDD Information interface.

Menu > HDD> General

Step 2 Select HDD from the list and click the 🔝 icon to enter the Local HDD Settings interface, as shown in Figure 14-17.



Figure 14-17 Set HDD Property

Step 3 Set the HDD property to R/W, Read-only or Redundancy.

Step 4 Click the **OK** button to save the settings and exit the interface.

Step 5 In the HDD Information menu, the HDD property will be displayed in the list.

At least 2 hard disks must be installed on your NVR when you want to set a HDD to Redundancy, and there is one HDD with R/W property.

14.5 Configuring Quota Mode

Purpose:

Each camera can be configured with allocated quota for the storage of recorded files or captured pictures.

Step 1 Enter the Storage Mode interface.

Menu > HDD > Advanced

Step 2 Set the Mode to Quota, as shown in Figure 14-18.



The NVR must be rebooted to enable the changes to take effect.

Mide	Guita	
Gamera	iP Canera 1	
Used Record Capacity	8,192MB	
Used Extern Capacity	1,024MB	
HDO Gabacity (080	931	
Max. Record Capacity (1911)	ad	
Max Puttine Capacity (00)	100	
Fiel Guota Space 751 0	0	

Figure 14-18 Storage Mode Settings Interface

Step 3 Select a camera for which you want to configure quota.

Step 4 Enter the storage capacity in the text fields of Max. Record Capacity (GB) and Max. Picture Capacity (GB), as shown in Figure 14-19.



Figure 14-19 Configure Record/Picture Quota

Step 5 You can copy the quota settings of the current camera to other cameras if required. Click the **Copy** button to enter the Copy Camera menu, as shown in Figure 14-20.



Figure 14-20 Copy Settings to Other Camera(s)

Step 6 Select the camera (s) to be configured with the same quota settings. You can also click the checkbox of IP Camera to select all cameras.

Step 7 Click the **OK** button to finish the Copy settings and back to the Storage Mode interface.

Step 8 Click the **Apply** button to apply the settings.



If the quota capacity is set to 0, then all cameras will use the total capacity of HDD for record and picture capture.

14.6 Configuring Disk Clone

Purpose:

If the S.M.A.R.T. detection result declares the HDD is abnormal, you can choose to clone all the data on the HDD to an inserted eSATA disk manually. Refer to *Chapter 12.8 HDD Detection* for details of S.M.A.R.T detection.

Before you start:

An eSATA disk should be connected to the device.

Step 1 Enter the HDD Advanced Setting interface:

Menu > HDD > Advanced

Step 2 Click the **Disk Clone** tab to enter the disk clone configuring interface.

	Source					
Label	Capacity	Status	Property	Туре	Free Space	Gr
84	931.51GB	Normal	RAW	Local	914GB	1
2ione	Destination					
		eSATA1			- 6	(eftesn
HBAT	N	eSATA1 Export			- 10	tefresn Set
eGAT Usag	N					
eGAT Usag		Export				

Figure 14-21 Disk Clone Configuration Interface

Step 3 Make sure the usage of the eSATA disk is set as Export.

If not, click the **Set** button to set it. Choose Export and click the **OK** button.



Figure 14-22 Setting eSATA Usage

The capacity of destination disk must be the same as that of the clone source disk.

Step 4 Check the checkbox of the HDD to be cloned in the Clone Source list.

Step 5 Click the **Clone** button and a message box pops up.



Figure 14-23 Message Box for Disk Clone

Step 6 Click the **Yes** button to continue.

You can check the clone progress in the HDD status.



Figure 14-24 Check Disk Clone Progress

14.7 Checking HDD Status

Purpose:

You may check the status of the installed HDDs on NVR so as to take immediate check and maintenance in case of HDD failure.

Checking HDD Status in HDD Information Interface

Step 1 Enter the HDD Information interface.

Menu > HDD>General

Step 2 Check the status of each HDD which is displayed on the list, as shown in Figure 14-25.

	<u>nitin</u>							
Lobel	Capacity	Slaturi	Fraperty	Type	Free Space	dm.	Edit	Det
14	\$91.510B	Normal	RAW	Local	02108	1		-
18	10,04860	Uninitiatured	IRAW.	NAS	OMB	1		
25	831.51045	Normal	RW	GSATA	89408			
indali Che		1,87308						

Figure 14-25 View HDD Status (1)

If the status of HDD is *Normal* or *Sleeping*, it works normally. If the status is *Uninitialized* or *Abnormal*, please initialize the HDD before use. And if the HDD initialization is failed, please replace it with a new one.

Checking HDD Status in HDD Information Interface

Step 3 Enter the System Information interface.

Menu >Maintenance > System Info

Step 4 Click the **HDD** tab to view the status of each HDD displayed on the list, as shown in Figure 14-26.

lowco M	lu Cam	ora Hu	cord A	lam	Notwork.	+00		
Lattici	antistan.	(Called II		Lim	(Spine)	attainenty.	in.	CHINE
5	Normal	93108		831	948	RW	Local	
6	Skeping	93108		831	90	Redundancy	Local	1
11	Normal	40,000	40	22,5	20MD	RW	#P SAN	1
Tatal Ca	ipiacity		1,9626	Đ				
Table G			1,9020					

Figure 14-26 View HDD Status (2)

14.8 HDD Detection

Purpose:

The device provides the HDD detection function such as the adopting of the S.M.A.R.T. and the Bad Sector Detection technique. The S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) is a monitoring system for HDD to detect and report on various indicators of reliability in the hopes of anticipating failures.

S.M.A.R.T. Settings

Step 1 Enter the S.M.A.R.T Settings interface.

Menu > Maintenance > HDD Detect

Step 2 Select the HDD to view its S.M.A.R.T information list, as shown in Figure 14-27.


2 00	dinuo to use this disk when s	d evoluation	rs faitest					
HDD.		4						
346.0	nd Status	Not lested						
	mil Typer	Short Test						
ILM A	di T							
	erakare (*C)	at .						
Press	Cer plays	269						
	estation	Pass						
Ait-ou	rðugligti	Finitional						
SMA	RT Information							
10	Attribute Name	Status	Flags	Threshold	Value	Worst-	Row Volue	
Ew1	Row Road Ernat Hute	OK.	31.	51	200	300	1.	
043	Spie Up Time	OK	27	24	154	107	5258	
-	Start/Stop Coatt	OK:	32		100	100	580	
04			35	140	200	200	0	
	Reallocated Sector Court	OIC						
Del .		OK OK	214		200	200	0	
045	Reallocated Sector Court				200 93	200 117	0 6466	

Figure 14-27 S.M.A.R.T Settings Interface

The related information of the S.M.A.R.T. is shown on the interface.

You can choose the self-test types as Short Test, Expanded Test or the Conveyance Test.

 Click the start button to start the S.M.A.R.T. HDD self-evaluation.

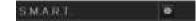

If you want to use the HDD even when the S.M.A.R.T. checking is failed, you can check the checkbox of the **Continue to use the disk when self-evaluation is failed** item.

Bad Sector Detection

Step 3 Click the Bad Sector Detection tab.

Step 4 Select the HDD No. in the dropdown list you want to configure, and choose All Detection or Key Area Detection as the detection type.

Step 5 Click the **Detect** button to start the detection.

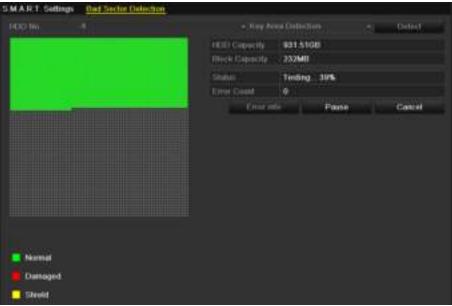


Figure 14-28 Bad Sector Detection

And you can click **Error info** button to see the detailed damage information.

And you can also pause/resume or cancel the detection.

14.9 Configuring HDD Error Alarms

Purpose:

You can configure the HDD error alarms when the HDD status is Uninitialized or Abnormal.

Step 1 Enter the Exception interface.

Menu > Configuration > Exceptions

Step 2 Select the Exception Type to HDD Error from the dropdown list.

Step 3 Click the checkbox(s) below to select the HDD error alarm type (s), as shown in Figure 14-29.

The alarm type can be selected to: Audible Warning, Notify Surveillance Center, Send Email and Trigger Alarm Output. Please refer to *Chapter Setting Alarm Response Actions*.

Exception Type	HDD Error		
Audible Warning			
Natity Surveilance Center			
Serid Email			
Trigger Alam Output			
Alarm Output No.		Alarm Name	
Local->1			
Local->2			
Local->3			
Local->4			
2172.6.23.105:0000->1			

Figure 14-29 Configure HDD Error Alarm

Step 4 When the Trigger Alarm Output is selected, you can also select the alarm output to be triggered from the list below.

Step 5 Click the Apply button to save the settings

Chapter 15 Camera Settings

15.1 Configuring OSD Settings

Purpose:

You can configure the OSD (On-screen Display) settings for the camera, including date /time, camera name, etc.

Step 1 Enter the OSD Configuration interface.

Menu > Camera > OSD

Step 2 Select the camera to configure OSD settings.

Step 3 Edit the Camera Name in the text field.

Step 4 Configure the Display Name, Display Date and Display Week by clicking the checkbox.

Step 5 Select the Date Format, Time Format and Display Mode.



Figure 15-1 OSD Configuration Interface

Step 6 You can use the mouse to click and drag the text frame on the preview window to adjust the OSD position.

Step 7 Click the **Apply** button to apply the settings.

15.2 Configuring Privacy Mask

Purpose:

You are allowed to configure the four-sided privacy mask zones that cannot be viewed by the operator. The privacy mask can prevent certain surveillance areas to be viewed or recorded.

Step 1 Enter the Privacy Mask Settings interface.

Menu > Camera > Privacy Mask

Step 2 Select the camera to set privacy mask.

Step 3 Click the checkbox of Enable Privacy Mask to enable this feature.



Figure 15-2 Privacy Mask Settings Interface

Step 4 Use the mouse to draw a zone on the window. The zones will be marked with different frame colors.



Up to 4 privacy masks zones can be configured and the size of each area can be adjusted.

Step 5 The configured privacy mask zones on the window can be cleared by clicking the corresponding Clear Zone1-4 icons on the right side of the window, or click **Clear All** to clear all zones.



Figure 15-3 Set Privacy Mask Area

Step 6 Click the **Apply** button to save the settings.

15.3 Configuring Video Parameters

Purpose:

You can customize the image parameters including the brightness, contrast, saturation, image rotate and mirror for the live view and recording effect.

Step 1 Enter the Image Settings interface.

Menu > Camera > Image

Image Settings					
Camera	[D2] Camera	01			
Mode	Custom				
		Brightn_		49	÷
-	-	Contrast -		50	
	21 - Call	Satural_		50	
		Enable Rot	Clockwise 270	degrees	
		Mirtor Mode	Left-Right		
		Enable Rot			-

Figure 15-4 Image Settings Interface

- Step 2 Select the camera to set image parameters.
- Step 3 Adjust the slider or click on the up/down arrow to set the value of the brightness, contrast or saturation.
- Step 4 Select the **Enable Rotate** function to Clockwise 270 degrees or OFF. When OFF is selected, the image is restored to original.
- Step 5 Select the **Mirror Mode** to Left-Right, Up-Down, Center or OFF. When OFF is selected, the image is restored to original.

- The Rotate and Mirror functions must be supported by the connected IP camera.
- The image parameters adjustment can affect both the live view and the recording quality.

Step 6 Click the **Apply** button to save the settings.

Chapter 16 NVR Management and Maintenance

16.1 Viewing System Information

Step 1 Enter the System Information interface.

Menu >Maintenance>System Info

Step 2 You can click the **Device Info, Camera, Record, Alarm, Network** and **HDD** tabs to view the system information of the device.

Device Info	Camera	Record A	arm	Network	HDD
Device Nat	tie ?	Network	Vide	o Recorder	
Model		XXXXXXX	xxxx		
Senal No.		XXXXXXX	xxxxx	xxxxx	
Firmware V	ersion	XXXXXXX	xxxx		
Please scan	the QR code	via IVMS cl	ent		

Figure 16-1 Device Information Interface



You can add the device to your mobile client software (iVMS-4500) via scanning the QR Code.

16.2 Searching & Exporting Log Files

Purpose:

The operation, alarm, exception and information of the NVR can be stored in log files, which can be viewed and exported at any time.

Step 1 Enter the Log Search interface.

Menu > Maintenance > Log Information

Log Search				
Start Time	01-01-2015		00:00:00	•
End Time	01-20-2015		23:59:59	•
Major Type	All			
Minor Type				8
Alarm Input				-
CAlarm Output				
Motion Detection	Started			
Motion Detection	Slopped			
Clivideo Tempering	Detection Started			
Clivideo Tampering	Detection Stopped			
ELine Crossing De	tection Alarm Started			
ElLine Crossing De	tection Alarm Stopped			
Clintrusion Detectio	n Alarm Started			12
		Export A	Search	Back

Figure 16-2 Log Search Interface

- Step 2 Set the log search conditions to refine your search, including the Start Time, End Time, Major Type and Minor Type.
- Step 3 Click the **Search** button to start search log files.
- Step 4 The matched log files will be displayed on the list shown below.

		Searc	h Result				
No.	Major Type	Time	Minor Type	Parameter	Play	Details	•
1	· Operation	01-14-2015 21:04:06	Abnormal Shutit	8414		1	=
z	T Operation	01-14-2015 21:04:00	Power On	N/A.	-	٠	
3	A Exception	01-14-2015 21 04:00	Record Exception	N/A	۰	•	
4	T Operation	01-14-2015 21:11:44	Local Operation	NA	-		
5	Operation	01-14-2015 21:35:45	Power On	N/A	-		
6	Exception	01-14-2015 21:39:47	Record Exception	N/A		•	
¥.	T Operation	01-14-2015 21:44:05	Abnormal Shuld	N/A	-		
8	T Operation	01-14-2015 21:44:05	Power On	N/A	-		
9	Exception	01-14-2015 21:44:07	Record Exception	N/A			
10	T Operation	01-14-2015 21:57:06	Abnormal Shutd	N/A	-		-
	Tent Parton						•
Totel	965 P 1/10						
				Export		Back	

Figure 16-3 Log Search Results

Up to 2000 log files can be displayed each time.

Step 5 You can click the dutton of each log or double click it to view its detailed information, as shown in Figure 16-4. And you can also click the dutton to view the related video files if available.

	Logi	viormation		
Tine	01-14-2016 21:1	57:08		
Type	Operation -Pow	er On		
Local Loser	NIA			
Prost IP Address	N/A			
Parameter Type	NR			
Camera No.	NUA.			
Description:				
Model: D5-96129N-H1 Serial No. D5-96129N Pittwate version: V3.0 Encoding version: V1.0	H161620141222CCR8 0, Build 150109	R201412224WCVL		
		Previous	Next	ок

Figure 16-4 Log Details

Step 6 If you want to export the log files, click the **Export** button to enter the Export menu, as shown in Figure 16-4 Log Details.

You can also click **Export All** on the Log Search interface (Figure 15.2) to enter the Export interface (Figure 15.5), and all the system logs will be exported to the backup device.

	Eq	ort.				
Dentre Neme USB Flash Disk 1-1		- 100 m			Refeature	
Name	Size Type	Edit Date		Delete	He -	
-111	Palder	12-20-2014	12:08:34			
· 129	Pakter	11-04-2014	15,47,58			
. 316	Folder	11-11-2014	16 08 04		-	
Charatel_001	Passan	12-04-2014	15.56.26			
POLIND 000	Folder	11-29-2014	11:29:40			
Recyclest	Polder	11-04-2014	10.34.04			
 recycle (643/17040 	e Polder	09-16-2013	17:35:24			
- test	Polder	11-25-2014	15:34:22			
- 1 970	Falder	07-25-2014	13:37:52			
Free Storce	54.00MB					
	New Polder	Format	Export	Cer	icel	

Figure 16-5 Export Log Files

Step 7 Select the backup device from the dropdown list of Device Name.

Step 8 Select the format of the log files to be exported. Up to 15 formats are selectable.

Step 9 Click the **Export** to export the log files to the selected backup device.

You can click the **New Folder** button to create new folder in the backup device, or click the **Format** button to format the backup device before log export.

Please connect the backup device to NVR before operating log export.

16.3 Importing/Exporting IP Camera Info

Purpose:

The information of added IP camera can be generated into an excel file and exported to the local device for backup, including the IP address, manage port, password of admin, etc.. And the exported file can be edited on your PC, like adding or deleting the content, and copy the setting to other devices by importing the excel file to it.

Step 1 Enter the camera management interface.

Menu > Camera > IP Camera Import/Export

- Step 2 Click the IP Camera Import/Export tab, the content of detected plugged external device appears.
- Step 3 Click the Export button to export configuration files to the selected local backup device.
- Step 4 To import a configuration file, select the file from the selected backup device and click the **Import** button. After the importing process is completed, you must reboot the NVR.

16.4 Importing/Exporting Configuration Files

Purpose:

The configuration files of the NVR can be exported to local device for backup; and the configuration files of one NVR can be imported to multiple NVR devices if they are to be configured with the same parameters.

Step 1 Enter the Import/Export Configuration File interface.

Menu > Maintenance > Import/Export

Dativity Franks	LINE FIAME	pile \$15		- Helesky
inere a la company		Gen Type	Evil Date	Others Play
100.00 mg, 818 mg		and dealers	STATISTIC OF THE	
		1985-11585		

Figure 16-6 Import/Export Config File

Step 2 Click the **Export** button to export configuration files to the selected local backup device.

Step 3 To import a configuration file, select the file from the selected backup device and click the **Import** button. After the import process is completed, you must reboot the NVR.



After having finished the import of configuration files, the device will reboot automatically.

16.5 Upgrading System

Purpose:

The firmware on your NVR can be upgraded by local backup device or remote FTP server.

16.5.1 Upgrading by Local Backup Device

Step 1 Connect your NVR with a local backup device where the update firmware file is located.

Step 2 Enter the Upgrade interface.

Step 3 Menu >Maintenance>Upgrade

Step 4 Click the Local Upgrade tab to enter the local upgrade menu, as shown in Figure 16-7.

Device Name USB FL	ash Disk 1-1	- 1mp4 -	Refresh
Name	Size Type	Edit Date	Defa Ple
ch01_201412001	35.65MD File	12-25-2014 18:29:24	
ch01_201412100	430.15MB File	12-25-2014 14:33.18	- 1
cn09_201410291	486.88MB File	10-29-2014 19:10:56	A
ch13_201409190	2707.10KB File	09-18-2014 15:42:20	a -
d01_sd_ch01_14	25.90MB Pile	12-25-2014 17:34:58	

Figure 16-7 Local Upgrade Interface

Step 5 Select the update file from the backup device.

Step 6 Click the **Upgrade** button to start upgrading.

Step 7 After the upgrading is complete, reboot the NVR to activate the new firmware.

16.5.2 Upgrading by FTP

Before you start:

Ensure the network connection of the PC (running FTP server) and the device is valid and correct. Run the FTP server on the PC and copy the firmware into the corresponding directory of your PC.

Step 1 Enter the Upgrade interface.

Menu >Maintenance>Upgrade

Step 2 Click the **FTP** tab to enter the local upgrade interface, as shown in Figure 16-8.

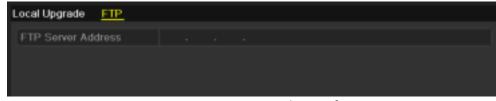 


Figure 16-8 FTP Upgrade Interface

Step 3 Enter the FTP Server Address in the text field.

Step 4 Click the **Upgrade** button to start upgrading.

Step 5 After the upgrading is complete, reboot the NVR to activate the new firmware.

16.6 Restoring Default Settings

Step 1 Enter the Default interface.

Menu > Maintenance > Default

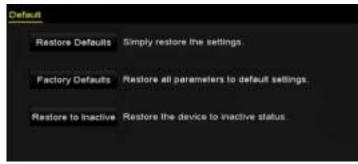


Figure 16-9 Restore Defaults

Step 2 Select the restoring type from the following three options.

Restore Defaults: Restore all parameters, except the network (including IP address, subnet mask, gateway, MTU, NIC working mode, default route, server port, etc.) and user account parameters, to the factory default settings.

Factory Defaults: Restore all parameters to the factory default settings.

Restore to Inactive: Restore the device to the inactive status.

Step 3 Click the **OK** button to restore the default settings.



The device will reboot automatically after restoring to the default settings.

Chapter 17 Others

17.1 Configuring RS-232 Serial Port

The RS-232 serial port is not supported by DS-7600NI series NVR.

Purpose:

The RS-232 port can be used in two ways:

- Parameters Configuration: Connect a PC to the NVR through the PC serial port. Device parameters can be configured by using software such as HyperTerminal. The serial port parameters must be the same as the NVR's when connecting with the PC serial port.
- Transparent Channel: Connect a serial device directly to the NVR. The serial device will be controlled remotely by the PC through the network and the protocol of the serial device.

Step 1 Enter the RS-232 Settings interface.

Menu >Configuration> RS-232

ISI232 Sidings		
Elisate Filefor	115200	
Data Bill		
like flit	1	
Party	Noner	
Filee Cite	Nome	
Chage	Console	,

Figure 17-1 RS-232 Settings Interface

- Step 2 Configure RS-232 parameters, including baud rate, data bit, stop bit, parity, flow control and usage.
- Step 3 Click the **Apply** button to save the settings.

17.2 Configuring General Settings

Purpose:

You can configure the BNC output standard, VGA output resolution, mouse pointer speed through the Menu > Configuration > General interface.

Step 1 Enter the General Settings interface.

Menu >Configuration> General

Step 2 Select the General tab.

General DST Settings	More Settings	
Language	English	
VGA/HDMI Resolution	4K(3840'2160)/60HZ	
VGA2/HDMI2 Resolution	1920'1080/60HZ(1080P)	
Time Zone	(GMT+08:00) Beijing, Urumqi, Singapore	
Date Format	MM-DD-YYYY	
System Date	06-23-2015	
System Time	15:08:13	•
Mouse Pointer Speed		
Enable Wizard	2	
Enable Password		

Figure 17-2 General Settings Interface (DS-9600NI and DS-8600NI)

Language English VGA Recordition 1024'768/60HZ HDMI Resolution 1024'768/60HZ Time Zone (GMT+08:00) Beijing, Urumqi, Singapore Data Format MM-0D-YYYY System Data 07-29-2015 System Time 09:57:55 Mouse Peinter Speed • Enable Witzard I	VCIA Resolution 1024'768/60HZ HDMI Resolution 1024'766/60HZ Time Zone (GMT+00:00) Beijing, Urumqi, Singapore Date Format MM-0D-YYYY System Data 07-29-2015 System Time 09-57:55 Mouse Painter Speed 1024'768/60HZ	General DST Settings	More Settings	
HDMI Resolution 1024*768/60HZ Time Zone (GMT+00:00) Beijing, Urumqi, Singapore Date Formet MM-0D-YYYY System Date 07-29-2016 System Time 09:57:55 Mouse Peinter Speed 1	HDMit Resolution 1024*760/60HZ Time Zone (GMT+00:00) Beijing, Urumqi, Singapore Date Format MM-DD-YYYY System Data 07-29-2015 System Time 09:57:55 Mouse Painier Speed • Enable Wizard •	Language	English	
Time Zone (GMT+00:00) Beijing, Urumqi, Singapore Date Format MM-0D-YYYY System Date 07-29-2015 System Time 09:57:55 Mouse Painter Speed •	Time Zone (GMT+08:00) Beijing, Urumqi, Singapore Dale Format MM-DD-YYYY System Data 07-29-2015 System Time 09-57:55 Mouse Painter Speed Image: Comparison of the system Compariso	VGA Resolution	1024"768/60HZ	
Date Formet MM-DD-YYYY System Date 07-29-2015 System Time 09-57:55 Mouse Painter Speed •	Date Format MM-DD-YYYY System Data 07-29-2015 System Time 09-57:55 Mouse Painter Speed • Enable Wizard ■	HDMI Resolution	1024*768/60HZ	
System Date 07-29-2015 System Time 09:57:55 Nouse Painter Speed	System Data 07-29-2015 System Time 09:57:55 Statem Speed Enable Wikard 2	Time Zooe	(GMT+08:00) Beijing, Urumqi, Singapore	
System Time 09:57:55 Mouse Painter Speed	System Time 09-57:55 Constraints System Time Constrain	Date Formet	MM-DD-YYYY	
Mouse Painter Speed	Mouse Painter Speed Enable Weard	System Date	07-29-2015	-
	Enable Wizard 🗧	System Time	09:57:55	•
	Enable Wizero 🗳	Mouse Painter Speed		
	Enable Password	Enable Wizard		
Enable Password		Enable Password		

Figure 17-3 General Settings Interface (DS-7600NI and DS-7700NI)

Step 3 Configure the following settings:

Language: The default language used is English.

Output Standard: Select the output standard to NTSC or PAL, which must be the same with the video input standard.

Resolution: For the DS-9600NI and DS-8600NI series NVR, you can configure the VGA/HDMI resolution and VGA2/HDMI 2 resolution. And up to 4K (3840 × 2160) resolution is selectable for the VGA/HDMI output.

For the DS-7600NI and DS-7700NI series NVR, you can configure the VGA resolution and HDMI resolution respectively. And up to 4K (3840 × 2160) resolution is selectable for the HDMI output.

Time Zone: Select the time zone.

Date Format: Select the date format.

System Date: Select the system date.

System Time: Select the system time.

Mouse Pointer Speed: Set the speed of mouse pointer; 4 levels are configurable.

Enable Wizard: Enable/disable the Wizard when the device starts up.

Enable Password: Enable/disable the use of the login password.

Step 4 Click the **Apply** button to save the settings.

17.3 Configuring DST Settings

Step 1 Enter the General Settings interface.

Menu >Configuration>General

Step 2 Choose DST Settings tab.

eneral OST Settings					
Auto DST Adjustment					
Enable EIGT	2				
From	Apr .	111	- 504	- 2	£ :00
To	Öd	- iest	+ tites	- 2	\$:00
DSTRian	60 Minut	**			

Figure 17-4 DST Settings Interface

You can check the checkbox before the Auto DST Adjustment item.

Or you can manually check the Enable DST checkbox, and then you choose the date of the DST period.

17.4 Configuring More Settings

Step 1 Enter the General Settings interface.

Menu >Configuration>General

Step 2 Click the **More Settings** tab to enter the More Settings interface.

General DST Settings	More Settings	
Device Name	Network Video Recorder	
Device No.	255	
Auto Logout	30 Minutes	
Meriu Output Mode	VGA	

Figure 17-5 More Settings Interface

Step 3 Configure the following settings:

Device Name: Edit the name of NVR.

Device No.: Edit the serial number of NVR. The Device No. can be set in the range of 1~255, and the default No. is 255. The number is used for the remote and keyboard control.

Auto Logout: Set timeout time for menu inactivity. E.g., when the timeout time is set to 5 *Minutes*, then the system will exit from the current operation menu to live view screen after 5 minutes of menu inactivity.

Enable HDMI/VGA Simultaneous Output (for DS-9600NI and DS-8600NI only): By default, the video outputs from HDMI and VGA interfaces can be operated separately. You can set the simultaneous output for the HDMI and VGA by checking the checkbox of the option.

Menu Output Mode: You can choose the menu display on different video output.

For the DS-9600NI and DS-8600NI series NVR, you can select the menu output mode to **VGA/HDMI**, **VGA2/HDMI2**.

And for the DS-7600NI and DS-7600NI series NVR, you can select the menu output mode to **VGA**, **HDMI** or **Auto**. When the **Auto** option is selected and both HDMI and VGA outputs are connected, the device will detect and set the HDMI as the menu output.

Step 4 Click the **Apply** button to save the settings.

17.5 Managing User Accounts

Purpose:

There is a default account in the NVR: *Administrator*. The *Administrator* user name is *admin* and the password is set when you start the device for the first time. The *Administrator* has the permission to add and delete user and configure user parameters.

17.5.1 Adding a User

Step 1 Enter the User Management interface.

Menu >Configuration>User

Liser	Management					
Net	User Name	Security	Level	User's MAC Address	Pell Ed	Del
1	admen	Shring P	Ameri	NO. 312 - 20- 510 - 510 - 510	- 12	1000
				- Add		in the second

Figure 17-6 User Management Interface

Step 2 Click the **Add** button to enter the Add User interface.

	Add User	
User Name	4	
Admin Password	*******	
Password		Strong
Canfirm	*****	
Level	Operator	
User's MAC Address	00:00:00:00:00:00	
	ge (0-16). You can use a combination se and special character for your pas lem contained.	
	OK	Cancel

Figure 17-7 Add User Menu

Step 3 Enter the information for new user, including User Name, Admin Password, Password, Confirm, Level and User's MAC Address.

Password: Set the password for the user account.



Strong Password recommended–We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

• Level: Set the user level to Operator or Guest. Different user levels have different operating permission.

Operator: The *Operator* user level has permission of Two-way Audio in Remote Configuration and all operating permission in Camera Configuration by default.

Guest: The Guest user has no permission of Two-way Audio in Remote Configuration and only has the local/remote playback in the Camera Configuration by default.

• User's MAC Address: The MAC address of the remote PC which logs onto the NVR. If it is configured and enabled, it only allows the remote user with this MAC address to access the NVR.

Step 4 Click the **OK** button to save the settings and go back to the User Management interface. The added new user will be displayed on the list, as shown in Figure 17-8.

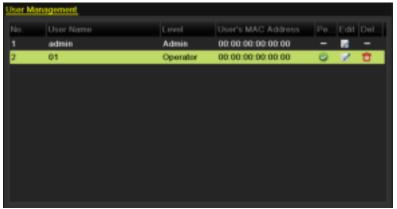


Figure 17-8 Added User Listed in User Management Interface

Step 5 Select the user from the list and then click the button to enter the Permission settings interface, as shown in Figure 17-9.



Figure 17-9 User Permission Settings Interface

- Step 6 Set the operating permission of Local Configuration, Remote Configuration and Camera Configuration for the user.
 - Local Configuration

Local Log Search: Searching and viewing logs and system information of NVR.

Local Parameters Settings: Configuring parameters, restoring factory default parameters and importing/exporting configuration files.

Local Camera Management: The adding, deleting and editing of IP cameras.

Local Advanced Operation: Operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.

Local Shutdown Reboot: Shutting down or rebooting the NVR.

• Remote Configuration

Remote Log Search: Remotely viewing logs that are saved on the NVR.

Remote Parameters Settings: Remotely configuring parameters, restoring factory default parameters and importing/exporting configuration files.

Remote Camera Management: Remote adding, deleting and editing of the IP cameras.

Remote Serial Port Control: Configuring settings for RS-232 and RS-485 ports.

Remote Video Output Control: Sending remote button control signal.

Two-Way Audio: Realizing two-way radio between the remote client and the NVR.

- **Remote Alarm Control**: Remotely arming (notify alarm and exception message to the remote client) and controlling the alarm output.
- **Remote Advanced Operation**: Remotely operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.
- Remote Shutdown/Reboot: Remotely shutting down or rebooting the NVR.
- Camera Configuration

Remote Live View: Remotely viewing live video of the selected camera (s).

Local Manual Operation: Locally starting/stopping manual recording and alarm output of the selected camera (s).

Remote Manual Operation: Remotely starting/stopping manual recording and alarm output of the selected camera (s).

Local Playback: Locally playing back recorded files of the selected camera (s).
 Remote Playback: Remotely playing back recorded files of the selected camera (s).
 Local PTZ Control: Locally controlling PTZ movement of the selected camera (s).
 Remote PTZ Control: Remotely controlling PTZ movement of the selected camera (s).
 Local Video Export: Locally exporting recorded files of the selected camera (s).

Step 7 Click the **OK** button to save the settings and exit interface.

Only the admin user account has the permission of restoring factory default parameters.

17.5.2 Deleting a User

Step 1 Enter the User Management interface.

Menu >Configuration>User

Step 2 Select the user to be deleted from the list, as shown in Figure 17-10.

User M	anagement			
No.	User Name	Level	User's MAC Address	Pe Edit Del
1	admin	Admin	00:00:00:00:00:00	- 🖬 -
2	01	Operator	00.00.00.00.00.00	O 🛛 🗖

Figure 17-10 User List

Step 3 Click the income to delete the selected user account.

17.5.3 Editing a User

For the added user accounts, you can edit the parameters.

Step 1 Enter the User Management interface.

Menu >Configuration>User

Step 2 Select the user to be edited from the list, as shown in Figure 17-10.

Step 3 Click the 📓 icon to enter the Edit User interface, as shown in Figure 17-12.



Figure 17-11 Edit User (Operator/Guest)

	Edit User
User Name	admin
Old Password	
Change Password	
Password	·····
Confirm	
Enable Unlock Patt	
Draw Unlock Pattern	
Export GUID	
User's MAC Address	00 00 00 00 00 00
	ge [8-16]. You can use a combination of numbers, use and special character for your password with at sem contained.
	OK Cancel

Figure 17-12 Edit User (admin)

Step 4 Edit the password for the user

• Operator and Guest

You can edit the user information, including user name, password, permission level and MAC address. Check the checkbox of **Change Password** if you want to change the password, and input the new password in the text field of **Password** and **Confirm**. A strong password is recommended.

• Admin

You are only allowed to edit the password and MAC address. Check the checkbox of **Change Password** if you want to change the password, and the input the correct old password, and the new password in the text field of **Password** and **Confirm**.



Strong Password recommended–We highly recommend you create a strong password of your own choosing (Using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters.) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 5 Edit the unlock pattern for the admin user account.

- 1) Check the checkbox of **Enable Unlock Pattern** to enable the use of unlock pattern when logging in to the device.
- 2) Use the mouse to draw a pattern among the 9 dots on the screen. Release the mouse when the pattern is done.



Please refer to Chapter 2.3.1 Configuring the Unlock Pattern for detailed instructions.



Figure 17-13 Set Unlock Patter for Admin User

Step 6 Click the solution of **Export GUID** to enter the reset password interface to export the GUID file for the admin user account.

When the admin password is changed, you can re-export the GUID file to the connected U flash disk for the future password resetting. Please refer to Chapter 2.1.5 Resetting Your Password for details.

- Step 7 Click the **OK** button to save the settings and exit the menu.
- Step 8 For the **Operator** or **Guest** user account, you can also click the Solution on the user management interface to edit the permission.

Chapter 18 Appendix

18.1 Specifications

18.1.1 DS-9600NI-I8

Model		DS-9608NI-I8	DS-9616NI-I8	DS-9632NI-I8	DS-9664NI-I8		
	IP video input	8-ch	16-ch	32-ch	64-ch		
Video/Audio input	iP video iliput	Up to 12 MP res	solution				
F	Two-way audio	1-ch, RCA (2.0 V	′p-p, 1 k Ω)				
	Incoming	128 Mbps	256 Mbps,	320 Mbps	320 Mbps		
	bandwidth	120 10005	or 200 Mbps (w	hen RAID is enab	led)		
Network	Outgoing bandwidth	256 Mbps, or 20	00 Mbps (when R	AID is enabled)			
	Remote connection	128					
	Recording	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA					
	resolution	/720p/VGA/4CI	/720p/VGA/4CIF/DCIF/2CIF/CIF/QCIF				
	VGA1 /HDMI1 output	HDMI1: 4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, 2K × 1440)/60Hz, 1920 × 1080p/60Hz, 1600 × 1200/60Hz, 1 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
Video/Audio output	resolution	VGA1: 2K (2560 × 1440)/60Hz, 1920 × 1080p/60Hz, 1600 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 768/60Hz					
	VGA2 /HDMI2 output resolution	1920 × 1080p/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	Audio output	2-ch, RCA (2.0V	р-р, 1 КΩ)				
	Decoding format	H.265/H.265+/H	1.264/H.264+/MF	PEG4			
Decoding	Live view/Playback resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA/720p/VGA /4CIF/DCIF/2CIF/CIF/QCIF					

Network Video Recorder User Manual

	Synchronous playback	8-ch	16-ch	
	Capability	12-ch @ 12 MP (20fps) / 4-ch @ 8 MP (25fps) / 8-ch @ 4MP (30fps) / 16-ch @ 1080p (30fps)		
Network management	Network protocols	TCP/IP, DHCP, I iSCSI, UPnP™, H	Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, ITTPS	
	SATA	8 SATA interface	es	
Hard disk	eSATA	1 eSATA interfa	ce	
	Capacity	Up to 6 TB capa	city for each disk	
	Array type	RAID 0, RAID 1,	RAID 5, RAID 6, RAID 10	
Disk array	Number of arrays	4		
	Network interface	2, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface		
External	Serial interface	RS-232; RS-485; Keyboard		
interface	USB interface	Front panel: 2 ×	: USB 2.0; Rear panel: 1 × USB 3.0	
	Alarm in/out	16/4		
	Power supply	100 to 240 VAC, 50 to 60 Hz		
	Max. Power	200 W		
	Consumption (without hard disk)	≤ 30 W		
General	Working temperature	-10 to +55º C (+	14 to +131º F)	
General	Working humidity	10 to 90 %		
	Chassis	19-inch rack-mounted 2U chassis		
	Dimensions(W × D × H)	445 × 470 ×90 mm (17.5"× 18.5" × 3.5")		
	Weight(without hard disk)	≤ 10 kg (22 lb)		

18.1.2 DS-9600NI-I16

Model		DS-9616NI-I16	DS-9632NI-I16	DS-9664NI-I16			
	IP video input	16-ch	32-ch	64-ch			
Video/Aud	Incoming	256 Mbps	320 Mbps	320 Mbps			
io input	bandwidth	Or 200 Mbps (when	RAID is enabled)				
	Outgoing bandwidth	256 Mbps, or 200 Ml	256 Mbps, or 200 Mbps (when RAID is enabled)				
Video/Aud	VGA1 /HDMI1 output resolution	1024/60Hz, 1280 × 7 HDMI1: 4K (3840 × (2560 × 1440)/60Hz,	VGA1: 2K (2560 × 1440)/60Hz, 1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz HDMI1: 4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, 2K (2560 × 1440)/60Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
io output	VGA2 /HDMI2 output resolution	VGA2: 1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz HDMI2: 1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	Audio output	2-ch, RCA (Linear, 1 KΩ)					
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4					
	Recording resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA /720p/VGA/4CIF/DCIF/2CIF/CIF/QCIF					
Decoding	Synchronous playback	16-ch					
	Capability	12-ch @ 12 MP (20fps) / 4-ch @ 8 MP (25fps) / 8-ch @ 4MP (30fps) / 16-ch @ 1080p (30fps)					
Network managem ent	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS					
	SATA	16 SATA interfaces					
Hard disk	eSATA	1 eSATA interface					
	Capacity	Up to 6 TB capacity for each disk					
Disk array	Array type	RAID 0, RAID 1, RAID 5, RAID 6, RAID 10					
External	Two-way audio	1-ch, RCA (2.0 Vp-p, 1 k Ω)					
interface	Network	2, RJ-45 10/100/100	0 Mbps self-adaptive I	Ethernet interface			

Network Video Recorder User Manual

	interface	
	Serial interface	RS-232; RS-485; Keyboard
	USB interface	Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0
	Alarm in/out	16/8
	Power supply	100 to 240 VAC, 50 to 60 Hz
	Max. Power	300 W
	Consumption (without hard disk)	≤ 45 W
General	Working temperature	-10 to +55° C (+14 to +131° F)
	Working humidity	10 to 90 %
	Chassis	19-inch rack-mounted 3U chassis
	Dimensions (W × D × H)	445 × 496 × 146 mm (17.5 × 19.5 × 5.7")
	Weight (without hard disk)	≤ 12.5 kg (27.6 lb)

18.1.3 DS-8600NI-I8

Model		DS-8608NI-I8	DS-8616NI-I8	DS-8632NI-I8	DS-8664NI-I8	
	IP video input	8-ch	16-ch	32-ch	64-ch	
Video/Au dio input	IP video input	Up to 12 MP resolution				
•	Two-way audio	1-ch, RCA (2.0 V	p-p, 1 k Ω)			
	Incoming	128 Mbps	256 Mbps	320 Mbps	320 Mbps	
	bandwidth	120 10005	or 200 Mbps (when RAID is enabled)			
Network	Outgoing bandwidth	256 Mbps, or 20	0 Mbps (when R/	AID is enabled)		
	Remote connection	128				
	Recording	12 MP/8 MP/6 N				
	resolution		GA/720p/VGA/4			
	VGA1/HDMI1 output	HDMI1: 4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, 2K (2560 × 1440)/60Hz, 1920 × 1080p/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
Video/Au dio output	resolution	•	0 × 1440)/60Hz 80 × 1024/60H			
	VGA2/HDMI2 output resolution	1920 × 1080p/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	Audio output	2-ch, RCA (2.0Vp	о-р, 1 КΩ)			
	Decoding format	H.265/H.265+/H	I.264/H.264+/MP	EG4		
Deceding	Live view/Playback resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA/720p/VGA /4CIF/DCIF/2CIF/CIF/QCIF				
Decoding	Synchronous playback	8-ch 16-ch				
	Capability	12-ch @ 12 MP (20fps) / 4-ch @ 8 MP (25fps) / 8-ch @ 4MP (30fps) / 16-ch @ 1080p (30fps)				
Network managem	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS				

ent		
	SATA	8 SATA interfaces
Hard disk	eSATA	1 eSATA interface
	Capacity	Up to 6TB capacity for each disk
	Network interface	2, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface
External interface	Serial interface	RS-232; RS-485; Keyboard
menace	USB interface	Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0
	Alarm in/out	16/4
	Power supply	100 to 240 VAC, 50 to 60 Hz
	Max. Power	200 W
	Consumption (without hard disk)	≤ 30 W
	Working temperature	-10 to +55º C (+14 to +131º F)
General	Working humidity	10 to 90 %
	Chassis	19-inch rack-mounted 2U chassis
	Dimensions (W × D × H)	445 × 470 ×90 mm (17.5"× 18.5" × 3.5")
	Weight (without hard disk)	≤ 8 kg (17.6 lb)

18.1.4 DS-7600NI-I2

Model		DS-7608NI-I2	DS-7616NI-I2	DS-7632NI-I2		
	ID video input	8-ch	16-ch	32-ch		
Video/Audio input	IP video input	Up to 12 MP res	olution			
	Two-way audio	1-ch, RCA (2.0 Vp-p, 1 k Ω)				
	Incoming bandwidth	80 Mbps	160 Mbps	256Mbps		
Network	Outgoing bandwidth	256 Mbps				
	Remote connection	32	128			
	Recording resolution		/IP/5 MP/4 MP/3 MF /DCIF/ 2CIF/CIF/QCI	• •		
Video/Audio output	HDMI output resolution	4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, 1920 × 1080p/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	VGA output resolution	1920 × 1080p/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	Audio output	1-ch, RCA (Linear, 1 KΩ)				
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4				
Decoding	Live view / Playback resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3MP/1080p/UXGA /720p/VGA/4CIF/DCIF/ 2CIF/CIF/QCIF				
Decouing	Synchronous playback	8-ch	16-ch	16-ch		
	Capability	12-ch @ 12 MP (20fps) / 4-ch @ 8 MP (25fps) / 8-ch @ 4MP (30fps) / 16-ch @ 1080p (30fps)				
Network management	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS				
Hard disk	SATA	2 SATA interface	S			
	Capacity	Up to 6TB capac	ity for each disk			
External interface	Network interface	1 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface				

	USB interface	Front panel: 1 × USB 2.0; Rear panel: 1 × USB 3.0
	Alarm in/out	4/1
	Power supply	12 VDC
	Power	≤40 W
	Consumption (without hard disk)	≤15 W
General	Working temperature	-10 to +55º C (+14 to +131º F)
	Working humidity	10 to 90 %
	Chassis	385 mm chassis
	Dimensions (W × D × H)	385 × 315× 52 mm (15.2" × 12.4" × 2.0")
	Weight(without hard disk)	≤ 1 kg (2.2 lb)

18.1.5 DS-7600NI-I2/P

		DS-7608NI-I2/	DS-7616NI-I2/	DS-7632NI-I2/			
Model		8P	16P	16P			
		8-ch	16-ch	32-ch			
Video/ Audio	IP video input	Up to 12 MP resolu	tion				
input	Two-way audio	1-ch, RCA (2.0 Vp-p	1-ch, RCA (2.0 Vp-p, 1 k Ω)				
	Incoming bandwidth	80 Mbps	160 Mbps	256Mbps			
Network	Outgoing bandwidth	256 Mbps					
	Remote connection	32	128				
	Recording resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA /720p/VGA/4CIF/DCIF/2CIF/CIF/QCIF					
Video/Au dio	HDMI output resolution	4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, 2K (2560 × 1440)/60Hz, 1920 × 1080p/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
output	VGA output resolution	1920 × 1080p/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	Audio output	1-ch, RCA (Linear, 1 KΩ)					
	Decoding format	H.265/H.265+/H.26	64/H.264+/MPEG4				
Decoding	Live view/Playback resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA /720p/VGA/4CIF/DCIF/2CIF/CIF/QCIF					
	Synchronous playback	8-ch	16-ch	16-ch			
	Capability	12-ch @ 12 MP (20fps) / 4-ch @ 8 MP (25fps) / 8-ch @ 4MP (30fps) / 16-ch @ 1080p (30fps)					
Network manage ment	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS					
Hard disk	SATA	2 SATA interfaces					
		1					

	Capacity	Up to 6TB capacity for each disk			
External	Network interface	1 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface			
interface	USB interface	Front panel: 1 × US	B 2.0; Rear panel: 1 × USB 3.0		
	Alarm in/out	4/1			
POE	Interface	8, RJ-45 10/100 Mbps 16, RJ-45 10/100 Mbps self-ada self-adaptive Ethernet interface			
Interface	Power	≤ 120W	≤ 200W		
	Supported standard	IEEE 802.3 af/at			
	Power supply	100 to 240 VAC, 50 to 60 Hz			
	Power	≤ 180 W	≤ 280 W		
	Consumption (without hard disk)	≤15 W (without enabling PoE)			
General	Working temperature	-10 to +55º C (+14 to +131º F)			
General	Working humidity	10 to 90 %			
	Chassis	385 mm chassis			
	Dimensions(W × D × H)	385 × 315× 52 mm	(15.2" × 12.4" × 2.0")		
	Weight(witho ut hard disk)	≤ 3 kg (6.6 lb)			

18.1.6 DS-7700NI-I4

Model		DS-7708NI-I4	DS-7716NI-I4	DS-7732NI-I4			
	IP video input	8-ch	16-ch	32-ch			
Video/Audio		Up to 12 MP resolu	tion				
input	Two-way audio	1-ch, RCA (2.0 Vp-p	1-ch, RCA (2.0 Vp-p, 1 k Ω)				
	Incoming bandwidth	80 Mbps	160 Mbps	256 Mbps			
Network	Outgoing bandwidth	256 Mbps					
	Remote connection	32	128				
	Recording resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA /720p/VGA/4CIF/DCIF/2CIF /CIF/QCIF					
Video/Audio output	HDMI output resolution	4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, 1920 × 1080p/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	VGA output resolution	1920 × 1080p/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	Audio output	1-ch, RCA (Linear, 1 KΩ)					
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4					
Decoding	Live view / Playback resolution	12 MP/8 MP/6 MP/ /720p/VGA/4CIF/D		1080p/UXGA			
	Synchronous playback	8-ch	16-ch	16-ch			
	Capability	12-ch @ 12 MP (20fps) / 4-ch @ 8 MP (25fps) / 8-ch @ 4MP (30fps) / 16-ch @ 1080p (30fps)					
Network management	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS					
	SATA	4 SATA interfaces					
Hard disk	Capacity	Up to 6TB capacity for each disk					

	Network interface	2, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface
External interface	Serial interface	1 RS-485 (half-duplex), 1 RS-232
	USB interface	Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0
	Alarm in/out	16/4
	Power supply	100 to 240 VAC
	Power	≤80 W
	Consumption (without hard disk)	≤20 W
	Working temperature	-10 to +55º C (+14 to +131º F)
General	Working humidity	10 to 90 %
	Chassis	19-inch rack-mounted 1.5U chassis
	Dimensions (W × D × H)	445 × 400 ×71 mm (17.5"× 15.7" × 2.8")
	Weight (without hard disk)	≤ 5 kg (11 lb)

18.1.7 DS-7700NI-I4/P

Model		DS-7708NI-I4/8P	DS-7716NI-I4/16P	DS-7732NI-I4/16P			
	ID video input	8-ch	16-ch	32-ch			
Video/Audio input	IP video input	Up to 12 MP resolut	tion				
	Two-way audio	1-ch, RCA (2.0 Vp-p,	1-ch, RCA (2.0 Vp-p, 1 k Ω)				
	Incoming bandwidth	80 Mbps	160 Mbps	256 Mbps			
Network	Outgoing bandwidth	256 Mbps					
	Remote connection	32	128				
	Recording resolution		12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA /720p/VGA/4CIF/DCIF/ 2CIF/CIF/QCIF				
Video/Audio output	HDMI output resolution	4K (3840 × 2160)/60Hz, 4K (3840 × 2160)/30Hz, 1920 × 1080p/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	VGA output resolution	1920 × 1080p/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	Audio output	1-ch, RCA (Linear, 1 KΩ)					
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4					
Decoding	Live view / Playback resolution	12 MP/8 MP/6 MP/5 MP/4 MP/3 MP/1080p/UXGA /720p/VGA/4CIF/DCIF/ 2CIF/CIF/QCIF					
	Synchronous playback	8-ch	16-ch	16-ch			
	Capability	12-ch @ 12 MP (20fps) / 4-ch @ 8 MP (25fps) / 8-ch @ 4MP (30fps) / 16-ch @ 1080p (30fps)					
Network management	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS					
Hard dick	SATA	4 SATA interfaces					
Hard disk	Capacity	Up to 6TB capacity for each disk					
External	Network	1, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface					

Network Video Recorder User Manual

interface	interface					
	Serial interface	RS-485 (half-duplex), RS-232				
	USB interface	Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0				
	Alarm in/out	16/4				
POE	Interface	8, RJ-45 10/100Mbpsself-adaptiveEthernet interface				
Interface	Power	≤200W				
	Supported standard	IEEE 802.3 af/at				
	Power supply	100 to 240 VAC				
	Power	≤300 W				
	Consumption (without hard disk)	≤20 W (without enabling PoE)				
Conoral	Working temperature	-10 to +55º C (+14 to +131º F)				
General	Working humidity	10 to 90 %				
	Chassis	19-inch rack-mounted 1.5U chassis				
	Dimensions (W × D × H)	445 × 400 ×71 mm (17.5"× 15.7" × 2.8")				
	Weight(without hard disk)	≤ 5 kg (11 lb)				

18.1.8 DS-8600NI-K8

Model		DS-8608NI-K8	DS-8616NI-K8	DS-8632NI-K8
	IP video input	8-ch	16-ch	32-ch
Video/ Audio	Incoming bandwidth	80 Mbps	160 Mbps	256 Mbps
input	Outgoing bandwidth	160 Mbps		

		1				
Video/ Audio output	VGA1/HDMI1 output	HDMI1: 4K (3840 × 2160)/30Hz, 2K (2560 × 1440)/60Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	resolution	HDMI2: 1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	VGA2/HDMI2 output	VGA1: 2K (2560 × 1440)/60Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	resolution	VGA2: 1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 720/60Hz, 1024 × 768/60Hz				
	Audio output	2-ch, RCA (Linear,	1 Κ Ω)			
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4				
Deceding	Recording resolution	8MP/6MP/5MP/4MP/3MP/1080p/UXGA /720p/VGA/4CIF/DCIF/2CIF/CIF/QCIF				
Decoding	Synchronous playback	8-ch	16-ch	16-ch		
	Capability	2-ch @ 8 MP (25fps) / 4-ch @ 4MP (30fps) / 8-ch @ 1080p (30fps)				
Network managem ent	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS				
	SATA	8 SATA interfaces				
Hard disk	eSATA	1 eSATA interface				
	Capacity	Up to 6TB capacity for each disk				
	Two-way audio	1-ch, RCA (2.0 Vp-p, 1 kΩ)				
External	Network interface	2, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface				
interface	Serial interface	RS-232; RS-485; Keyboard				
	USB interface	Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0				
	Alarm in/out	16/4	16/4			
General	Power supply	100 to 240 VAC, 50 to 60 Hz				
General	Max. Power	200 W				

Consumption (without hard disk)	≤ 30 W
Working temperature	-10 to +55° C (14 to 131° F)
Working humidity	10 to 90 %
Chassis	19-inch rack-mounted 2U chassis
Dimensions (W × D × H)	445 × 470 × 90 mm (17.5" × 18.5" × 3.5")
Weight (without hard disk)	≤ 8 kg (17.6 lb)

18.1.9 DS-7700NI-K4

Model		DS-7708NI-K4	DS-7	716NI-K4	DS-77	32NI-K4
	IP video input	8-ch	16-ch		32-ch	
Video/ Audio input	Incoming bandwidth	80 Mbps 160 Mbps		256 M	bps	
mpar	Outgoing bandwidth	160 Mbps				
Video/	HDMI output resolution	4K (3840 × 2160)/30Hz, 2K (2560 × 1440)/60Hz, 1920 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 720/60Hz, 1024 × 768/60Hz				-
Audio output	VGA output resolution	1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	Audio output	1-ch, RCA (Linear, 1 KΩ)				
	Decoding format	H.265/H.265+/H.264+/H.264/MPEG4				
Deceding	Recording resolution	8MP/6MP/5MP/4MP/3MP/1080p/UXGA/720p/VGA/4CIF/ DCIF/2CIF/CIF/QCIF				
Decoding	Synchronou s playback	8-ch 16-		16-ch		16-ch
	Capability	2-ch @ 8 MP (25fps) / 4-ch @ 4MP (30fps) / 8-ch @ 1080p (30fps)				8-ch @ 1080p
Network manageme nt	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS				
Hard disk	SATA	4 SATA interfaces				
	Capacity	Up to 6TB capacity for each disk				
	Two-way audio	1-ch, RCA (2.0 Vp-p, 1kΩ)				
External interface	Network interface	2, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface				
	Serial	RS-485 (half-duplex), RS-232, Keyboard (optional)				

	interface	
USB interface		Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0
	Alarm in/out	16/4
	Power supply	100 to 240 VAC
	Power	$\leq 80 \text{ W}$
	Consumptio n (without hard disk)	≤ 20 W
General	Working temperature	-10 to +55° C (14 to 131° F)
	Working humidity	10 to 90 %
	Chassis	19-inch rack-mounted 1.5U chassis
	Dimensions (W × D × H)	445 × 400 ×71 mm (17.5"× 15.7" × 2.8")
	Weight (without hard disk)	≤ 5 kg (11. lb)

18.1.10 DS-7700NI-K4/P

Model		DS-7708NI-K4 /8P	DS-7716NI-K 4/16P	DS-7732NI-K4/1 6P	
Video/ Audio	IP video input	8-ch	16-ch	32-ch	
	Incoming bandwidth	80 Mbps 160 Mbps 256 Mbps		256 Mbps	
input	Outgoing bandwidth	160 Mbps			
Video/	HDMI output resolution	4K (3840 × 2160)/30Hz, 2K (2560 × 1440)/60Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz			
Audio output	VGA output resolution	1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz			
	Audio output	1-ch, RCA (Linear,	1 ΚΩ)		
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4			
Decediae	Recording resolution	8MP/6MP/5MP/4MP/3MP/1080p/UXGA/720p/VGA/4C IF/DCIF/2CIF/CIF/QCIF			
Decoding	Synchronous playback	8-ch	16-ch	16-ch	
	Capability	2-ch @ 8 MP (25fps) / 4-ch @ 4MP (30fps) / 8-ch @ 1080p (30fps)			
Network managem ent	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS			
Hard dick	SATA	4 SATA interfaces			
Hard disk	Capacity	Up to 6TB capacity for each disk			
	Two-way audio	1-ch, RCA (2.0 Vp-p, 1kΩ)			
External interface	Network interface	1, RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface			
	Serial interface	RS-485 (half-duplex), RS-232, Keyboard			
	USB interface	Front panel: 2 × USB 2.0; Rear panel: 1 × USB 3.0			

Network Video Recorder User Manual

	Alarm in/out	16/4		
POE Interface	Interface	8, RJ-45 10/100 Mbps self-adaptive Ethernet interface	16, RJ-45 10/100 Mbps self-adaptive Ethernet interface	
interface	Power	≤ 200 W		
	Supported standard	IEEE 802.3 af/at		
	Power supply	100 to 240 VAC		
	Power	≤ 300 W		
	Consumption (without hard disk)	≤ 20 W (without enabling PoE)		
	Working temperature	-10 to +55ºC (14 to 131ºF)		
General	Working humidity	10 to 90 %		
	Chassis	19-inch rack-mounted 1.5U chassis		
	Dimensions (W × D × H)	445 × 400 ×71 mm (17.5"× 15.7" × 2.8")		
	Weight (without hard disk)	≤ 5 kg (11. lb)		

18.1.11 DS-7600NI-K2

Model		DS-7608NI-K2	DS-7616NI-K2	DS-7632NI-K2		
	IP video input	8-ch	16-ch	32-ch		
Video/ Audio	Incoming bandwidth	80 Mbps	160 Mbps 256 Mbps			
input	Outgoing bandwidth	160 Mbps				
Video/	HDMI output resolution	4K (3840 × 2160)/30Hz, 2K (2560 × 1440)/60Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
Audio output	VGA output resolution	1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	Audio output	1-ch, RCA (Linear, 1 KΩ)				
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4				
Deceding	Recording resolution	8MP/6MP/5MP/4MP/3MP/1080p/UXGA/720p/VGA/4 CIF/DCIF/2CIF/CIF/QCIF				
Decoding	Synchronous playback	8-ch	16-ch	16-ch		
	Capability	2-ch @ 8 MP (25fps) / 4-ch @ 4MP (30fps) / 8-ch @ 1080p (30fps)				
Network managem ent	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS				
	SATA	2 SATA interfaces				
Hard disk	Capacity	Up to 6TB capacit	y for each disk			
	Two-way audio	1-ch, RCA (2.0 Vp-p, 1kΩ)				
External interface	Network interface	1 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interface				
	USB interface	Front panel: 1 × USB 2.0; Rear panel: 1 × USB 3.0				
	Alarm in/out	4/1				

	Power supply	12 VDC
	Power	≤ 40 W
	Consumption (without hard disk)	≤15 W
	Working temperature	-10 to +55° C (14 to 131° F)
General	Working humidity	10 to 90 %
	Chassis	385 mm chassis
	Dimensions (W × D × H)	385 × 315× 52 mm (15.2" × 12.4" × 2.0")
	Weight (without hard disk)	≤ 1 kg (2.2 lb)

18.1.12 DS-7600NI-K2/P

Model		DS-7608NI-K2 /8P	DS-7616NI-K 2/16P	DS-7632NI-K2/ 16P		
	IP video input	8-ch	16-ch	32-ch		
Video/ Audio	Incoming bandwidth	80 Mbps	160 Mbps	256 Mbps		
input	Outgoing bandwidth	160 Mbps				
Video/	HDMI output resolution		00 × 1200/60Hz,	× 1440)/60Hz, 1920 1280 × 1024/60Hz,		
Audio output	VGA output resolution	1920 × 1080/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz				
	Audio output	1-ch, RCA (Linear, 1 KΩ)				
	Decoding format	H.265/H.265+/H.264/H.264+/MPEG4				
Decedies	Recording resolution	8MP/6MP/5MP/4MP/3MP/1080p/UXGA/720p/VGA/4 CIF/DCIF/2CIF/CIF/QCIF				
Decoding	Synchronous playback	8-ch	16-ch	16-ch		
	Capability	2-ch @ 8 MP (25fps) / 4-ch @ 4MP (30fps) / 8-ch @ 1080p (30fps)				
Network managem ent	Network protocols	TCP/IP, DHCP, Hi SMTP, NFS, iSCSI,		DDNS, NTP, SADP,		
the set of st	SATA	2 SATA interfaces				
Hard disk	Capacity	Up to 6TB capacit	y for each disk			
	Two-way audio	1-ch, RCA (2.0 Vp-	-p, 1kΩ)			
External	Network interface	1, RJ-45 10/100, interface	/1000 Mbps self	-adaptive Ethernet		
interface	USB interface	Front panel: 1 × U	ISB 2.0; Rear pane	el: 1 × USB 3.0		
	Alarm in/out	4/1				

POE Interface	Interface	8, RJ-45 10/100 Mbps self-adaptive Ethernet interface	16, RJ-45 10/100 Mbps self-adaptive Ethernet interface	
interface	Power	≤ 120 W	≤ 200 W	
	Supported standard	IEEE 802.3 af/at		
	Power supply	100 to 240 VAC		
	Power	≤ 180 W	≤ 280 W	
	Consumption (without hard disk)	≤ 15 W		
	Working temperature	-10 to +55° C (14 to 131° F)		
General	Working humidity	10 to 90 %		
	Chassis	385 mm chassis		
	Dimensions (W × D × H)	385 × 315× 52 mm (15.2" × 12.4" × 2.0")		
	Weight (without hard disk)	≤ 3 kg (6.6 lb)		

18.1.13 DS-7600NI-K1

Model		DS-7604NI-K1	DS-7608NI-K1	DS-7616NI-K1			
	IP video input	4-ch	8-ch	16-ch			
Video/ Audio	Incoming bandwidth	40 Mbps	60 Mbps	80 Mbps			
input	Outgoing bandwidth	80 Mbps					
Video/	HDMI/VGA output	· · · · · · · · · · · · · · · · · · ·	4K (3840 × 2160)/30Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024				
Audio output	resolution	VGA: 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz					
	Audio output	t 1-ch, RCA (Linear, 1 KΩ)					
	Decoding format	H.265/H.264/H.264+					
Decoding	Recording resolution	8MP/6MP/5MP/4MP/3MP/1080p/UXGA/720p/VGA/4C IF/DCIF/2CIF/CIF/QCIF					
	Synchronous playback	4-ch	8-ch	16-ch			
	Capability	2-ch @ 4 MP (30fps)					
Network manageme nt	Network protocols	TCP/IP, DHCP, Hil SMTP, NFS, iSCSI, U		DDNS, NTP, SADP,			
Hard disk	SATA	1 SATA interface					
	Capacity	Up to 6TB capacity	for each disk				
	Two-way audio	1-ch, RCA (2.0 Vp-p	o, 1kΩ)				
External interface	Network interface	1, RJ-45 10 M/ interface	100 Mbps self-a	daptive Ethernet			
	USB interface	2 × USB 2.0					

Network Video Recorder User Manual

	Power supply	12 VDC
	Consumption (without hard disk)	≤ 10 W
	Working temperature	-10 to +55° C (14 to 131° F)
General	Working humidity	10 to 90 %
	Chassis	260 mm chassis
	Dimensions (W × D × H)	260 × 225 × 48 mm (10.2" × 8.9" × 1.9")
	Weight (without hard disk)	≤ 1 kg (2.2 lb)

18.1.14 DS-7604NI-K1/4P

Model		DS-7604NI-K1/4P
	IP video input	4-ch
Video/ Audio	Incoming bandwidth	40 Mbps
input	Outgoing bandwidth	80 Mbps
Video/	HDMI/VGA output	HDMI: 4K (3840 × 2160)/30Hz, 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz
Audio output	resolution	VGA: 1920 × 1080/60Hz, 1600 × 1200/60Hz, 1280 × 1024/60Hz, 1280 × 720/60Hz, 1024 × 768/60Hz
	Audio output	1-ch, RCA (Linear, 1 KΩ)
	Decoding format	H.265/H.264/H.264+
Decoding	Recording resolution	8MP/6MP/5MP/4MP/3MP/1080p/UXGA/720p/VGA/ 4CIF/DCIF/2CIF/CIF/QCIF
	Synchronous playback	4-ch
	Capability	2-ch @ 4 MP (30fps)
Llord dick	SATA	1 SATA interface for 1HDD
Hard disk	Capacity	Up to 6TB capacity for each disk
Network managem ent	Network protocols	TCP/IP, DHCP, Hik-Connect, DNS, DDNS, NTP, SADP, SMTP, NFS, iSCSI, UPnP™, HTTPS
	Two-way audio	1-ch, RCA (2.0 Vp-p, 1kΩ)
External interface	Network interface	1, RJ-45 100 Mbps full-duplex Ethernet interface
	USB interface	Front panel: 1 × USB 2.0; Rear panel: 1 × USB 2.0
POE	Interface	4, RJ-45 100 Mbps full-duplex Ethernet interface

Interface	Power	≤ 40 W
	Power	\$ 40 W
Supported standard		IEEE 802.3 af/at
	Power supply	48 VDC
	Power	≤ 65 W
	Consumption (without hard disk)	≤ 10 W (not enabling PoE)
	Working temperature	-10 to +55° C (14 to 131° F)
General	Working humidity	10 to 90 %
	Chassis	1U chassis
	Dimensions (W × D × H)	315 × 240 × 48 mm (12.4" × 9.4" × 1.9")
	Weight (without hard disk)	≤ 1 kg (2.2 lb)

18.2 Glossary

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the NVR, with the main stream having a maximum resolution of 4CIF and the sub-stream having a maximum resolution of CIF.
- HDD: Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network
- **DDNS**: Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
- Hybrid NVR: A hybrid NVR is a combination of a NVR and NVR.
- NTP: Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.
- NTSC: Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.
- **NVR:** Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other NVRs.
- **PAL:** Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.
- **PTZ:** Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.
- **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

18.3 Troubleshooting

• No image displayed on the monitor after starting up normally.

Possible Reasons:

- No VGA or HDMI connections.
- Connection cable is damaged.
- Input mode of the monitor is incorrect.

Step 1 Verify the device is connected with the monitor via HDMI or VGA cable.

Step 2 If not, please connect the device with the monitor and reboot.

- Step 3 Verify the connection cable is good.
- Step 4 If there is still no image display on the monitor after rebooting, please check if the connection cable is good, and change a cable to connect again.
- Step 5 Verify Input mode of the monitor is correct.
- Step 6 Please check the input mode of the monitor matches with the output mode of the device (e.g. if the output mode of NVR is HDMI output, then the input mode of monitor must be the HDMI input). And if not, please modify the input mode of monitor.
- Step 7 Check if the fault is solved by the step 1 to step 3.
- Step 8 If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• There is an audible warning sound "Di-Di-Di-DiDi" after a new bought NVR starts up.

Possible Reasons:

- No HDD is installed in the device.
- The installed HDD has not been initialized.
- The installed HDD is not compatible with the NVR or is broken-down.

Step 9 Verify at least one HDD is installed in the NVR.

- If not, please install the compatible HDD.

Please refer to the "Quick Operation Guide" for the HDD installation steps.

 If you don't want to install a HDD, select "Menu>Configuration > Exceptions", and uncheck the Audible Warning checkbox of "HDD Error".

Step 10 Verify the HDD is initialized.

- 1) Select "Menu>HDD>General".
- 2) If the status of the HDD is "Uninitialized", please check the checkbox of corresponding HDD and click the "Init" button.

Step 11 Verify the HDD is detected or is in good condition.

- 3) Select "Menu>HDD>General".
- 4) If the HDD is not detected or the status is "Abnormal", please replace the dedicated HDD according to the requirement.

Step 12 Check if the fault is solved by the step 1 to step 3.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• The status of the added IP camera displays as "Disconnected" when it is connected through Private Protocol. Select "Menu>Camera>Camera>IP Camera" to get the camera status.

Possible Reasons:

- Network failure, and the NVR and IP camera lost connections.
- The configured parameters are incorrect when adding the IP camera.
- Insufficient bandwidth.

Step 1 Verify the network is connected.

- 1) Connect the NVR and PC with the RS-232 cable.
- 2) Open the Super Terminal software, and execute the ping command. Input "ping IP" (e.g. ping 172.6.22.131).

Simultaneously press **Ctrl** and **C** to exit the ping command.

If there exists return information and the time value is little, the network is normal.

Step 2 Verify the configuration parameters are correct.

- 1) Select "Menu>Camera>Camera>IP Camera".
- 2) Verify the following parameters are the same with those of the connected IP devices, including IP address, protocol, management port, user name and password.

Step 3 Verify the whether the bandwidth is enough.

- 1) Select "Menu >Maintenance > Net Detect > Network Stat.".
- 2) Check the usage of the access bandwidth, and see if the total bandwidth has reached its limit.

Step 4 Check if the fault is solved by the step 1 to step 3.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• The IP camera frequently goes online and offline and the status of it displays as "Disconnected".

Possible Reasons:

- The IP camera and the NVR versions are not compatible.
- Unstable power supply of IP camera.
- Unstable network between IP camera and NVR.
- Limited flow by the switch connected with IP camera and NVR.

Step 1 Verify the IP camera and the NVR versions are compatible.

- 1) Enter the IP camera Management interface "Menu > Camera > Camera > IP Camera", and view the firmware version of connected IP camera.
- 2) Enter the System Info interface "Menu>Maintenance>System Info>Device Info", and view the firmware version of NVR.

Step 2 Verify power supply of IP camera is stable.

- 1) Verify the power indicator is normal.
- 2) When the IP camera is offline, please try the ping command on PC to check if the PC connects with the IP camera.

Step 3 Verify the network between IP camera and NVR is stable.

- 3) When the IP camera is offline, connect PC and NVR with the RS-232 cable.
- 4) Open the Super Terminal, use the ping command and keep sending large data packages to the connected IP camera, and check if there exists packet loss.

Simultaneously press **Ctrl** and **C** to exit the ping command.

Example: Input ping 172.6.22.131 –l 1472 –f.

Step 1 Verify the switch is not flow control.

Check the brand, model of the switch connecting IP camera and NVR, and contact with the manufacturer of the switch to check if it has the function of flow control. If so, please turn it down.

Step 2 Check if the fault is solved by the step 1 to step 4.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

 No monitor connected with the NVR locally and when you manage the IP camera to connect with the device by web browser remotely, of which the status displays as Connected. And then you connect the device with the monitor via VGA or HDMI interface and reboot the device, there is black screen with the mouse cursor.

Connect the NVR with the monitor before startup via VGA or HDMI interface, and manage the IP camera to connect with the device locally or remotely, the status of IP camera displays as Connect. And then connect the device with the CVBS, and there is black screen either.

Possible Reasons:

After connecting the IP camera to the NVR, the image is output via the main spot interface by default.

Step 1 Enable the output channel.

Step 2 Select "Menu > Configuration > Live View > View", and select video output interface in the drop-down list and configure the window you want to view.

- The view settings can only be configured by the local operation of NVR.
- Different camera orders and window-division modes can be set for different output interfaces separately, and digits like "D1" and "D2" stands for the channel number, and "X" means the selected window has no image output.

Step 3 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• Live view stuck when video output locally.

Possible Reasons:

- Poor network between NVR and IP camera, and there exists packet loss during the transmission.
- The frame rate has not reached the real-time frame rate.

Step 1 Verify the network between NVR and IP camera is connected.

- When image is stuck, connect the RS-232 ports on PC and the rear panel of NVR with the RS-232 cable.
- Open the Super Terminal, and execute the command of "**ping** *192.168.0.0* –**I 1472** –**f**" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press Ctrl and C to exit the ping command.

Step 2 Verify the frame rate is real-time frame rate.

Select "Menu > Record > Parameters > Record", and set the Frame rate to Full Frame.

Step 3 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• Live view stuck when video output remotely via the Internet Explorer or platform software.

Possible Reasons:

- Poor network between NVR and IP camera, and there exists packet loss during the transmission.
- Poor network between NVR and PC, and there exists packet loss during the transmission.
- The performances of hardware are not good enough, including CPU, memory, etc..

Step 4 Verify the network between NVR and IP camera is connected.

- 1) When image is stuck, connect the RS-232 ports on PC and the rear panel of NVR with the RS-232 cable.
- 2) Open the Super Terminal, and execute the command of "ping 192.168.0.0 I 1472 f" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press Ctrl and C to exit the ping command.

Step 5 Verify the network between NVR and PC is connected.

- 1) Open the cmd window in the Start menu, or you can press "windows+R" shortcut key to open it.
- Use the ping command to send large packet to the NVR, execute the command of "ping 192.168.0.0 –l 1472 –f" (the IP address may change according to the real condition), and check if there exists packet loss.



Simultaneously press **Ctrl** and **C** to exit the ping command.

Step 6 Verify the hardware of the PC is good enough.

Simultaneously press **Ctrl**, **Alt** and **Delete** to enter the windows task management interface, as shown in the following figure.

and the second sec	Herp			
platins Process	Services	Performance	Networks	g Livers
OPU-Usage	OUUsage	Hatory	100000	
and the second se				
10.00	WARN	17.17.2	ALC: N	
25.5			WY.	- sh
and the second s	1000			
Menary	Physica My	vicary Usage Hi	atory	-
and the second se				
L 10 GB				
Lupon Physical Menory (ME)		Inster		
Hussal Menory (HE) Total	3060	System Handles		21918
Total Cached				2593
Total	3060	Hardes		
Total Cached	3060 1324	Handles Threads Processorie Up Time		\$100 77 (11:57)4)
Total Cached Available Free	5060 1324 1837	Handles Threads Processes		\$100 73
Total Cached Available	5060 1324 1837	Handles Threads Processon Up Time Convett (P		\$100 77 (11:57)4)

Figure 18-1 Windows task management interface

- Select the "Performance" tab; check the status of the CPU and Memory.
- If the resource is not enough, please end some unnecessary processes.

Step 7 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• When using the NVR to get the live view audio, there is no sound or there is too much noise, or the volume is too low.

Possible Reasons:

- Cable between the pickup and IP camera is not connected well; impedance mismatches or incompatible.
- The stream type is not set as "Video & Audio".
- The encoding standard is not supported with NVR.
- Step 1 Verify the cable between the pickup and IP camera is connected well; impedance matches and compatible.

Log in the IP camera directly, and turn the audio on, check if the sound is normal. If not, please contact the manufacturer of the IP camera.

Step 2 Verify the setting parameters are correct.

Select "Menu > Record > Parameters > Record", and set the Stream Type as "Audio & Video".

Step 3 Verify the audio encoding standard of the IP camera is supported by the NVR.

NVR supports G722.1 and G711 standards, and if the encoding parameter of the input audio is not one of the previous two standards, you can log in the IP camera to configure it to the supported standard.

Step 4 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• The image gets stuck when NVR is playing back by single or multi-channel.

Possible Reasons:

- Poor network between NVR and IP camera, and there exists packet loss during the transmission.
- The frame rate is not the real-time frame rate.
- The NVR supports up to 16-channel synchronize playback at the resolution of 4CIF, if you want a 16-channel synchronize playback at the resolution of 720p, the frame extracting may occur, which leads to a slight stuck.

Step 5 Verify the network between NVR and IP camera is connected.

- 1) When image is stuck, connect the RS-232 ports on PC and the rear panel of NVR with the RS-232 cable.
- Open the Super Terminal, and execute the command of "ping 192.168.0.0 I 1472 f" (the IP address may change according to the real condition), and check if there exists packet loss.

Simultaneously press the Ctrl and C to exit the ping command.

Step 6 Verify the frame rate is real-time frame rate.

Select "Menu > Record > Parameters > Record", and set the Frame Rate to "Full Frame".

Step 7 Verify the hardware can afford the playback.

Reduce the channel number of playback.

Select "Menu > Record > Encoding > Record", and set the resolution and bitrate to a lower level.

Step 8 Reduce the number of local playback channel.

Select "Menu > Playback", and uncheck the checkbox of unnecessary channels.

Step 9 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

• No record file found in the NVR local HDD, and prompt "No record file found".

Possible Reasons:

- The time setting of system is incorrect.

- The search condition is incorrect.
- The HDD is error or not detected.

Step 1 Verify the system time setting is correct.

Select "Menu > Configuration > General > General", and verify the "Device Time" is correct.

Step 2 Verify the search condition is correct.

Select "Playback", and verify the channel and time are correct.

Step 3 Verify the HDD status is normal.

Select "Menu > HDD > General" to view the HDD status, and verify the HDD is detected and can be read and written normally.

Step 4 Check if the fault is solved by the above steps.

If it is solved, finish the process.

If not, please contact the engineer from Hikvision to do the further process.

18.4 Summary of Changes

Version 3.4.92

Added:

• Easy network access by Hik-Connect. (Chapter 2.2 Using the Wizard for Basic Configuration, Chapter 12.2.1 Configuring Hik-Connect)

Deleted:

• Delete two DDNS types: IP sever and HiDDNS. (Chapter 2.2 Using the Wizard for Basic Configuration, Chapter 12.2.2 Configuring DDNS)

Version 3.4.91

Added:

- Support long distance (max.: 250-300 m) network transmission via PoE for /P models. (Chapter 2.3.5 Configuring PoE Interface)
- Add prompt of using enterprise-level HDD to create array on GUI. (Chapter 13.1.2 Enable RAID)

Version 3.4.90

Added:

- Reset the admin password by exporting/importing the GUID file. (Chapter 2.1.2, Chapter 2.1.4, Chapter 2.1.5, Chapter 17.5.3)
- DS-7600/7700/8600/9600-I (/P) series NVR support 3D positioning in live view. (Chapter 3.1)
- Configurable main stream and sub-stream for the live view. (Chapter 3.1, Chapter 3.3)
- All-day continuous recording is configured by factory default. (Chapter 5.2)

Updated:

- Optimize the playback interface and add the configurable motion detection area for smart playback. (Chapter 6 Playback)
- Up to 2048 LRP lists supported in vehicle detection.

Version 3.4.80

Added:

• Add the new models of DS-8600NI-I8. (Chapter 1.1 Front Panel, Chapter 1.5 Rear Panel and Chapter 18.1 Specifications)

- DS-7600/7700/8600/9600-I (/P) series NVR is accessible by the thermal network camera, and supports the advanced search for fire/ship/temperature/temperature difference detection triggered alarm and the recorded video files and pictures (Chapter 11.6 Advanced Search)
- DS-7600/7700/8600/9600-I (/P) series NVR supports the playback by main stream or sub stream. (Chapter 6 Playback)
- Remind user to remember the password after the device is activated. (Chapter 2.3 Activating Your Device)
- One-key alarm disarming for the local alarm input 1. (Chapter 8.2 Setting Sensor Alarms)

Updated:

- Optimize the playback by normal/smart interface. (Chapter 6 Playback)
- Admin Password changed to Password when adding the IP camera. (Chapter 2.6 Adding and Connecting the IP Cameras)

Deleted:

• Delete four VCA detection types: people gathering, fast movement, parking and loitering (Chapter 10 VCA Alarm)

Version 3.4.70

Added:

• Add the POS function supported by I series NVR. (Chapter 5 Recording and Capture Settings, Chapter 6 Playback, Chapter 6 Backup, Chapter 9 POS Configuration)

Version 3.4.6

Updated:

- Update the description of IR remote control operation. (Chapter 1.2 IR Remote Control Operations)
- Change the EZVIZ Cloud P2P to HIK Cloud P2P. (Chapter 2.4 Using Wizard for Basic Configuration, Chapter 11.2.1 Configuring HIK Cloud P2P)

Version 3.4.2

Added:

- Add the new models of DS-7600NI-K1, and DS-7600NI-K1/4P. (Chapter 1.1 Front Panel and Chapter 1.5 Rear Panel)
- Support the display of IP camera's password on the IP camera management interface. (Chapter 2.4 Adding and Connecting the IP Cameras; Chapter 16.5.2 Editing a User)

- Add the configuration and use of unlock pattern for fast login. (Chapter 2.3 Using the Unlock Pattern for Login)
- Add the fisheye expansion view for the connected fisheye camera in the live view and playback. (Chapter 3.2.5 Fisheye Expansion View)
- Add the scaling display (30min/1h/2h/6h/24h) of time bar in the playback mode. (Chapter 6 Playback)
- Add the thumbnails view and fast view during playback. (Chapter Key Features, Chapter 6.2.2 Thumbnails View, Chapter 6.2.3 Fast View)

Updated:

- Optimize the playback interface. (Chapter 6 Playback)
- Update the digital zoom operation in image. (Chapter 3.2.3 Quick Setting Toolbar in Live View Mode, Chapter 6.2.2 Digital Zoom)

Version 3.3.9

Updated:

• Support H.265 video encoding format. (Product Key Features, Chapter 5.1 Configuring Parameters)

Deleted:

• Delete the PPPoE settings. (Delete Chapter 11.2.1 Configuring PPPoE Settings)

Version 3.3.7

Added:

- Add the new models of DS-8600NI-K8, DS-7700NI-K4(/P) and DS-7600NI-K2(/P).
- Add the front panel and rear panel of the new models. (Chapter 1.1 Front Panel and Chapter 1.5 Rear Panel)
- Add the specifications of the new models (Chapter 17.1 Specifications)

Version 3.3.6

Added:

 Add front panel and rear panel of DS-9600NI-I16. (Chapter 1.1 Front Panel and Chapter 1.5 Rear Panel)

Updated:

• DS-9600NI-I16 supports RAID6, capture, picture playback, eSATA HDD and eSATA backup, two self-adaptive 10M/100M/1000M network interfaces. (Product Main Features, 2.3 Using Wizard for Basic Configuration, Chapter 5 Recording and Capture Settings, Chapter 6.1.9 Playing Back

Pictures, Chapter 7 Backup, Chapter 11 Network Settings, Chapter 12 RAID, Chapter 17 Specifications)

Version 3.3.4

Added:

- Add the new models of DS-7600NI-I2 (/P) and DS-7700NI-I4 (/P).
- Add the support of Cloud P2P (Step 4 in Chapter 2.3 Using the Wizard for Basic Configuration, Chapter 11.2.2 Configuring EZVIZ Cloud P2P)

18.5 List of Compatible IP Cameras

18.5.1 List of Hikvision IP Cameras

For the list, our company holds right to interpret.

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	DS-2CD7133F-E	V5.2.0 build 140721	640*480	V	×
	DS-2CD793NFWD-EI	V5.2.0 build 140721	704*576	V	V
SD		V2.0 build 090522			
Network	DS-2CD802NF	V2.0 build 090715	704*576	v	v
Camera		V2.0 build 110301			
	DS-2CD833F-E	V5.2.0 build 140721	640*480	V	V
	DS-2CD893PF-E	V5.2.0 build 140721	704*576	V	V
	DS-2CD2012-I	V5.3.0 build150327	1280*960	V	×
	DS-2CD2132-I	V5.3.0 build150327	2048*1536	V	×
	DS-2CD2410FD-I(W)	V5.3.0 build150327	1920*1080	V	V
	DS-2CD2612F-I	V5.3.0 build150327	1280*960	V	×
	DS-2CD2612F-IS	V5.3.0 build150327	1280*960	V	V
	DS-2CD2632F-I	V5.3.0 build150327	2048*1536	V	×
	DS-2CD2632F-IS	V5.3.0 build150327	2048*1536	V	V
	DS-2CD2710F-I	V5.3.0 build150327	1920*1080	V	×
	DS-2CD2720F-I	V5.3.0 build150327	1920*1080	V	×
	DS-2CD4010F	V5.3.0 build150327	1920*1080	V	V
	DS-2CD4012F	V5.3.0 build150327	1280*1024	V	V
HD Network	DS-2CD4026FWD	V5.3.0 build150327	1920*1080	V	V
Camera	DS-2CD4026FWD-SDI	V5.3.0 build150327	1920*1080	V	V
	DS-2CD4032FWD	V5.3.0 build150327	2048*1536	V	V
	DS-2CD4065F	V5.3.0 build150327	3072*2048	V	V
	DS-2CD4124F-I(2.8-12mm)	V5.3.0 build150327	1920*1080	V	V
	DS-2CD4132FWD-I(2.8-12m m)	V5.3.0 build150327	2048*1536	V	V
	DS-2CD4212F-I(2.8-12mm)	V5.3.0 build150327	1280*1024	V	×
	DS-2CD4212F-IS(2.8-12mm)	V5.3.0 build150327	1280*1024	v	V
	DS-2CD4212FWD-I	V5.3.0 build150327	1280*960	v	×
	DS-2CD4212FWD-IS	V5.3.0 build150327	1280*960	v	V
	DS-2CD4224F-I	V5.3.0 build150327	1920*1080	v	×
	DS-2CD4232FWD-I	V5.3.0 build150327	2048*1536	V	×

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	DS-2CD4232FWD-IS(2.8-12m m)	V5.3.0 build150327	2048*1536	v	V
	DS-2CD4312F-I	V5.3.0 build150327	1280*1024	V	×
	DS-2CD4312FWD-I	V5.3.0 build150327	1280*960	V	×
	DS-2CD4324F-I	V5.3.0 build150327	1920*1080	V	×
	DS-2CD4332FHWD-IS	V5.3.0 build150327	2048*1536	V	V
	DS-2CD4332FHWD-I	V5.3.0 build150327	2048*1536	V	×
	DS-2CD4332FWD-I	V5.3.0 build150327	2048*1536	V	×
	DS-2CD6213F	V5.2.6 build 141218	1280*960	V	×
	DS-2CD6223F	V5.2.6 build 141218	1920*1080	V	×
	DS-2CD6233F	V5.2.6 build 141218	2048*1536	v	×
	DS-2CD7153-E	V5.2.0 build 140721	1600*1200	v	×
	DS-2CD7164-E	V5.2.0 build 140721	1280*720	V	×
	DS_2CD754F-EI	V5.2.0 build 140721	2048*1536	v	v
	DS-2CD754FWD-E	V5.2.0 build 140721	1920*1080	v	v
	DS-2CD754FWD-EIZ	V5.2.0 build 140721	2048*1536	V	V
	DS_2CD783F-EI	V5.2.0 build 140721	2560*1920	v	v
	DS-2CD8153F-E	V5.2.0 build 140721	1600*1200	v	v
	DS-2CD8464F-EI	V5.2.0 build 140721	1280*960	v	V
		V2.0 build 110614			
	DS-2CD852MF-E	V2.0 build 110426	1600*1200	v	v
		V2.0 build 100521			
	DS-2CD855F-E	V5.2.0 build 140721	1920*1080	v	v
		V2.0 build 110614			
	DS-2CD862MF-E	V2.0 build 110426	1280*960	v	v
		V2.0 build 100521			
	DS-2CD863PF/NF-E	V5.2.0 build 140721	1280*960	v	v
	DS-2CD864FWD-E	V5.2.0 build 140721	1280*720	v	v
	DS-2CD876MF/BF-E	V4.0.3 build120913	1600*1200	v	v
	DS-2CD877BF	V4.0.3 build120913	1920*1080	v	v
	DS-2CD886MF-E	V4.0.3 build 120913	2560*1920	v	v

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	DS-2CD966(B)	V3.1 build 120423	1360*1024	×	×
	DS-2CD966-V(B)	V3.1 build 120423	1360*1024	×	×
	DS-2CD976(C)	V3.1 build 120423	1600*1200	×	×
	DS-2CD976-V(C)	V3.1 build 120423	1600*1200	×	×
	DS-2CD977(C)	V3.1 build 120423	1920*1080	×	×
	DS-2CD986A(C)	V3.1 build 120423	2448*2048	×	×
	DS-2CD986C (B)	V2.3.6 build 120401	2560*1920	×	×
	DS-2CD9122	V3.7.1 build140417	1920*1080	V	×
	DS-2CD9152	V3.7.1 build140417	2560*1920	V	×
	iDS-2CD9152	V3.7.1 build140417	2560*1920	V	×
	DS-2CD9122-H	V3.7.1 build140417	1920*1080	V	×
	DS-2CD9182-H	V3.8.1 build140815	3296*2472	v	×
	DS-2CD9121	V3.7.1 build140417	1600*1200	v	×
	iDS-2CD9121	V3.7.1 build140417	1600*1200	٧	×
	DS-2CD9131	V4.0.0 build150213	2048*1536	٧	×
	iDS-2CD9131	V4.0.0 build150213	2048*1536	V	×
	DS-2CD9121A	V3.8.2 build141121	1600*1200	٧	×
HD	iDS-2CD9121A	V3.8.2 build141121	1600*1200	V	×
Network	DS-2CD9111(B)	V3.7.1 build140417	1360*1024	V	×
Camera	DS-2CD9151A	V3.8.2 build141121	2448*2048	v	×
	DS-2CD9152-H	V3.8.2 build141121	2592*2048	V	×
	iDS-2CD9282	V3.8.2 build141121	3296*2472	V	×
	DS-2CD9131-K	V4.0.0 build150213	2048*1536	V	V
	DS-2CD9152-HK	V3.8.2 build141121	2592*2048	v	V
	iDS-2CD9131-E	V3.8.2 build141121	2048*1536	V	×
	iDS-2CD9151A-E	V3.8.2 build141121	2448*2048	V	×
	iDS-2CD9151A	V3.8.2 build141121	2448*2048	V	×
	iDS-2CD9152-EH	V3.8.2 build141121	2592*2048	V	×
	iDS-2CD9152-H	V3.8.2 build141121	2592*2048	V	×
	DS-2CD9120-H	V3.7.1 build140417	1600*1200	V	×

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	iDS-2CD9361	V4.0.0 build150213	2752*2208	v	×
	iDS-2CD9022	V4.0.0 build150213	1920*1080	v	v
	iDS-2CD9025	V3.8.2 build141114	1920*1080	v	×
	iDS-2CD9022-SZ	V4.0.0 build150213	1920*1080	v	×
	DS-2CD9125-KS	V3.8.1 build150113	1920*1080	v	×
	DS-6501HCI	V1.0.1 build130607	352*288	V	v
	DS-6501HCI-SATA	V1.0.1 build130607	352*288	v	v
	DS-6501HFI	V1.0.1 build130607	704*576	v	v
	DS-6501HFI- SATA	V1.0.1 build130607	704*576	v	v
	DS-6502HCI	V1.0.1 build130607	352*288	v	v
	DS-6502HCI- SATA	V1.0.1 build130607	352*288	v	v
	DS-6502HFI	V1.0.1 build130607	704*576	v	v
	DS-6502HFI- SATA	V1.0.1 build130607	704*576	v	v
	DS-6504HCI	V1.0.1 build130607	352*288	v	v
	DS-6504HCI- SATA	V1.0.1 build130607	352*288	v	v
	DS-6504HFI	V1.0.1 build130607	704*576	V	V
	DS-6504HFI- SATA	V1.0.1 build130607	704*576	v	v
SD Encoder	DS-6508HCI	V1.0.1 build130607	352*288	V	V
2	DS-6508HCI- SATA	V1.0.1 build130607	352*288	v	v
	DS-6508HFI	V1.0.1 build130607	704*576	V	V
	DS-6508HFI- SATA	V1.0.1 build130607	704*576	V	V
	DS-6516HCI	V1.0.1 build130607	352*288	v	v
	DS-6516HCI- SATA	V1.0.1 build130607	352*288	v	v
	DS-6516HFI	V1.0.1 build130607	704*576	v	v
	DS-6516HFI- SATA	V1.0.1 build130607	704*576	v	v
	DS-6601HCI	V1.2.1 build131202	352*288	V	v
	DS-6602HCI	V1.2.1 build131202	352*288	V	v
	DS-6604HCI	V1.2.1 build131202	352*288	V	v
	DS-6601HFI(-SATA)	V1.2.1 build131202	704*576	V	v
	DS-6602HFI(SATA)	V1.2.1 build131202	704*576	v	v

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	DS-6604HFI(-SATA)	V1.2.1 build131202	704*576	v	v
	DS-6701HWI	V1.2.3 build141202	960*576	v	v
	DS-6701HWI-SATA	V1.2.3 build141202	960*576	V	v
	DS-6704HWI	V1.2.3 build141202	960*576	V	V
	DS-6704HWI-SATA	V1.2.3 build141202	960*576	V	V
	DS-6708HWI	V1.2.3 build141202	960*576	V	v
	DS-6708HWI-SATA	V1.2.3 build141202	960*576	V	v
	DS-6716HWI	V1.2.3 build141202	960*576	V	v
	DS-6716HWI-SATA	V1.2.3 build141202	960*576	V	V
HD	DS-6601HFHI	V1.1.0 build150123	1920*1080	V	V
Encoder	DS-6601HFHI/L	V1.1.0 build150123	1920*1080	V	V
	DS-2DF7274-A/D/AF	V5.2.8 build150124	1280*960	V	V
	iDS-2DF7274-A/D/AF	V5.2.8 build150124	1280*960	V	V
	DS-2DM7274-A	V5.2.8 build150124	1280*960	V	v
	DS-2DF5274-A/D/A3/D3/AF/ A3F	V5.2.8 build150124	1280*960	V	v
	iDS-2DF5274-A/D/A3/D3/AF /A3F	V5.2.8 build150124	1280*960	V	v
	DS-2DM5274-A/A3	V5.2.8 build150124	1280*960	V	V
	DS-2DF7276-A/D/AF	V5.2.8 build150124	1280*960	V	V
	iDS-2DF7276-A/D/AF	V5.2.8 build150124	1280*960	V	V
Network Speed Dome	DS-2DF5276-A/D/A3/D3/AF/ A3F	V5.2.8 build150124	1280*960	V	V
	iDS-2DF5276-A/D/A3/D3/AF /A3F	V5.2.8 build150124	1280*960	V	V
	DS-2DF7274-AH/DH/AFH	V5.2.8 build150124	1280*960	V	V
	iDS-2DF7274-AH/DH/AFH	V5.2.8 build150124	1280*960	V	V
	DS-2DF5274-AH/DH/A3H/D3 H/AFH/A3FH	V5.2.8 build150124	1280*960	V	V
	iDS-2DF5274-AH/DH/A3H/D 3H/AFH/A3FH	V5.2.8 build150124	1280*960	v	V
	DS-2DF7276-AH/DH/AFH	V5.2.8 build150124	1280*960	V	V
	iDS-2DF7276-AH/DH/AFH	V5.2.8 build150124	1280*960	V	V

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	DS-2DF5276-AH/DH/A3H/D3 H/AFH/A3FH	V5.2.8 build150124	1280*960	v	v
	iDS-2DF5276-AH/DH/A3H/D 3H/AFH/A3FH	V5.2.8 build150124	1280*960	v	v
	DS_2DF7130I5-AW	V5.2.8 build150124	1280*960	٧	٧
	DS-2DF7285-AH	V5.2.8 build150124	1920*1080	v	V
	DS-2DF5285-AH	V5.2.8 build150124	1920*1080	v	V
	DS-2DF7294-A/D/AF	V5.2.8 build150124	2048*1536	v	V
	iDS-2DF7294-A/D/AF	V5.2.8 build150124	2048*1536	v	V
	DS-2DF5294-A/D/A3/D3/AF/ A3F	V5.2.8 build150124	2048*1536	v	v
	iDS-2DF5294-A/D/A3/D3/AF /A3F	V5.2.8 build150124	2048*1536	v	v
	DS-2DF7296-A/D/AF	V5.2.8 build150124	2048*1536	٧	٧
	iDS-2DF7296-A/D/AF	V5.2.8 build150124	2048*1536	v	V
	DS-2DF5296-A/D/A3/D3/AF/ A3F	V5.2.8 build150124	2048*1536	v	v
	iDS-2DF5296-A/D/A3/D3/AF /A3F	V5.2.8 build150124	2048*1536	v	v
	DS-2DF6223-A	V5.2.8 build150124	1920*1080	V	V
	iDS-2DF6223-A	V5.2.8 build150124	1920*1080	٧	٧
	DS-2DF8223i-A	V5.2.8 build150124	1920*1080	٧	٧
	iDS-2DF8223i-A	V5.2.8 build150124	1920*1080	V	٧
	DS-2DF7284-A/D/AF	V5.2.8 build150124	1920*1080	v	V
	iDS-2DF7284-A/D/AF	V5.2.8 build150124	1920*1080	٧	٧
	DS-2DF7286-A/D/AF	V5.2.8 build150124	1920*1080	٧	٧
	iDS-2DF7286-A/D/AF	V5.2.8 build150124	1920*1080	V	v
	DS-2DF5284-A/D/A3/D3/AF/ A3F	V5.2.8 build150124	1920*1080	v	v
	iDS-2DF5284-A/D/A3/D3/AF /A3F	V5.2.8 build150124	1920*1080	v	v
	DS-2DF5286-A/D/A3/D3/AF/ A3F	V5.2.8 build150124	1920*1080	v	v

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	iDS-2DF5286-A/D/A3/D3/AF /A3F	V5.2.8 build150124	1920*1080	v	v
	DS_2DF7230I5-AW	V5.2.8 build150124	1920*1080	V	٧
	DS-2AF7220-A/D	V5.2.8 build150124	1920*1080	v	v
	DS-2AF7230-A/D	V5.2.8 build150124	1920*1080	V	V
	DS-2AF5220-A/D	V5.2.8 build150124	1920*1080	V	v
	DS-2AF5230-A/D	V5.2.8 build150124	1920*1080	v	v
	iDS-2DF5220S-D4/JY	V5.2.8 build150124	1920*1080	v	v
	DS-2DF7268-A	V5.2.8 build150124	704*576	V	V
	DS-2DF5268-A	V5.2.8 build150124	704*576	v	v
	DS-2DF7264-A	V5.2.8 build150124	704*576	v	v
	DS-2DF5264-A	V5.2.8 build150124	704*576	V	V
	DS-2DE5172-A/A3	V5.2.10 build150128	1280*960	V	v
	DS-2DE5174-A/AE/AE3/A3/D /D3	V5.2.10 build150128	1280*960	v	v
	DS-2DE5176-A/AE	V5.2.10 build150128	1280*960	v	v
	DS-2DE7172-A	V5.2.10 build150128	1280*960	V	v
	DS-2DE7174-A/AE/D	V5.2.10 build150128	1280*960	V	v
	DS-2DE7176-A/AE	V5.2.10 build150128	1280*960	v	v
	DS-2DE7120i-A/AE	V5.2.10 build150128	1280*960	V	V
	DS-2DM7130i-A	V5.2.10 build150128	1280*960	V	v
	DS-2DM4120-A	V5.2.10 build150128	1280*960	V	V
	DS-2DE5120I-A	V5.2.10 build150128	1280*960	V	V
	DS-2DM5120-A	V5.2.10 build150128	1280*960	v	v
	DS-2DM5130-A	V5.2.10 build150128	1280*960	v	v
	DS-2DE2103-DE3/W	V5.2.10 build150128	1280*960	V	v
	DS-2DE2103I-DE3/W	V5.2.10 build150128	1280*960	V	v
	DS-2DE7184-A/AE/D	V5.2.10 build150128	1920*1080	V	v
	DS-2DE5182-A/A3	V5.2.10 build150128	1920*1080	V	v
	DS-2DE5184-A/AE/AE3/A3/D /D3	V5.2.10 build150128	1920*1080	v	v

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	DS-2DE5186-A/AE	V5.2.10 build150128	1920*1080	√	√
	DS-2DE7182-A	V5.2.10 build150128	1920*1080	√	V
	DS-2DE4582-A	V5.2.10 build150128	1920*1080	V	V
	DS-2DE4220-A	V5.2.10 build150128	1920*1080	v	V
	DS-2DE4182-A	V5.2.10 build150128	1920*1080	v	v
	DS-2DM7230i-A	V5.2.10 build150128	1920*1080	v	v
	DS-2DM7220i-A	V5.2.10 build150128	1920*1080	v	v
	DS-2DE7186-A/AE	V5.2.10 build150128	1920*1080	V	V
	DS-2DE5220I-A	V5.2.10 build150128	1920*1080	V	V
	DS-2DM5220-A	V5.2.10 build150128	1920*1080	V	V
	DS-2DM5230-A	V5.2.10 build150128	1920*1080	V	V
	DS-2DE2202-DE3/W	V5.2.10 build150128	1920*1080	V	V
	DS-2DE2202I-DE3/W	V5.2.10 build150128	1920*1080	v	v
	DS-2DE4572-A	V5.2.10 build150128	1280*720	v	v
	DS-2DE4172-A	V5.2.10 build150128	1280*720	v	v
	DS-2DE7194-A/A3	V5.2.10 build150128	2048*1536	v	v
	DS-2DE5194-A/A3	V5.2.10 build150128	2048*1536	v	v
	DS-2DF1-518	V3.2.0 build131223	704*576	V	V
	DS-2DM1-718	V3.2.0 build131223	704*576	V	V
	DS-2DM1-518	V3.2.0 build131223	704*576	V	V
	DS-2DF1-718	V3.2.0 build131223	704*576	V	V
	DS-2DF1-514	V3.2.0 build131223	704*576	٧	V
	DS-2DF1-714	V3.2.0 build131223	704*576	V	V
	DS-2DY9174-A	V5.2.8 build150124	1280*960	V	V
	DS-2DY9176-A	V5.2.8 build150124	1280*960	V	V
	DS-2DY9194-A	V5.2.8 build150124	2048*1536	V	V
	DS-2DY9196-A	V5.2.8 build150124	2048*1536	V	V
	DS-2DY9184-A	V5.2.8 build150124	1920*1080	V	V
	DS-2DY9186-A	V5.2.8 build150124	1920*1080	V	V
	DS-2DY9185-A	V5.2.8 build150124	1920*1080	V	v

Туре	Model	Version	Max. Resolution	Sub- stream	Audio
	DS-2DY9187-A	V5.2.8 build150124	1920*1080	v	v
	DS-2DF8223IV-A	V5.3.0 build150304	1920*1080	v	v
	DS-2DF8623IV-A	V5.3.0 build150304	3072*1728	v	v
	DS-2DF6623V-A	V5.3.0 build150304	3072*1728	v	v
	DS-2DF8823IV-A	V5.3.0 build150304	4096*2160	v	v
	DS-2ZCN2006	V5.2.7 build141107	1280*960	V	v
	DS-2ZCN2006(B)	V5.2.7 build141107	1280*960	v	v
	DS-2ZCN3006	V5.2.7 build141107	1280*960	v	v
	DS-2ZCN3006(B)	V5.2.7 build141107	1280*960	v	v
	DS-2ZMN2006	V5.2.7 build141107	1280*960	v	v
	DS-2ZMN2006(B)	V5.2.7 build141107	1280*960	V	V
	DS-2ZMN3006	V5.2.7 build141107	1280*960	V	V
	DS-2ZMN3006(B)	V5.2.7 build141107	1280*960	v	v
	DS-2ZCN2007	V5.2.7 build141107	1920*1080	V	V
	DS-2ZCN3007	V5.2.7 build141107	1920*1080	V	V
	DS-2ZCN3007(B)	V5.2.7 build141107	1920*1080	V	V
Network Zoom	DS-2ZMN2007	V5.2.7 build141107	1920*1080	V	V
Camera Module	DS-2ZMN3007	V5.2.7 build141107	1920*1080	V	V
Wodule	DS-2ZMN3007(B)	V5.2.7 build141107	1920*1080	V	V
	DS-2ZMN0407	V5.2.7 build141107	1920*1080	v	v
	DS-2ZMN3207	V5.2.7 build141107	1920*1080	v	v
	DS-2ZMN2008	V5.2.7 build141107	2048*1536	V	V
	DS-2ZCN2008	V5.2.7 build141107	2048*1536	V	٧
	DS-2ZMN3007(S)	V5.2.2 build141113	1920*1080	V	V
	DS-2ZCN3007(S)	V5.2.2 build141113	1920*1080	v	V
	DS-2ZMN2307	V5.2.2 build141113	1920*1080	V	V
	DS-2CN2307	V5.2.2 build141113	1920*1080	v	V
	DS-2ZMN2309	V5.2.2 build141113	3072*2048	v	V
	DS-2ZCN2309	V5.2.2 build141113	3072*2048	v	v

18.5.2 List of Third-party IP Cameras



ONVIF compatibility refers to the camera can be supported both when it uses the ONVIF protocol and its private protocols. **Only ONVIF is supported** refers to the camera can only be supported when it uses the ONVIF protocol. **Only AXIS is supported** refers to the function can only be supported when it uses the AXIS protocol.

IP Camera Manufacturer or Protocol	Model	Version	Max. Resolution	Sub- stream	Audio
	ACM3401-09L-X-002 27	A1D-220-V3.13.16-AC	1208*1024	×	×
ACTi	TCM4301-10D-X-00 083	A1D-310-V4.12.09-AC	1208*1024	×	v
	TCM5311-11D-X-00 023	A1D-310-V4.12.09-AC	1208*960	×	v
	AV1305 M	65175	1208*1024	v	×
Arecent	AV2815	65220	1920*1080	V	×
Arecont	AV3105M	65175	1920*1080	V	×
	AV8185DN	65172	1600*1200	×	×
	M1114	5.09.1	1024*640	v	×
	M3011(ONVIF compatibility)	5.21	640*480 (704*576)	√ (×)	×
	M3014(ONVIF compatibility)	5.21.1	1280*800	v	×
	P1346	5.40.9.2	2048*1536	v	v
Axis	P3301(ONVIF compatibility)	5.11.2	640*480 (768*576)	v	√ (×)
	P3304(ONVIF compatibility)	5.20	1280*800 (1440*900)	v	√ (×)
	P3343(ONVIF compatibility)	5.20.1	800*600	v	√ (×)
	P3344(ONVIF compatibility)	5.20.1	1280*800 (1440*900)	v	√ (×)
	P5532	5.15	720*576	V	×
	Q7404	5.02	720*576	V	V
	AutoDome Jr 800 HD (ONVIF compatibility)	39500450	1920*1080	×	√ (×)
Bosch	Dinion NBN-921-P (ONVIF compatibility)	10500453	1280*720	×	√ (×)

Network Video Recorder User Manual

	NBC 265 P (ONVIF compatibility)	07500452	1280*720	×	√ (×)
Brickcom	CB-500Ap(Brickcom- 50xA) (ONVIF compatibility)	v3.2.1.3	1920*1080	×	√ (×)
	VB-H410(ONVIF compatibility)	Ver.+1.0.0	1920*1080 (1280*960)	×	v
	VB-S9000F	Ver. 1.0.0	1920*1080	×	×
Canon	VB-S300D	Ver. 1.0.0	1920*1080	×	×
	VB-H6100D	Ver. 1.0.0	1920*1080	×	×
	VB-H7100F	Ver. 1.0.0	1920*1080	×	V
	VB-S8000	Ver. 1.0.0	1920*1080	×	×
Panasonic	SP306H (ONVIF compatibility)	Application:1.34 Image data:1.06	1280*960	√ (×)	v
	SF336H	Application:1.06 Image data: 1.06	1280*960	v	v
	D5118 (ONVIF compatibility)	1.8.2-20120327-2.93 10-A1.7852	1280*960	V	×
Pelco	IX30DN-ACFZHB3 (ONVIF compatibility)	1.8.2-20120327-2.90 80-A1.7852	2048*1536	V	×
	IXE20DN-AAXVUU2 (ONVIF compatibility)	1.8.2-20120327-2.90 81-A1.7852	1920*1080	V	×
	2300P(with lens)	2.03-02 (110318-00)	1920*1080	×	×
Sanyo	2500P(with lens)	2.02-02 (110208-00)	1920*1080	×	V
	4600P	2.03-02 (110315-00)	1920*1080	×	v
	SNC-CH220	1.50.00	1920*1080	×	×
SONY	SNCDH220T (ONVIF only)	1.50.00	2048*1536	×	×
	SNC-EP580 (ONVIF compatibility)	1.53.00	1920*1080	V	V

Network Video Recorder User Manual

	SNC-RH124 (ONVIF compatibility)	1.79.00	1280*720	v	v
SUMSUNG	SND-5080 (ONVIF compatibility)	3.10_130416	1280*1024	V	v
	IP7133	0203a	640*480	×	×
	FD8134 (ONVIF compatibility)	0107a	1280*800	×	×
Vivotek	IP8161 (ONVIF compatibility)	0104a	1600*1200	×	√ (×)
	IP8331 (ONVIF compatibility)	0102a	640*480	×	×
	IP8332 (ONVIF compatibility)	0105b	1280*800	×	×
	D5110 (ONVIF compatibility)	MG.1.6.03P8	1280*1024	√ (×)	×
	F3106 (ONVIF compatibility)	M2.1.6.03P8	1280*1024	√ (×)	v
Zavio	F3110 (ONVIF compatibility)	M2.1.6.01	1280*720	√ (×)	v
	F3206 (ONVIF compatibility)	MG.1.6.02c045	1920*1080	√ (×)	v
	F531E (ONVIF compatibility)	LM.1.6.18P10	640*480	√ (×)	v

18.5.3 List of IP Cameras Connected to PoE by Long Network Cable (100 - 300 m)

Index	Model
1	DS-2CD4665F-IZHS
2	DS-2CD4026FWD-AP
3	DS-2CD4A35FWD-IZHS
4	DS-2CD2642FWD-IZS
5	DS-2CD2F42FWD-IWS
6	DS-2CD2942F-IWS
7	DS-2CD2510F
8	DS-2CD2342WD-I
9	DS-2CD2322WD-I
10	DS-2CD2352-I
11	DS-2CD2642FWD-IZS
12	DS-2CD2642FWD-I
13	DS-2CD2642FWD-IS
14	DS-2CD2642FWD-IZ
15	DS-2CD2742FWD-IZS
16	DS-2CD2742FWD-I
17	DS-2CD2742FWD-IS
18	DS-2CD2742FWD-IZ
19	DS-2CD2T42WD-18
20	DS-2CD2T42WD-15

030492170208

