

(Setracker) watch Quick Start Guide

Please read the instruction manual carefully before you use it so that the correct installation and don't use can be made!

1. Preparation before using

- 1) Check all the accessories if they are complete

- 2) Choose the Nano-Nano-SIM card which match to the GSM network. You can refer to operators of the dealer. (Please refer before you insert the Nano-SIM card)

- 3) The Nano-SIM card need to open the GPS function and call screening function

- 4) Install the APP on the phone you can ask the dealer if you don't know how to download it.

- 5) The SAR code and QR code is used to register user.

2. Product functions:

1. Its location	Game
Phone book	Camera
Talk-back	photo album
Forecast	Theme
Watch alarm clock	Stopwatch
Safe area	Self-timing
SCS emergency alarm	
Low power alarm	
Remote tracking	
Lighting	

3. Watch introduction

part of the button function. Waterproof performance. This product reaches the protection grade of IP67.

reset: reset after the need to power,

the light switch: continuous short press two times, open the lighting, and then press the button once, turn off the lighting

4. Parts of the screen display and instruction



4.1 Class mode: app, which can be set to prevent disturbing the end of time, the period of time watch lock screen, prohibit the use of its related calls

4.2 Dial-up: dial-up function by app inside the mobile phone mode, that is, dial switch control, switch open, the watch can make calls independently, after closing, you can only dial the phone inside the phone

4.3 Change theme: watches have two kinds of these colors can be selected, customers can choose

4.4 Device information: there are app download two-dimensional code, registration code and watch ID number

5. Operate instruction for the Android or IOS
5.1. APP registration! Note: Please choose the right language and region before register)

You need to register on the APP before you log in. Scanning or enter the 15 letters register code by hand to register. The register code is unique, can not be registered again. You need to ask the distributor to revert the ID No. or register code if it was registered before. Log in by enter 4-16 numbers or letters, your account ID need to be unique, or you need to change the account ID to register again. You can enter the other information automatically and the password is changeable. To retrieve the password, you need the register code and the phone No. used for registration and log in. The registration page is as below:

Fig.1 refer to the main display.



5.2 Main menu functions introduction:

1. Main manual introduction
When finished the registration, enter the right account and password to log in at the log in page and then enter the main page. The main page is as below:



Fig.2 refer to the main display

Instructions of part of the functions:

Voice Chat: Voice record can be sent between the Watch and APP

APP send voice, Voice record start. APP begin to record then send to the watch, the max. time is 15 seconds. Short press Power on key to play the voice in the watch.

Map: View the Watch real-time location.

The watch and APP mobile phone location can show on the map. Click 'Locate' to start to locate 3 minutes, the upload interval is 10 seconds, 3 minutes later back to the default mode. On the map you can know the watch locate method, the RED locate icon means GPS, and blue means LBS.

Setting: set all parameters of the watch.



5.2 How to set the watch

Set SOS Numbers: 3 numbers can be set. Press SOS key 3 seconds to arm a emergency, the watch can be 3 numbers arm automatically. Watch 3 turns to end.

Monitoring: From APP for the watch so, the watch can not hear the mobile phone, but the mobile phone can hear the sound around the watch.

Anti-theft period: In the 3 period, no calls in. SMS alarm setting: three on-off, which are low power, SOS and taking off watch. The number set in the APP receiving the SMS, the call is same with normal SMS, this number is also the monitoring number by default.

Phone book: Max 10 phone numbers setting. The watch can dial the 10 phone numbers and also can answer calls from them.

Recover default working mode: Default working mode: GPS or for 24 hours. The update interval is 10 minutes.

Remote turn off: It can not press "OFF" key to turn off the watch once it start to work. Remote turn-off only by APP.

Safe area: the fence is 500m minimum. It will send alert SMS when outside the fence.

(Remarks: the watch can send the alert SMS in GPS locating mode, but it can not send alert SMS in LBS locating mode.)

Red heart award: Choose the number of the red hearts, click to send to the watch, the red heart and the numbers will display on the screen.

Alarm clock: 3 alarm clocks are available and you can set the alarm clock on your way.

Seek the watch: Click it, the watch will ring for 1 minute so that you can find it. Press any key to stop it. Other function instructions will be found in "MINE" and "HELP" menu.

2. "Mine" menu: If the account is the administrator, then can see all the assistant administrator list, also have the right to delete the assistant administrator.

Personal Data: can edit the account information Kid's information: can edit kid's information Device list: Can check the watch ID, if this ID is not the same as the ID on the Sticker, the watch can not connect to the APP.

Change Password: Can change the account log in password.

5.3 Explanation of the watch alarming.

The phone will receive all alarming reminders after the watch alarming. Click the "alarm" button to enter into the APP main menu then you can see the detailed alarming information in the message center.

6. Explanation of the watch working mode:

There are 3 basic working modes: normal mode, power saving mode and follow-up mode, different working mode with different updating interval: normal mode: updating interval is 10 minutes; power saving mode: updating interval is 1 hour; follow-up mode: updating interval is 1 minutes.

7. Watch related

7.1 Watch SOS

Long press SOS key/button 2) for 3s, it will display SOS on screen. Watch will be on alert state. Long dialing 3 SOS numbers for two turns, it will stop when call answered. If not, it will continue for two turns. Watch can send message to monitor number (default "off"), at the same time send alert message to APP.

7.2 Low power alert

The watch battery appear in percentage. When under 20%, it will send alert message to monitor number (default "off"). At the same time sent alert notification to APP.

7.3 Taking off alert

It won't send alert message when taking off watch unless wearing for at least 3 minutes.

The watch send alert message to monitor number/default "off", at the same time send alert notification to APP, and watch taking off symbol appear on the APP.

7.4 Voice chat

Click the talk, then can chat with APP.

7.5 Voice monitor

The watch need to set monitor number firstly. When give voice monitor order, dial the monitor number, it is one-way calling.

7.6 Turn OFF

Press OFF key to power off without card, or remote turn off from APP.

7.7 Phone Book

10 phone numbers are available. The phone numbers can dial to watch for two-way calling. Call to enter phone book, then select phone number, finally short touch the number to dial.

8. Trouble shooting

If the watch can not connect with the server at the first use, and the device shows no networking, please check as following:

1). Please check to see if the watch Nano-SIM card is GSX, as this device only support China Mobile card.

2). Check if you have put the Nano-SIM card correct, and the screen display is normal, please

refer to the picture instruction.

3). Please check to see if the IP, Port and ID number is correct, you must make sure that the ID number pasted on the watch is the same as the ID number of the device itself. The user can check the ID number of the device itself by sending the message "pw, 123456, ts@" from your cellphone to the watch (The watch must have a Nano-SIM card inserted and powered on). Please ask the distributor for help if still any problems.

4). There are two situations if you can not register on the APP. a. The ID number do not exist or have already been registered, please contact the distributor for help. b. Your register account name have already been registered, please change to another new account name.

9. QR code scanning entrance



Android and ios can all scan it, after entering it you could choose android or ios APP (QR scan)