Kemei®

Classic web compound razor KM-2024

Before use :

 Please read the manual carefully before the first use. It will be helpful for better performance of the shayer.

Charging-

- The switch must be turned off when charging
- Make if fully charged before use it.
- Turn off the switch, open the waterproof plug at the end of the shaver connecting to the USB cord, and connect the other end to the adapter with output 5V 1000mA.
- The indicator light will be red when charging; and the standard charging time is 8 hours.

Specifications:

Model	USB	power	IP Rating
KM-2024	Output : 5V ***	3W	IPX4

Maintenance for blade and foil:

- Turn off the switch, hold the body with right hand; and the left hand hold the two sides of the head to pull outward.
- Clean it with brush, fig3 and 4.
- To install the head.

Replacement method for foil:

- Turn off the switch.
- Take off the shaver head; and remove the foil from the inside of the head as shown in fig5.
- Install the outer foil, first bend the foil gently as shown in Fig.6, and then put the foil into the head gently from the bottom until it is fixed.

Operation

Please take away the protector and switch to ON position.
Remove your unwanted hair by slightly moving this unit against the skin at right angle.

Maintenance:


 Clean the unit after 2 to 3 times shaving, and then oil it. In this way, the shaver would be better.


Warning:

- Please keep the shaver dry
- Never charge in the area with rated voltage exceeding 240V
 ~, otherwise, it will fail.
- Do not charge continuously for more than 24 hours, and do not charge at temperatures below 0°C or above 40°C.
 Otherwise, the battery life will be shortened.

- Please remove the charger plug before cleaning the shaver under tap water.
- When the shaver is stained, soft cloth can be used to take neutral lotion and wipe. Do not use alcohol or gasoline to wipe.
- When abnormal conditions (such as odor, temperature, sound abnormality) occur during charging or use of the product, the power supply should be cut off immediately and the use of the product should be stopped.

Product schematic diagram:

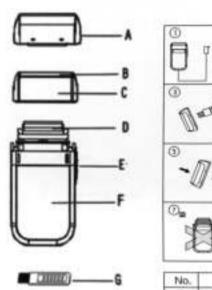

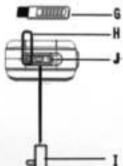

101		
No.	Part name	
A	Protector	
В	Foil	
C	Head	
D	Blade	
E	On/off switch	
E.	Body	
G	Brush	
Н	Waterproof plug	
1	Adapter	
J	Indicator light	